


JD3KR

KammRack

Instructions


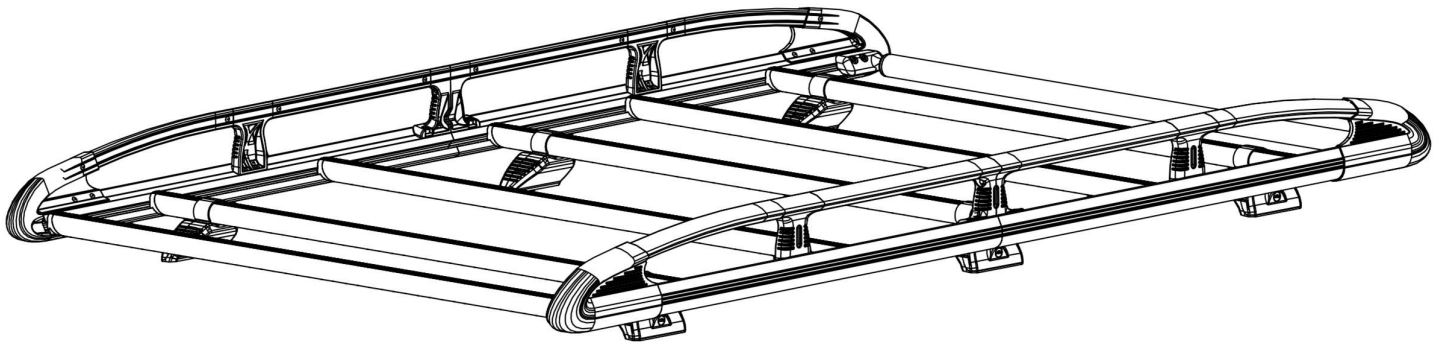


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

JD3KR:


CITROEN Jumper/Dispatch, 2016 –
PEUGEOT Expert, 2016 –
TOYOTA Proace, 2016 –
VAUXHALL Opel Vivaro, 2019 –

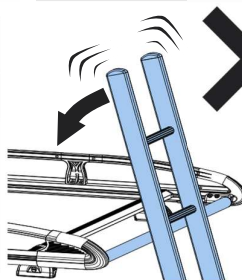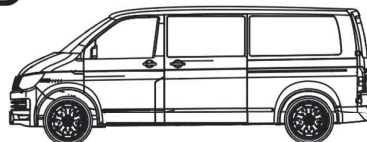


Max
50kg/110lbs

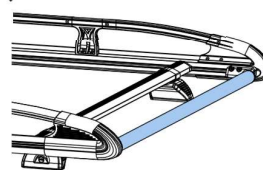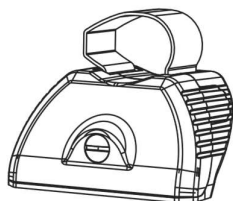**KammRack**


SA397U x 3 ☐

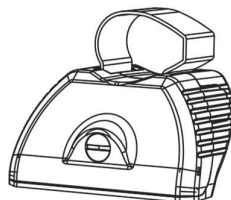

SA398U x 3 ☐

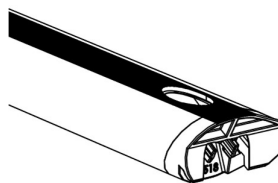


SA428 ☐




C04 x 6
optional upgrade

LHS x 2


RHS x 2





PS519 x 1 ☐

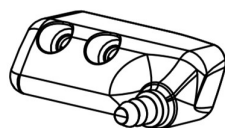


PS520 x 1 ☐

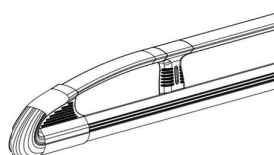

ASF x 1 ☐

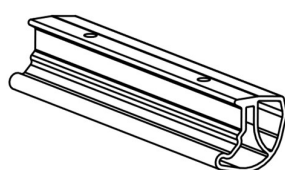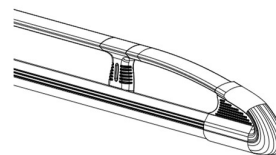


EXT15-02 x 2 ☐

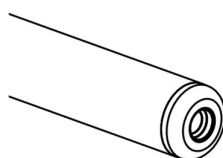


SA436 x 1 ☐


Fitting Kit




PS252 x 2 ☐




PS253 x 2 ☐




PS254L x 1 ☐



PS254R x 1 ☐

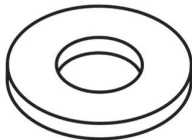


FW001 (M6) x 6 ☐

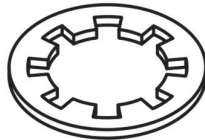


FW008 (M6) x 6 ☐



FN020 (M6) x 6

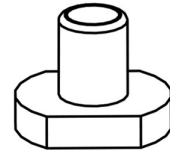

FN085 x 16 ☐



FS042 ☐
(M6 x 40) x 2




FS040 ☐
(M6 x 35) x 2




FS039 ☐
(M6 x 30)
x 2



FS059 ☐
(M8 x 25)
x 16



PS210 x 6 ☐

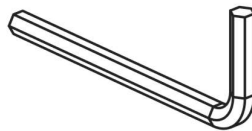


FT01 x 1 ☐





FT05 x 1 ☐


K659- Jumpy/Dispatch/Proace/Expert 2016- Opel Vivaro 2019- L1, H1, Twin Doors

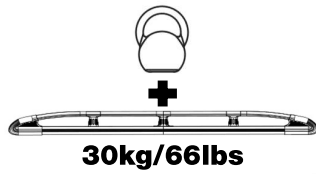



= 150kg Max

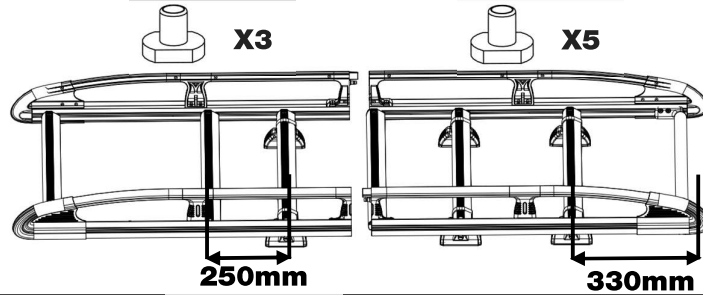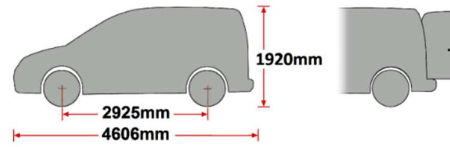


K660- Jumpy/Dispatch/Proace/Expert 2016- Opel Vivaro 2019- L1, H1, Tailgate

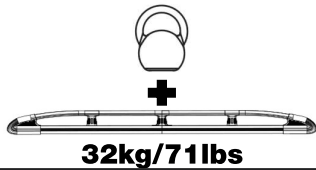


= 150kg Max

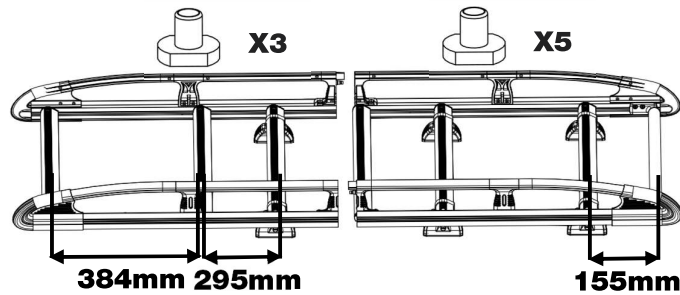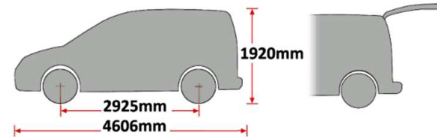


1.

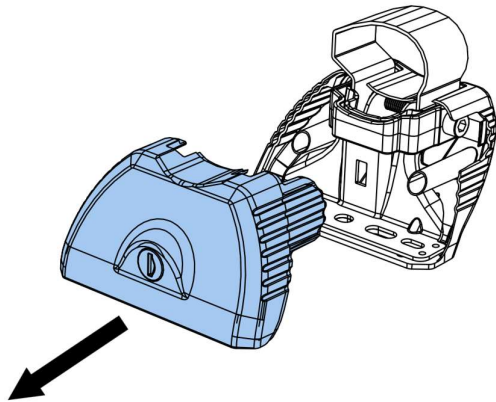


2.

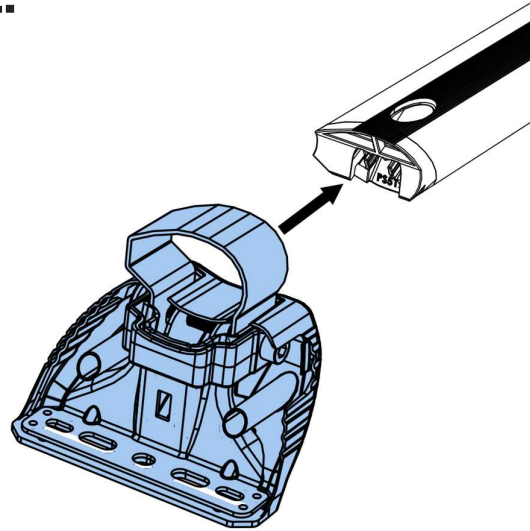


3.

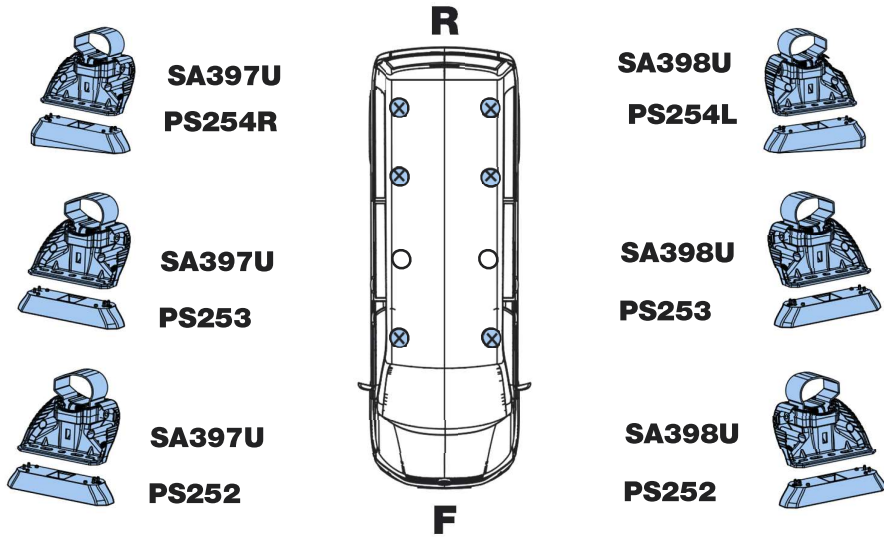


4.

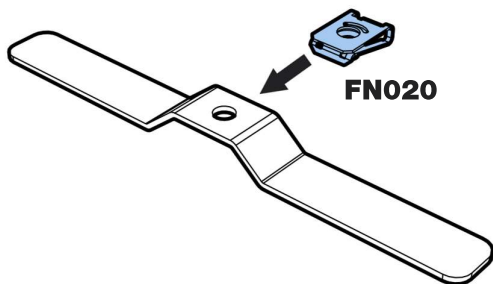


5.

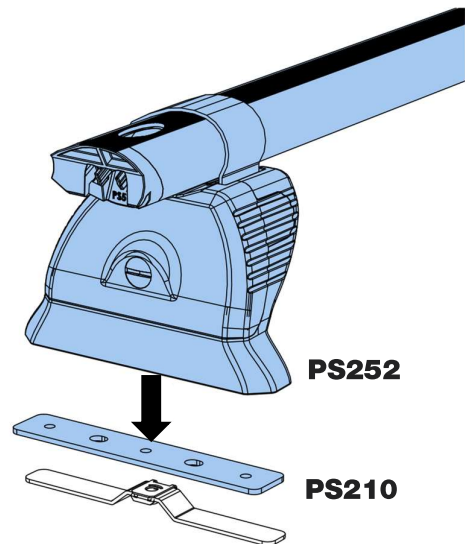


6.

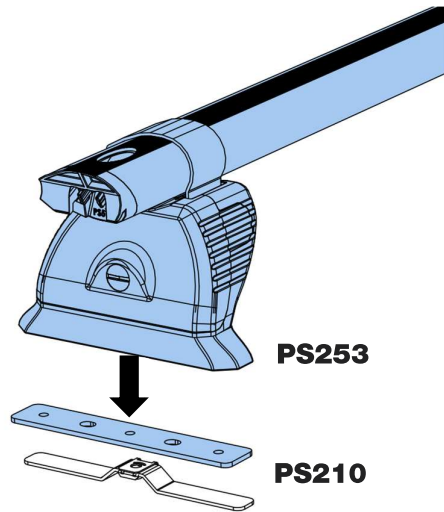


7.

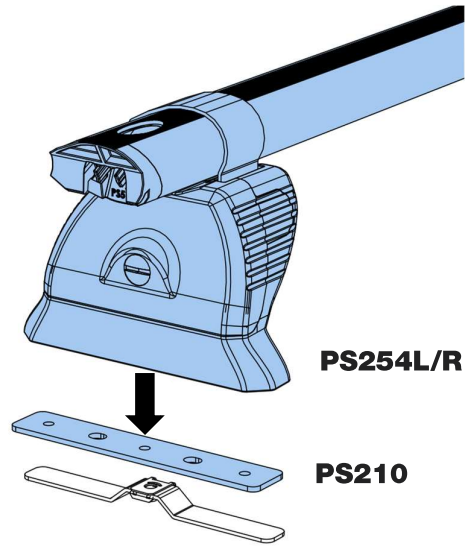


8.

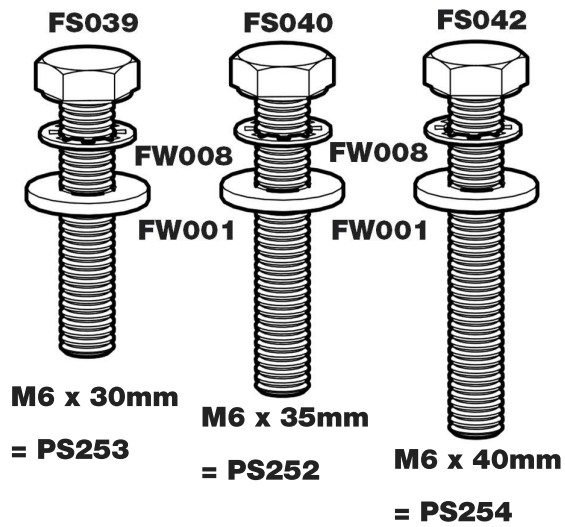


9.


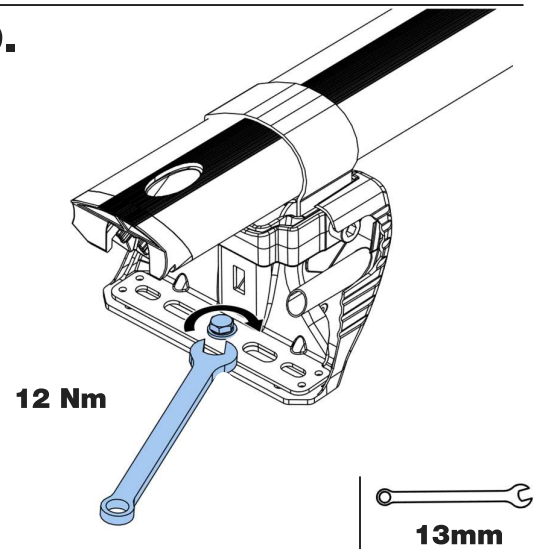








10.

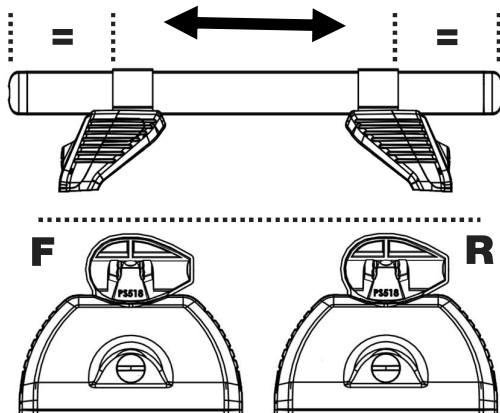


11.

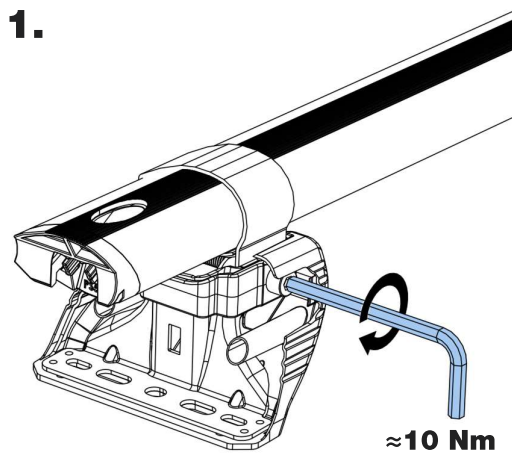

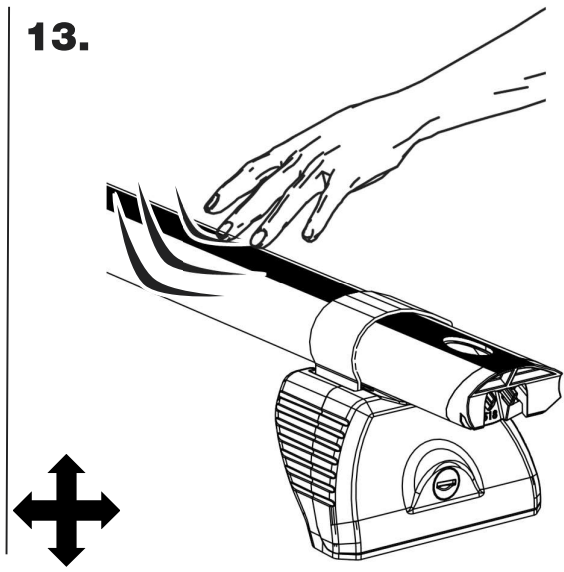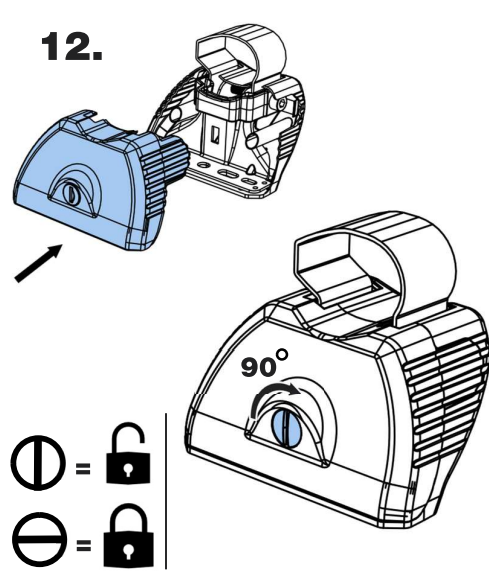


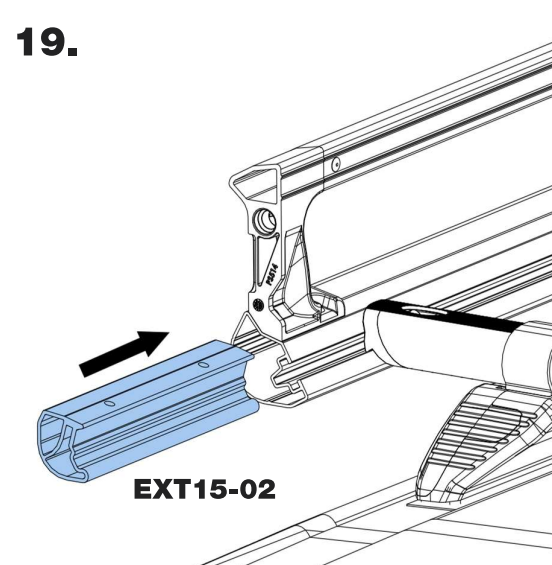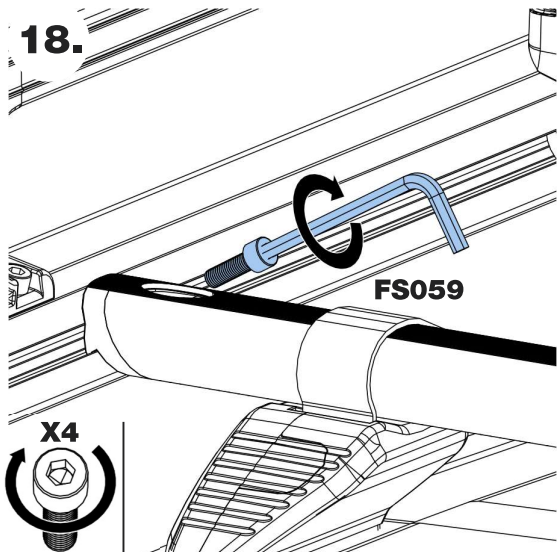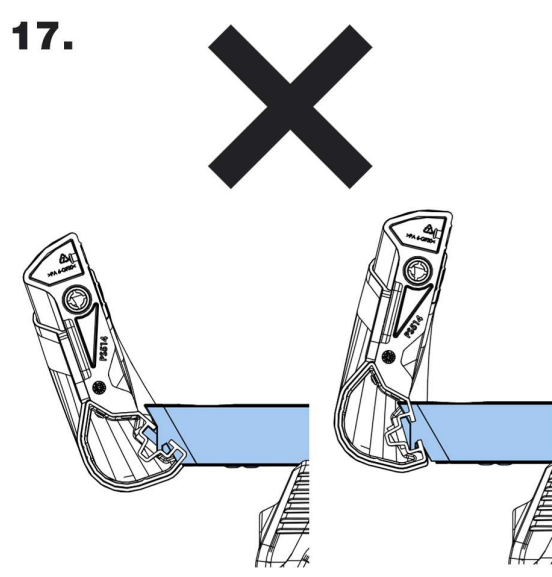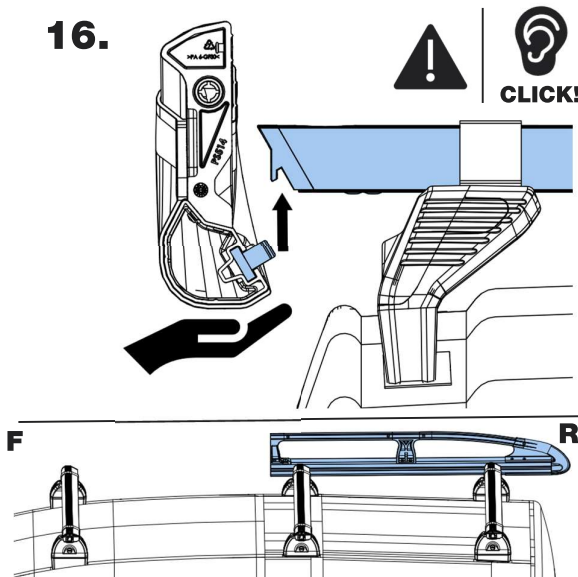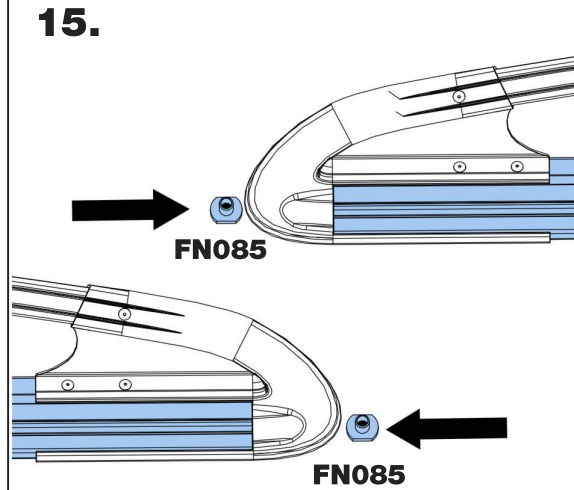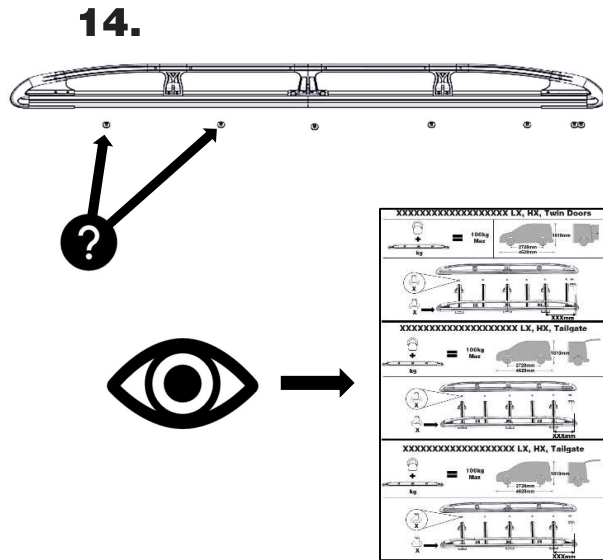


20.

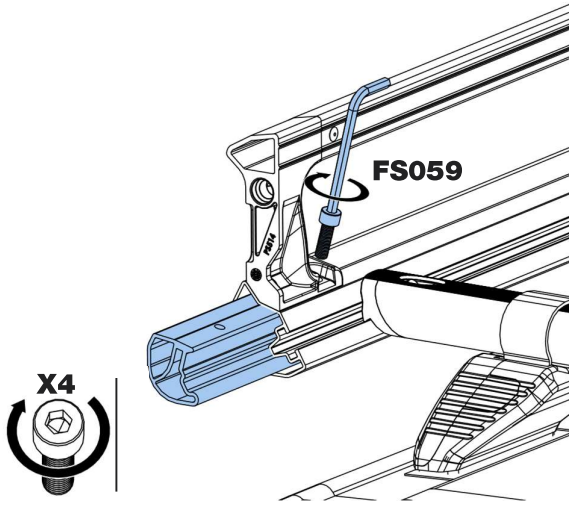


21.

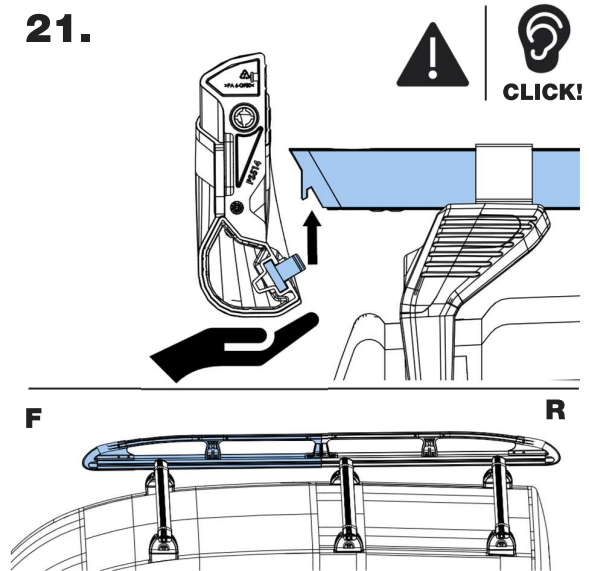


22.

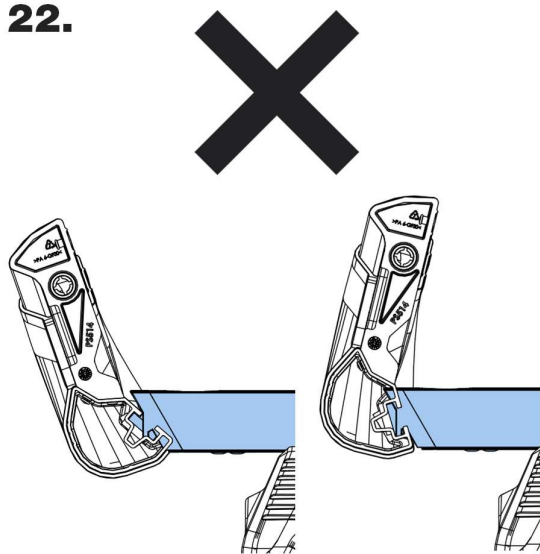


23.

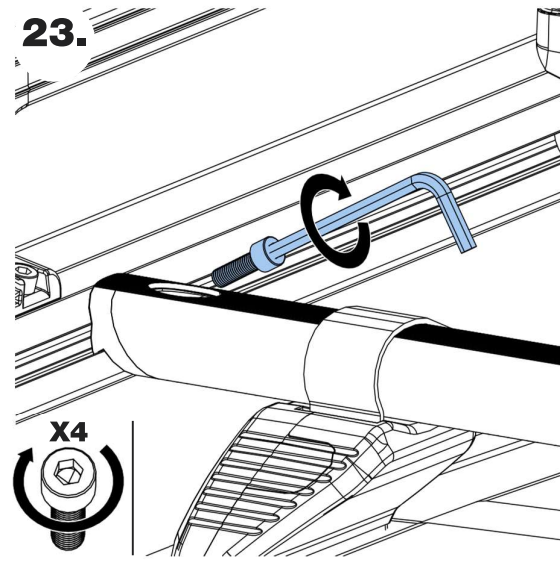


24.

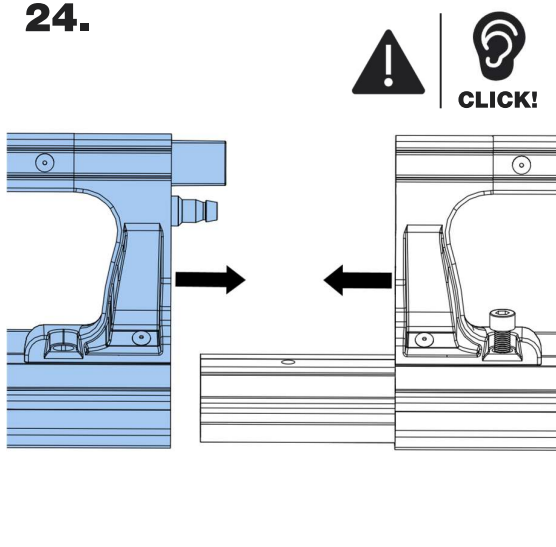


25.

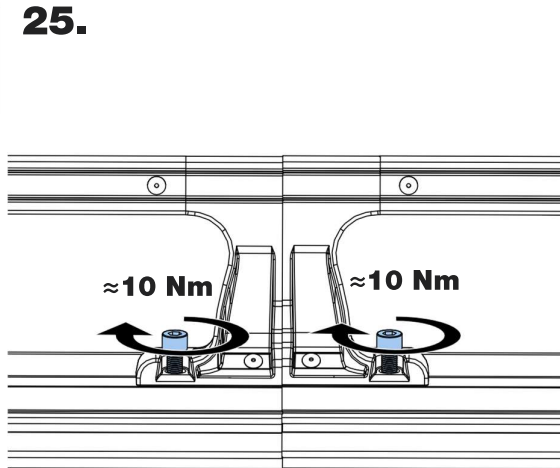


26.

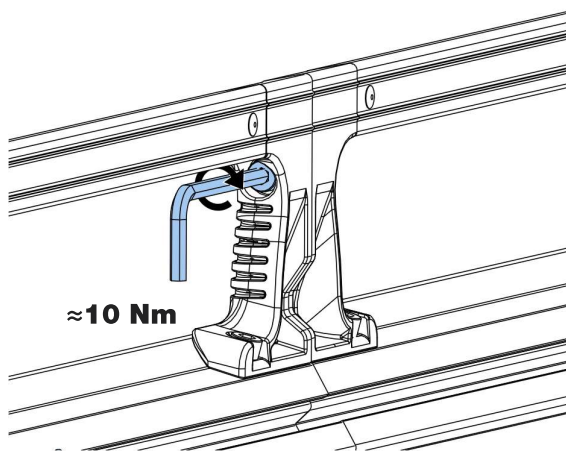


27.

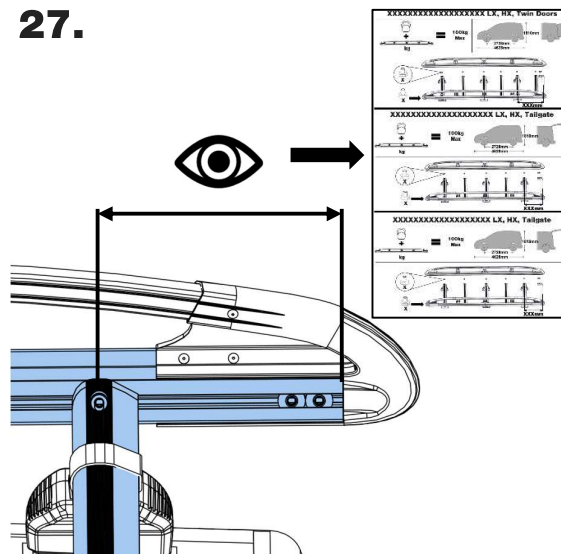


28.

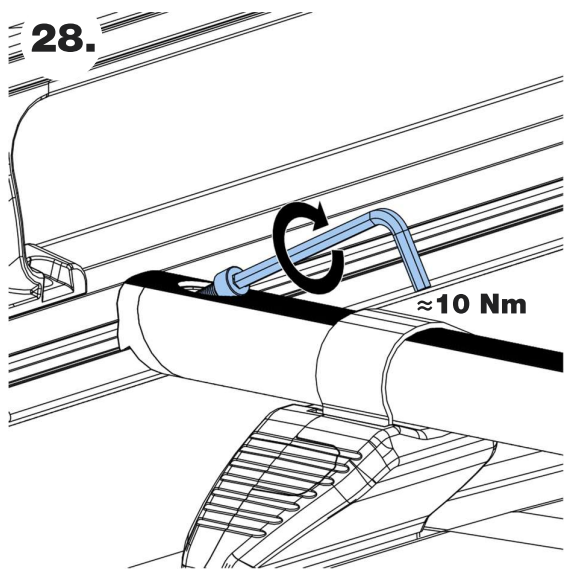


29.

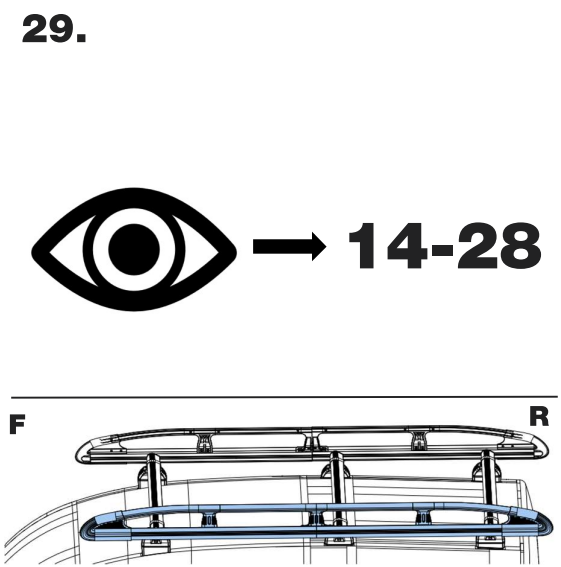


30.

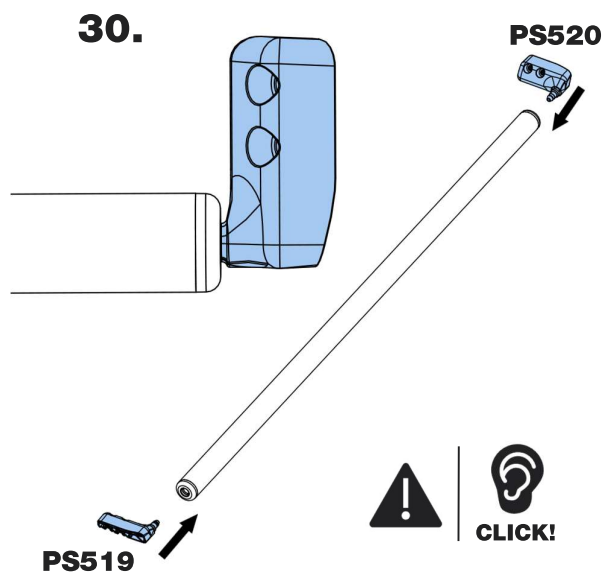


31.

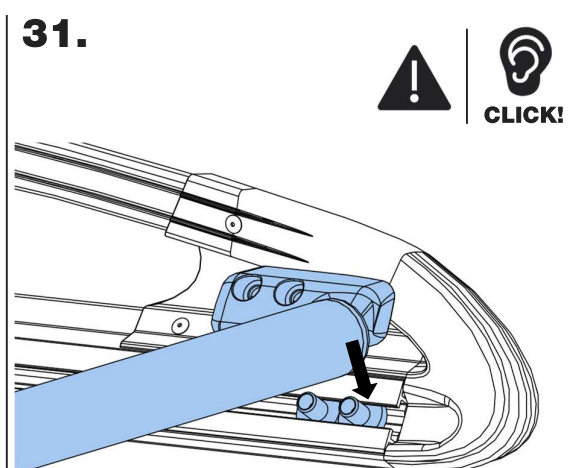


32.

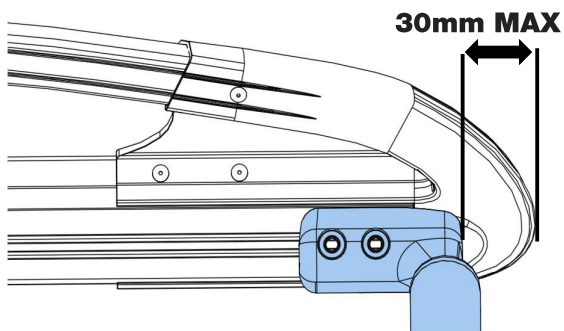


33.

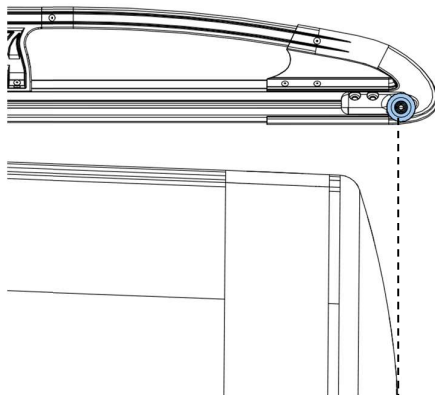


34.

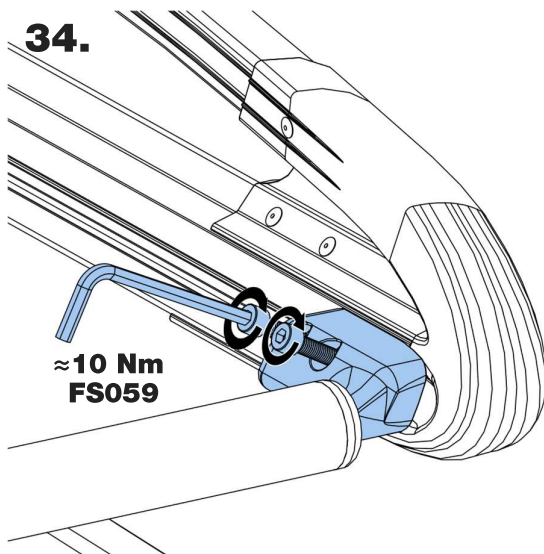


35.

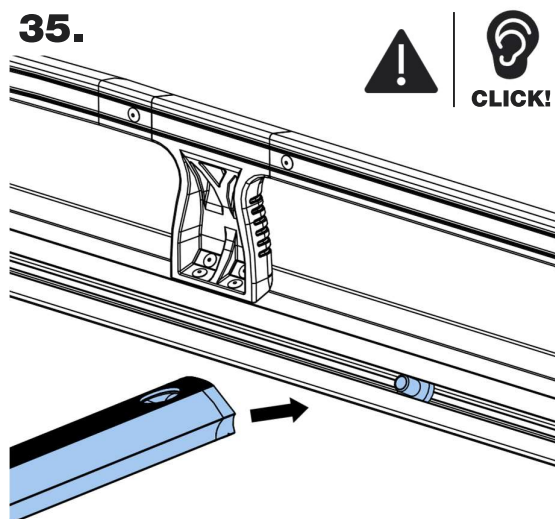


36.

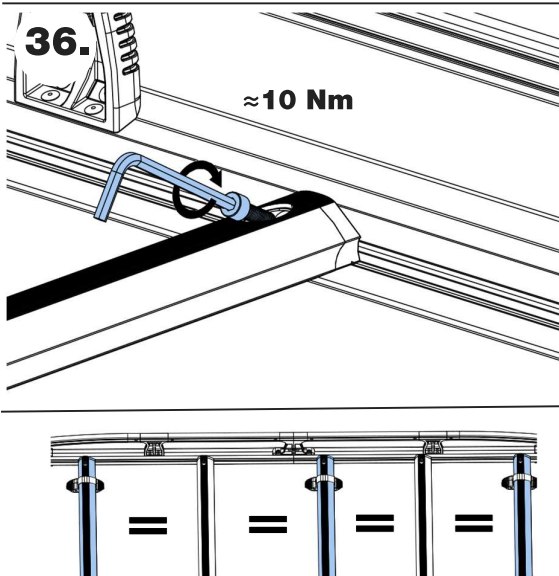


37.

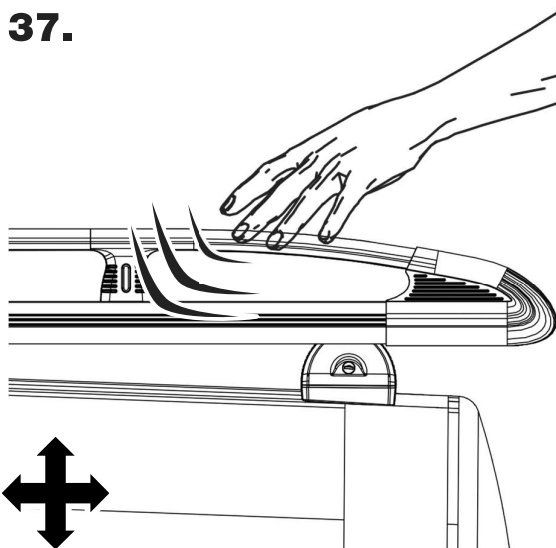

38.

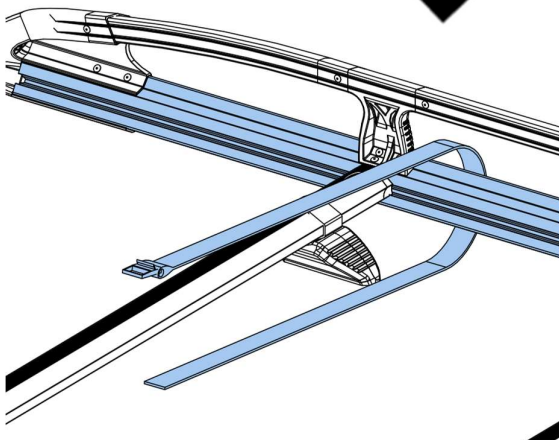


39.

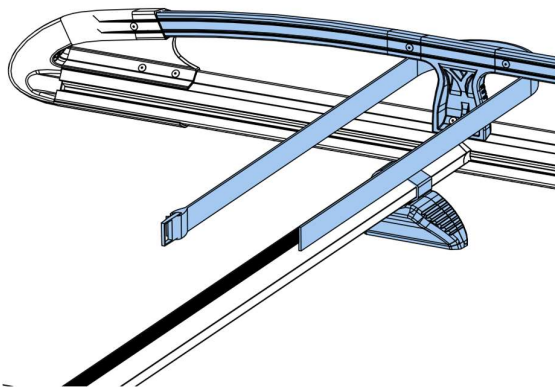

JC3KR

KammRack

Instructions


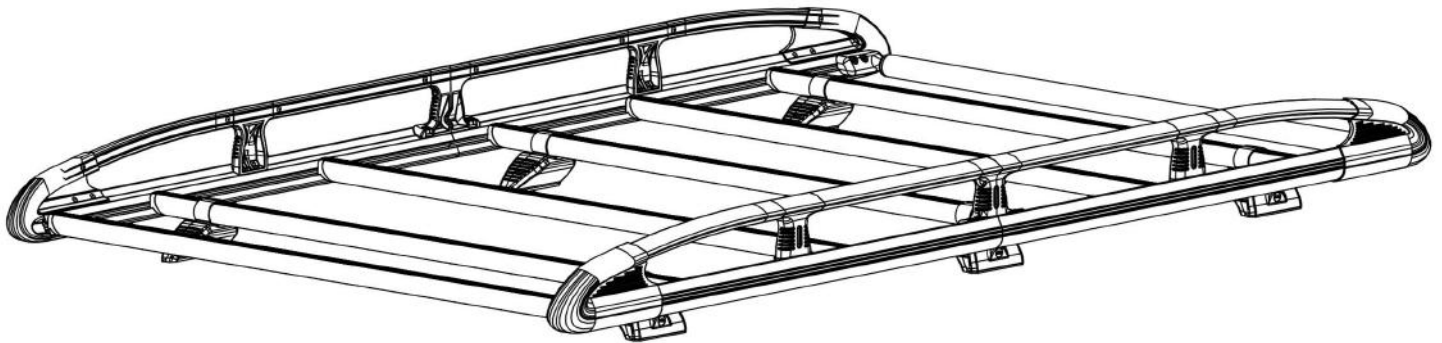


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

JC3KR:


CITROEN Jumper/Dispatch, 2016 –
PEUGEOT Expert, 2016 –
TOYOTA Proace, 2016 –
VAUXHALL Vivaro, 2019-

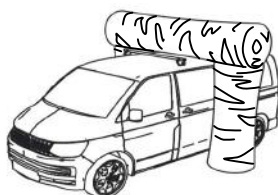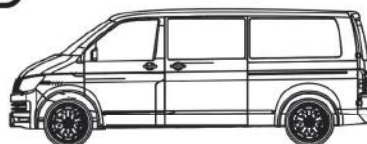


Max
50kg/110lbs

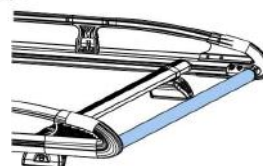


KammRack

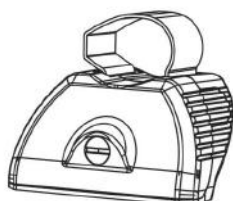

SA397U x 3 ☐

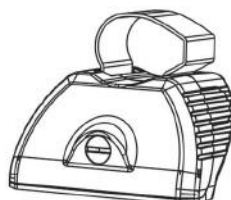

SA398U x 3 ☐

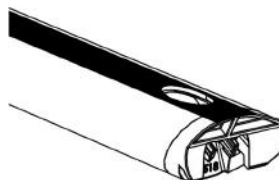


SA437 ☐




C04 x 6
optional upgrade

LHS x 2


RHS x 2




PS519 x 1 ☐

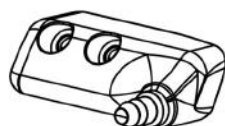


PS520 x 1 ☐

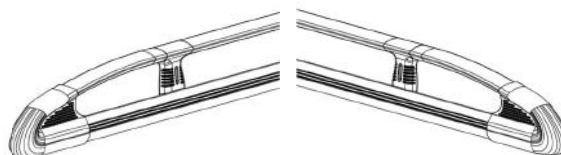

ASF x 1 ☐

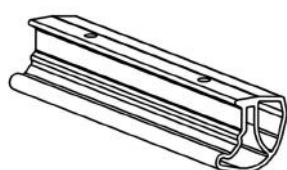

EXT15-02 x 2 ☐

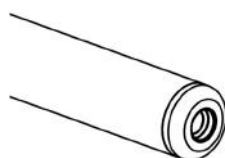


SA436 x 1 ☐


Fitting Kit



PS252 x 4 ☐




PS253 x 2 ☐

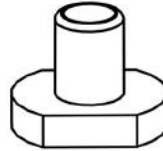

FN085 x 18 ☐



FT01 x 1 ☐

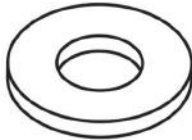

FW001 (M6) x 6 ☐



FW008 (M6) x 6 ☐



FN020 (M6) x 6



TP153 x 4 ☐



**FS040
(M6 x 35) x 4**



**FS039
(M6 x 30) x 2**



**FS059
(M8 x 25) x 18**



TP154 x 2 ☐




PS210 x 6 ☐





FT05 x 1 ☐


K662- Jumpy/Dispatch/Proace/Expert 2016-, Opel Vivaro 2019- L2, H1, Vauxhall Vivaro 2019- L1, H1, Tailgate

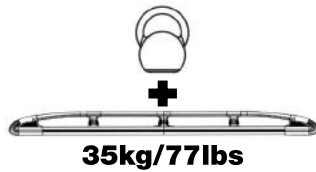



= 150kg Max

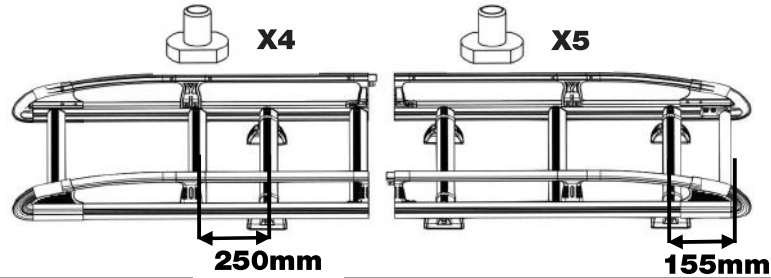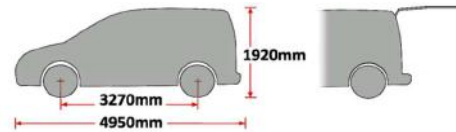


K664- Jumpy/Dispatch/Proace/Expert 2016-, Opel Vivaro 2019- L3, H1, Vauxhall Vivaro 2019- L2, H1, Tailgate

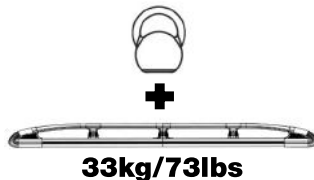



= 150kg Max

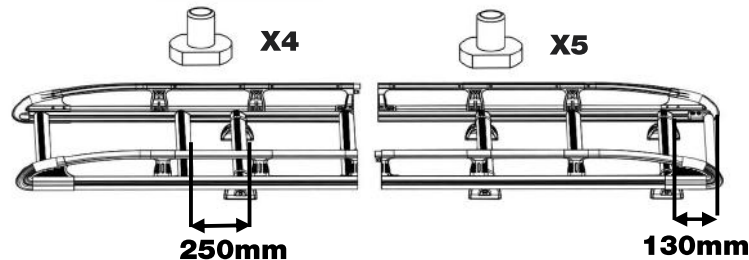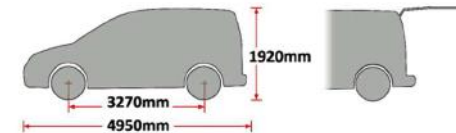

K661- Jumpy/Dispatch/Proace/Expert 2016-, Opel Vivaro 2019- L2, H1, Vauxhall Vivaro 2019- L1, H1, Twin Doors

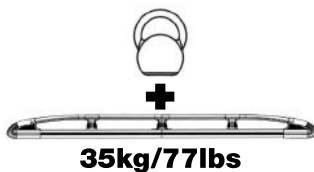


= 150kg Max

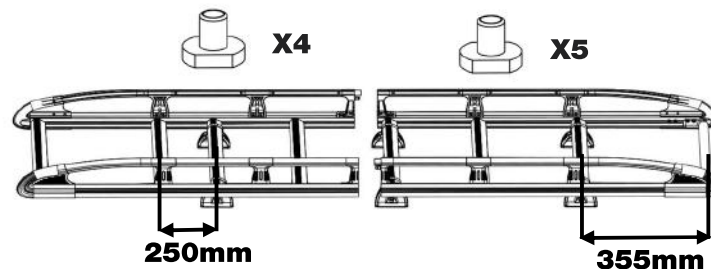
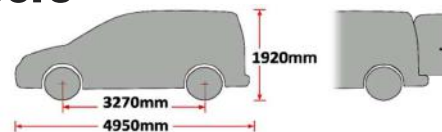


**K663- Jumpy/Dispatch/Expert 2016-, Opel Vivaro
2019- L3, H1, Vauxhall Vivaro 2019- L2, H1,Twin**


Doors

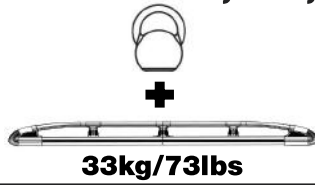


**= 150kg
Max**

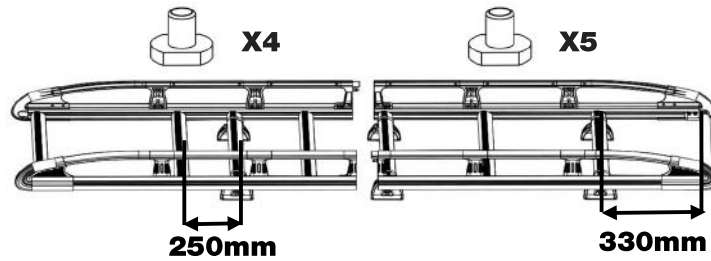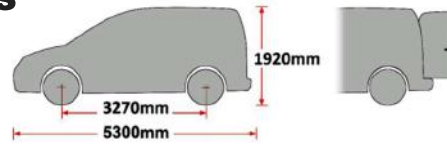


1.

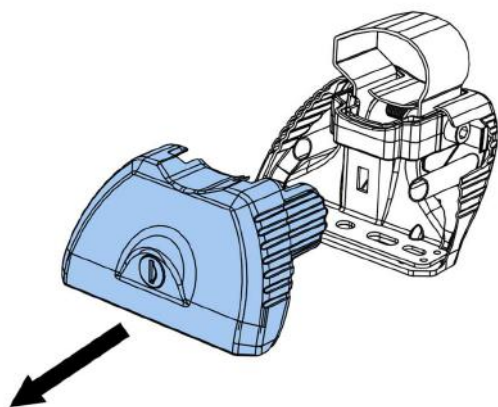


2.

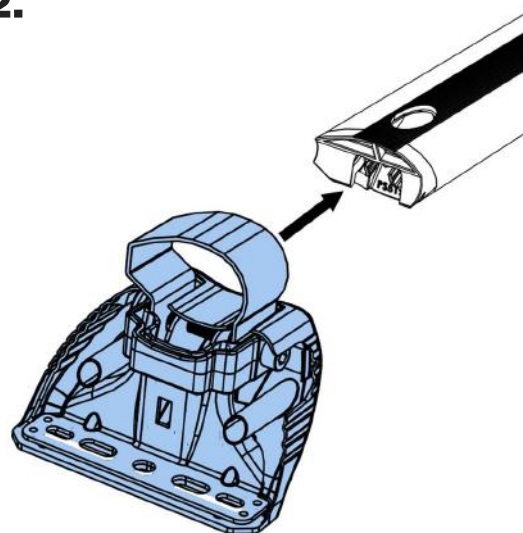


3.

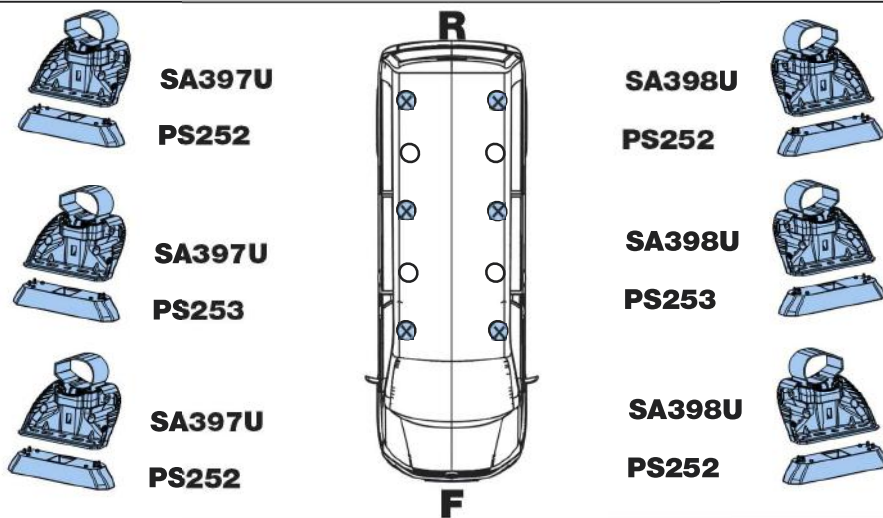


4.

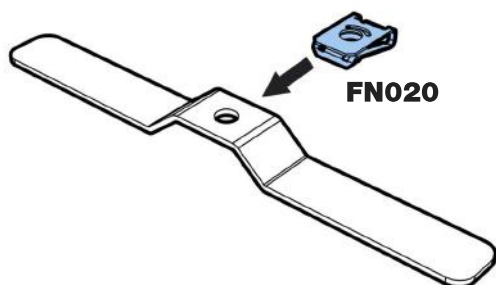


5.

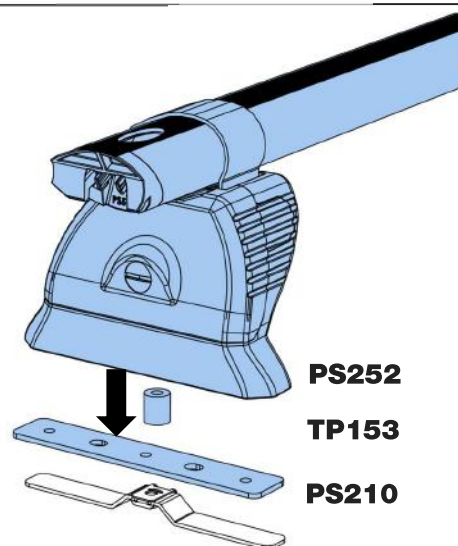


6.

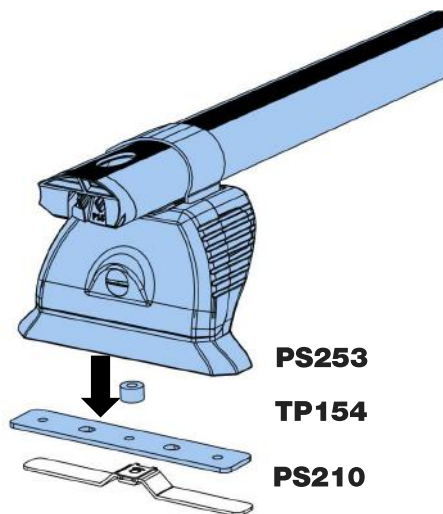


7.

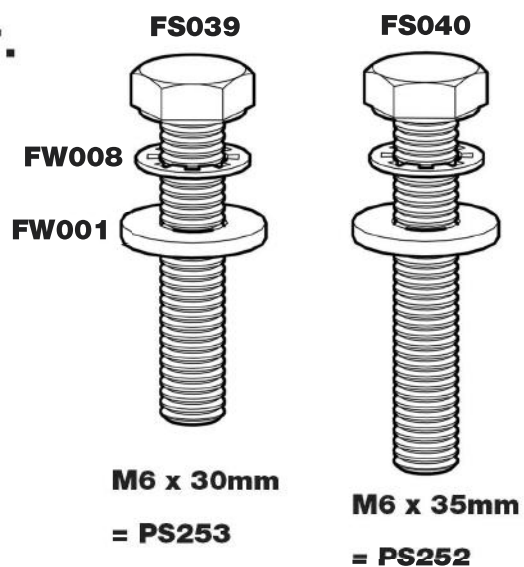


8.

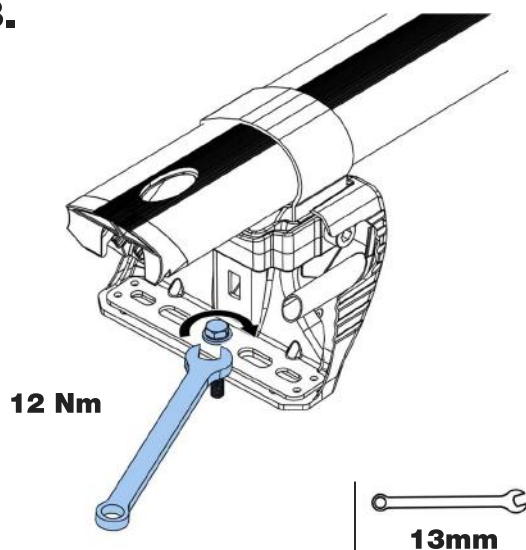


9.

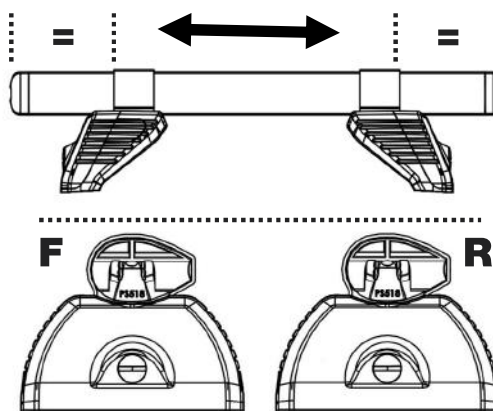



10.

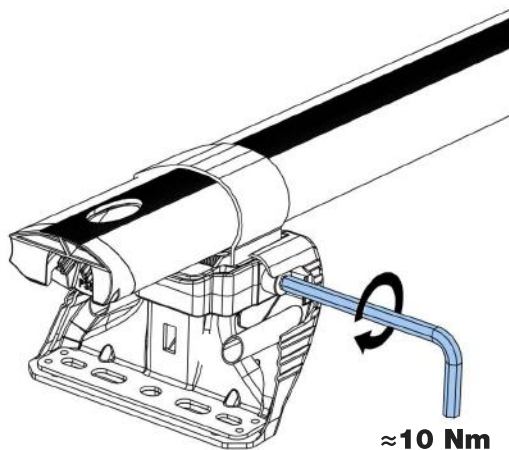


11.






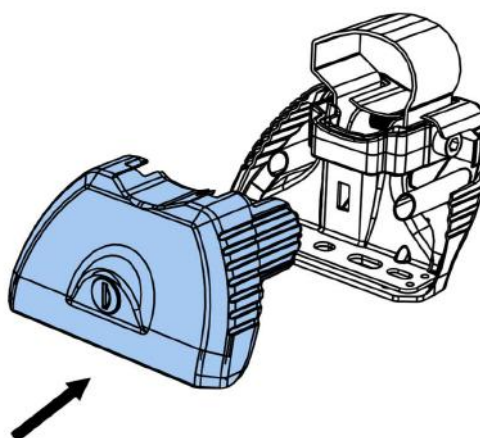


12.

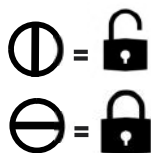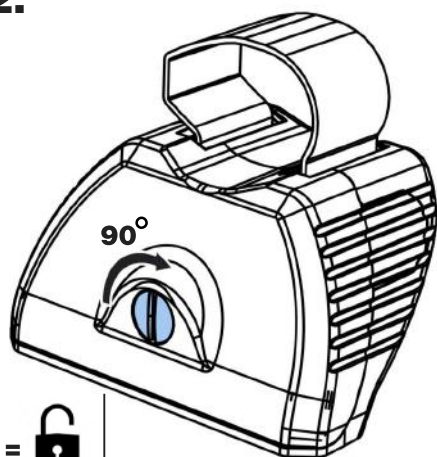


13.

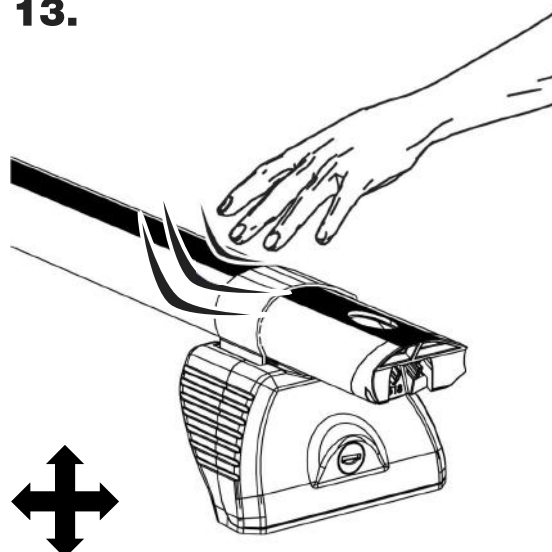


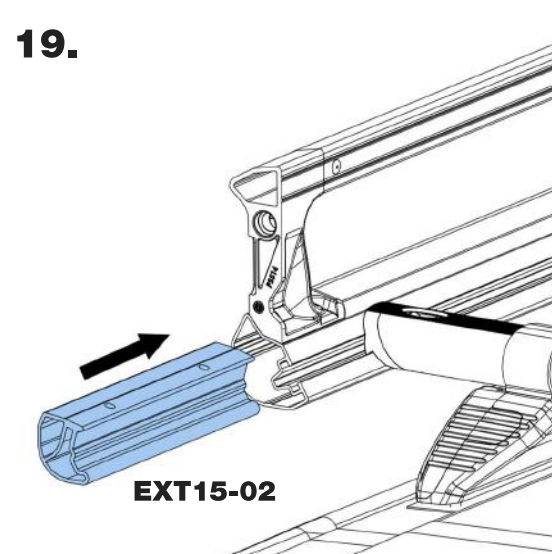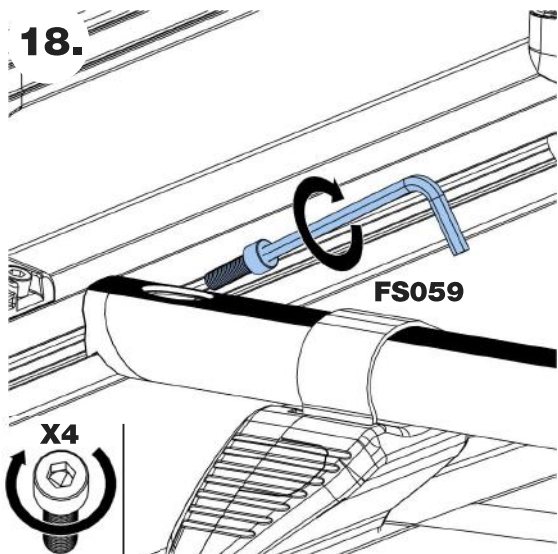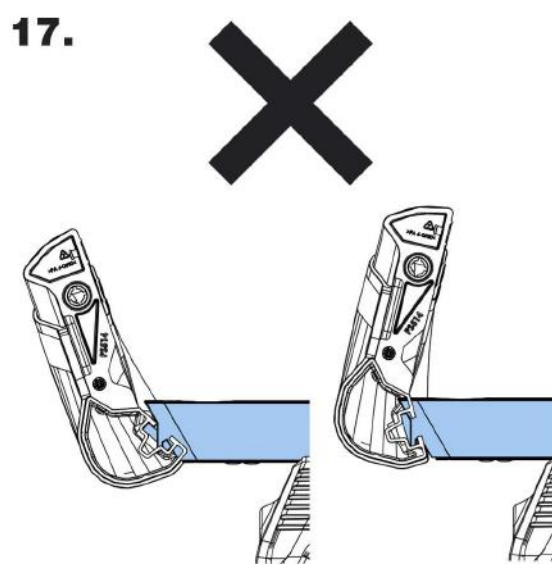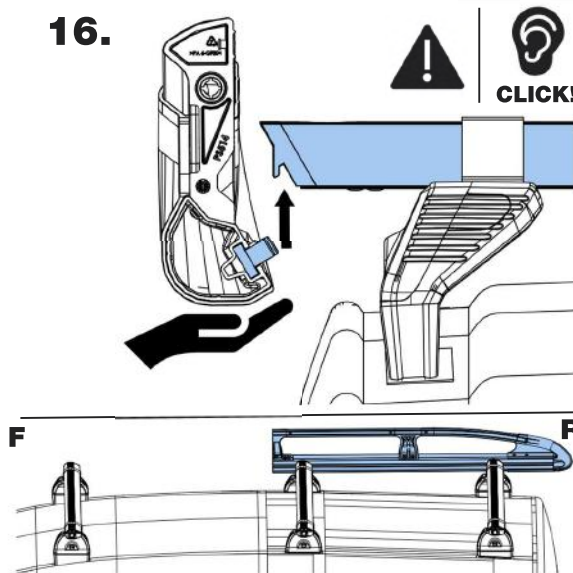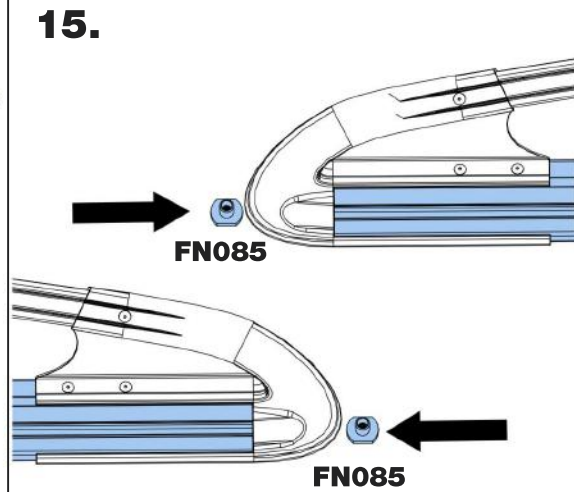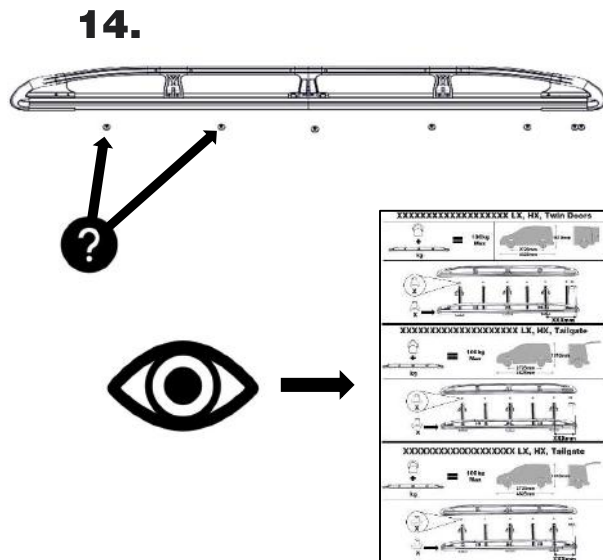


20.

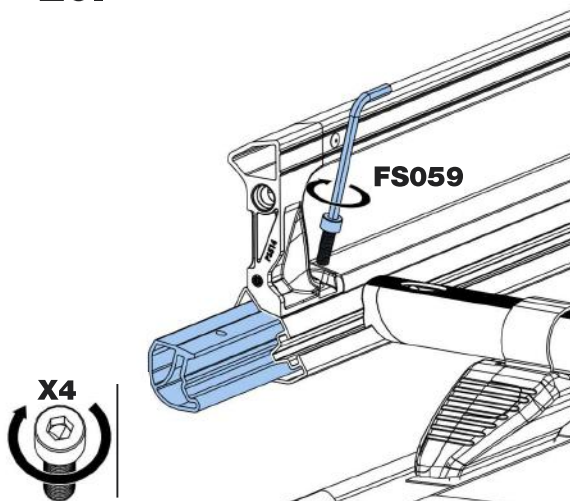


21.

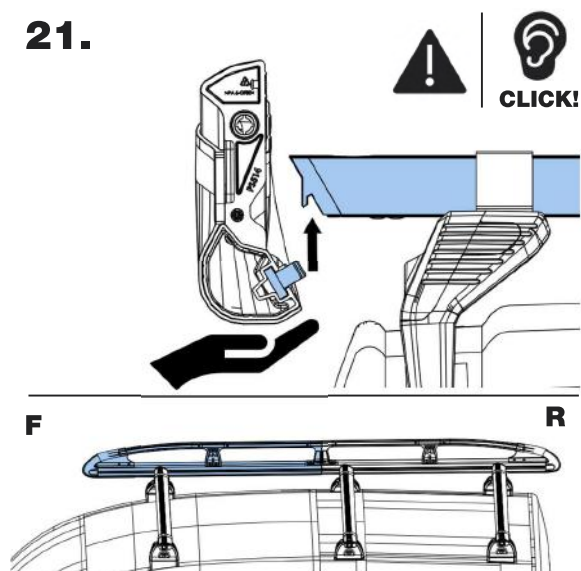


22.

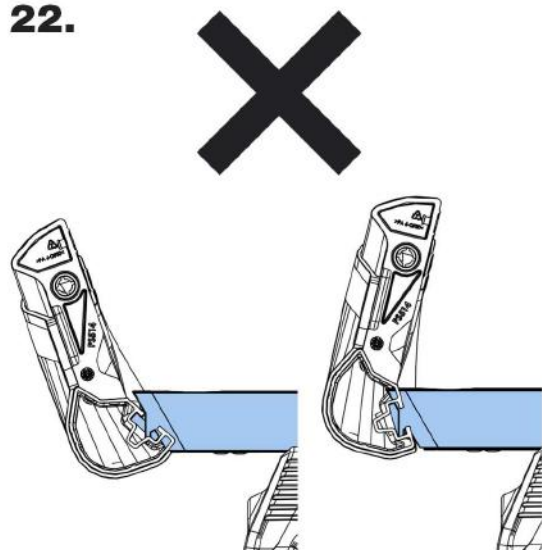


23.

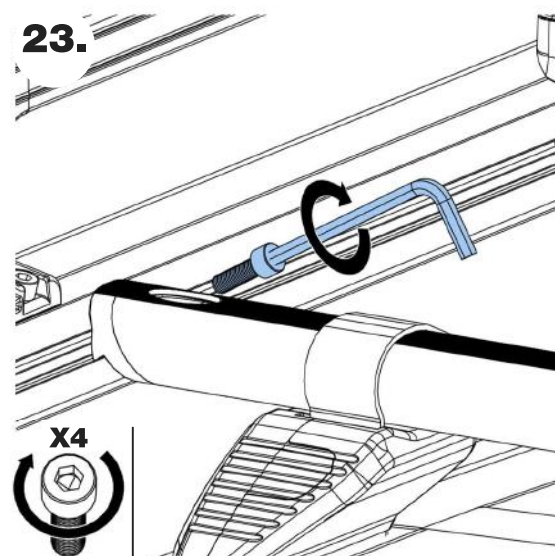


24.

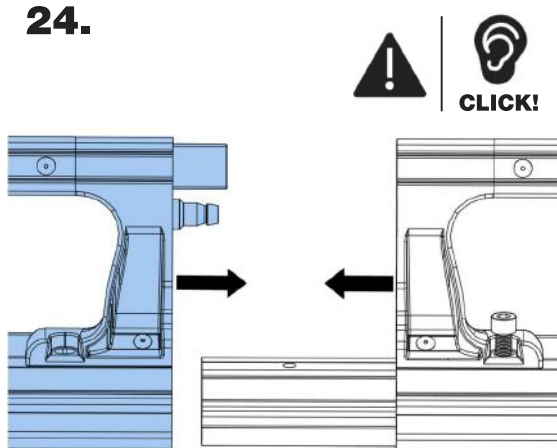


25.

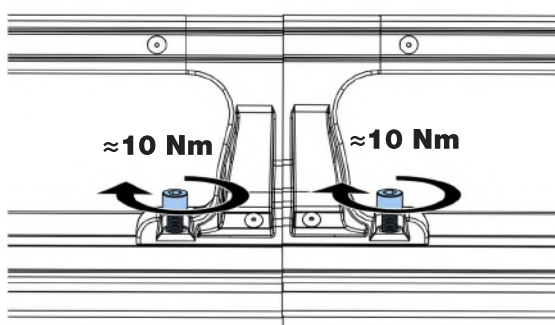


26.

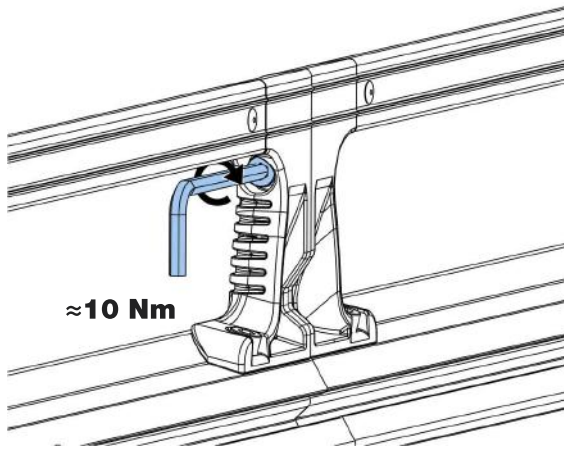



27.

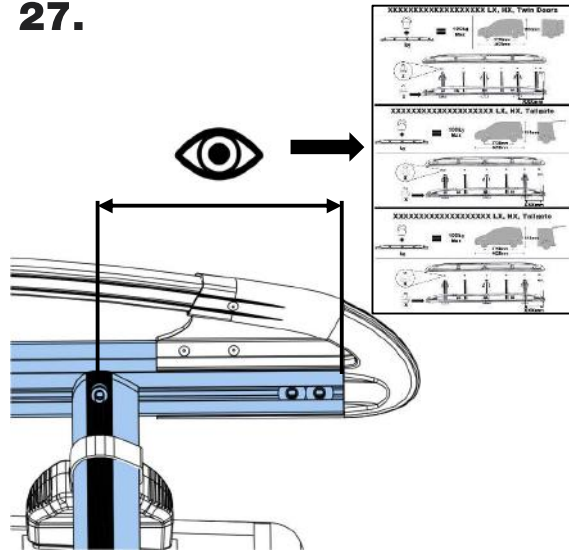


28.

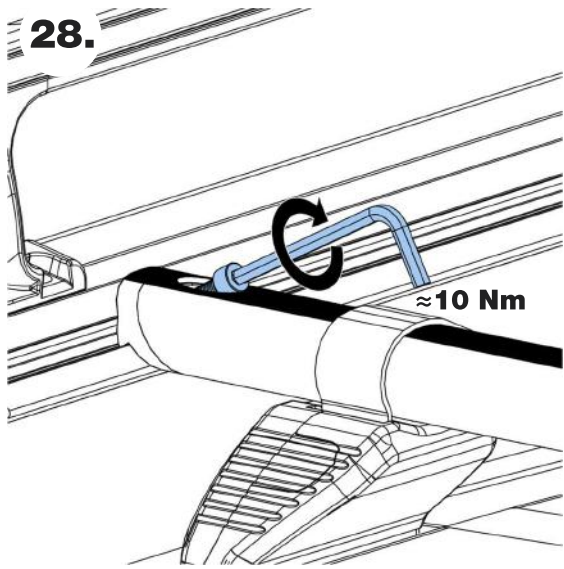


29.

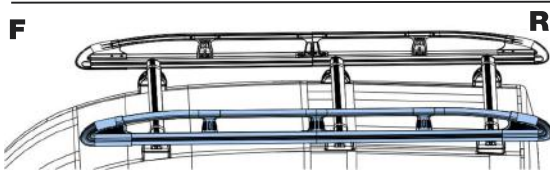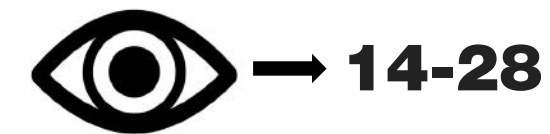


30.

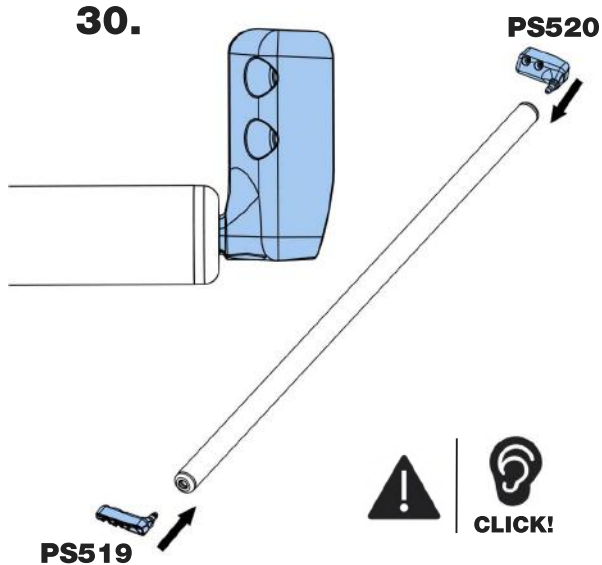


31.

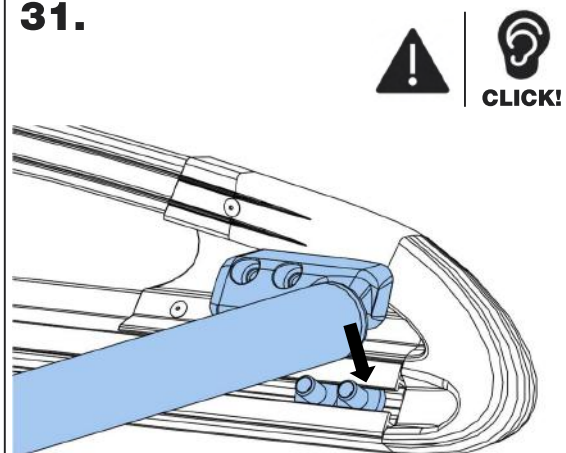


32.

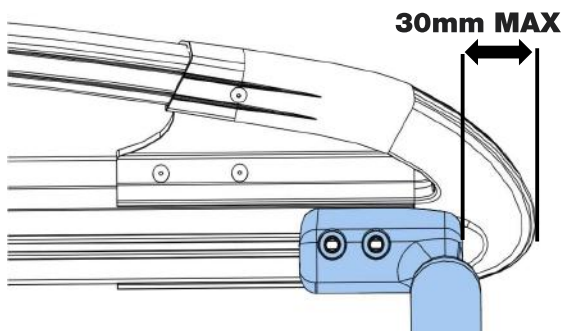


33.

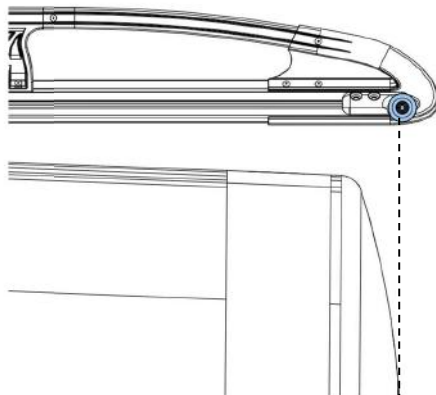


34.

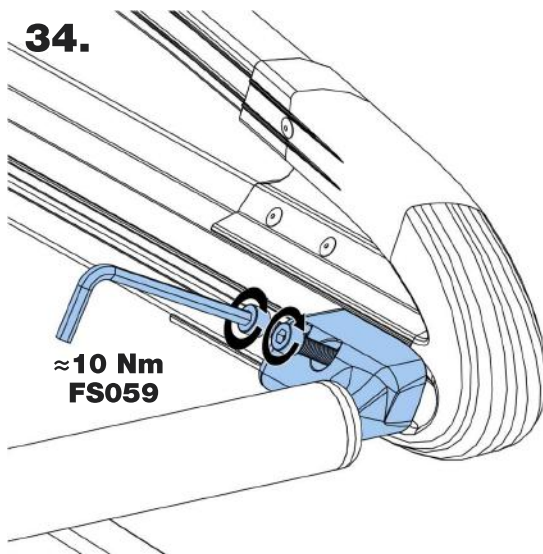


35.

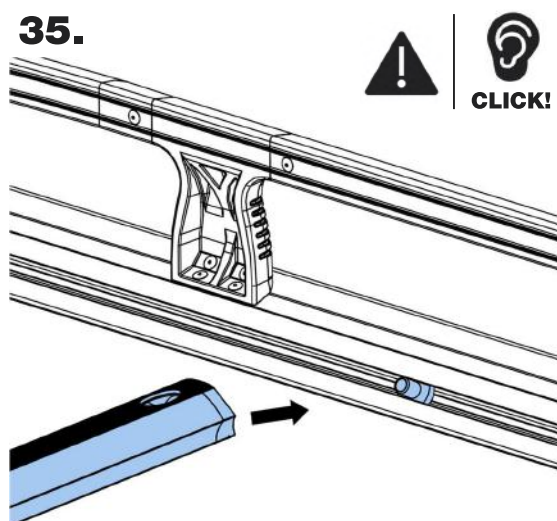


36.

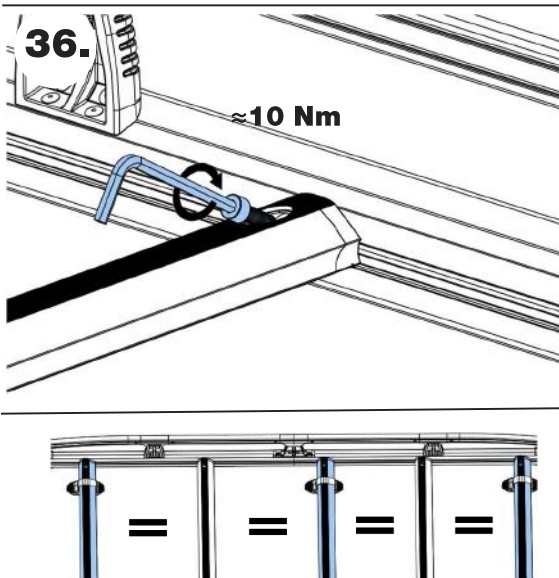

37.

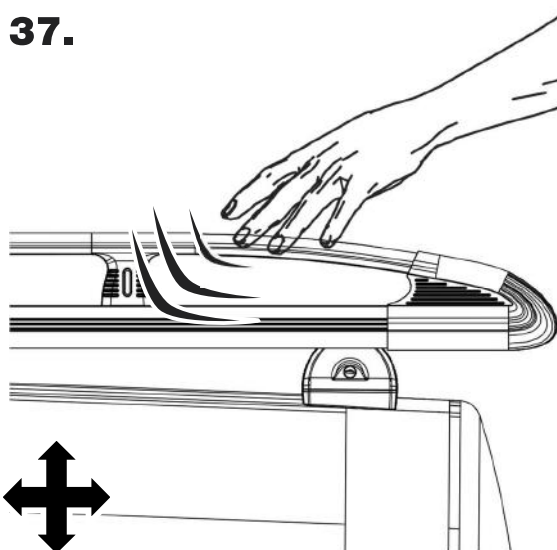

38.

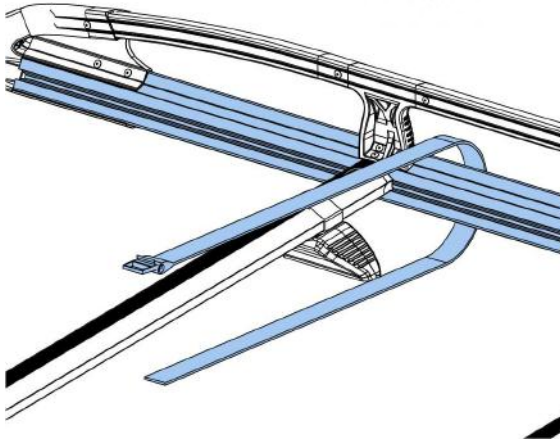

39.

