


KD3KR

KammRack

Instructions

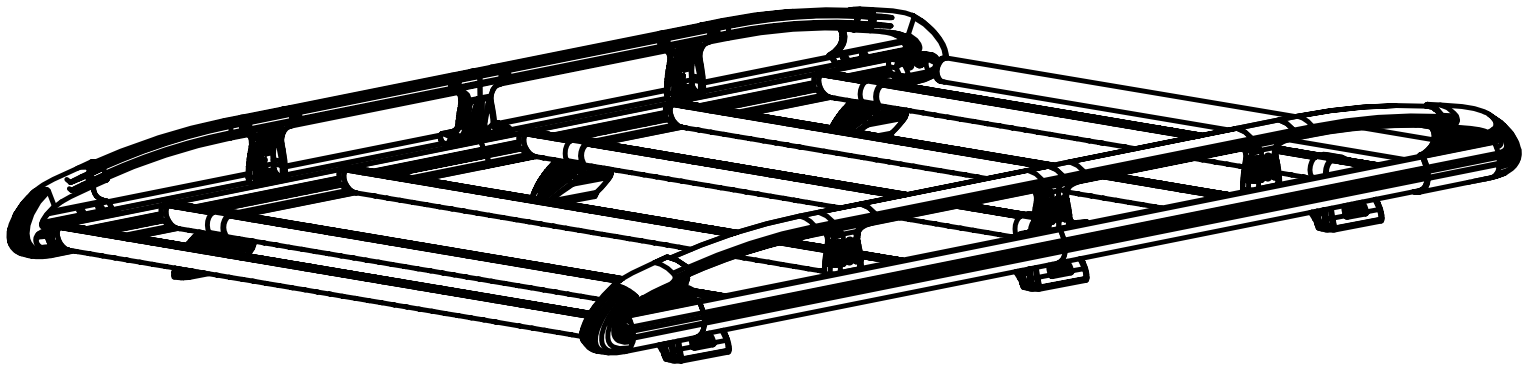




CITY CRASH

According to ISO/ PAS 11154:2006




KD3KR:

VW Caddy 5, 2020–

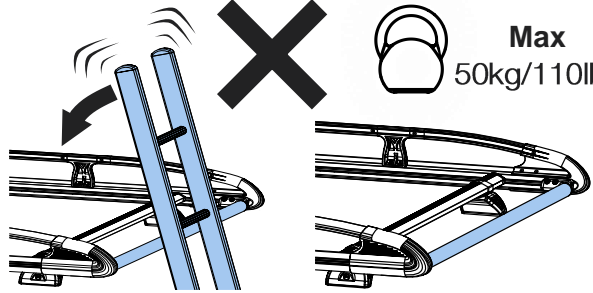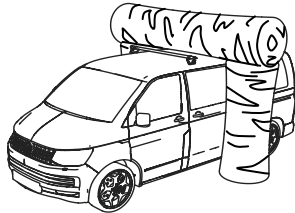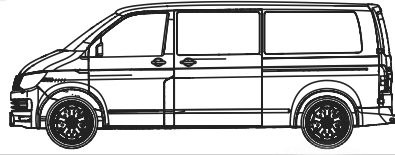


Max
50kg/110lbs


KammRack

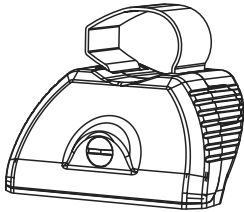

SA397U x 3

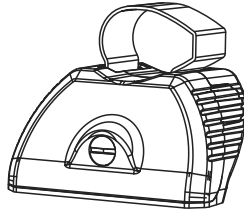

SA398U x 3

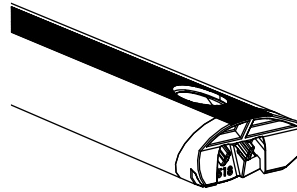


SA428/S
A466




C04 x 6
optional upgrade

LHS x 2


RHS x 2

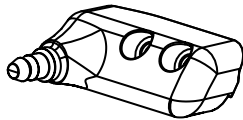


PS519 x 1

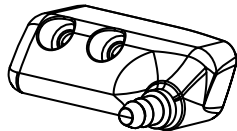


PS520 x 1

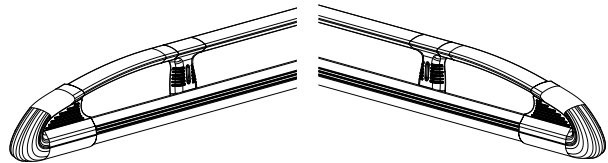

ASF x 1

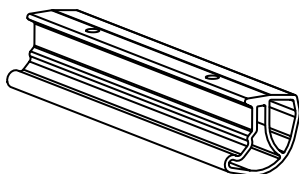


EXT15-02 x 2

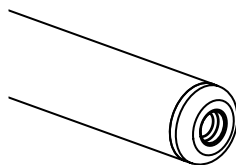


SA436 x 1


Fitting Kit




PS176 x 4




PS023 x 2




PS319 x 4




PS404 x 2

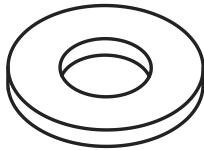


FW002 (M8) x 6

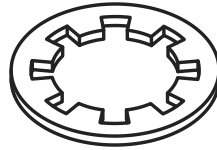

FW009 (M8) x 6

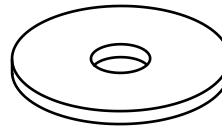


PS208 (M8) x 6

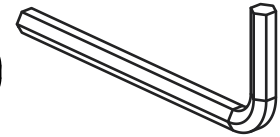


FT01 x 1




FS081 (M8
x 50) x 4



FS061 (M8 x 35) x 2



FS059 (M8
x 25) x 16

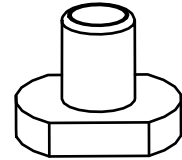


FN085 x 16




FT05 x 1


1.

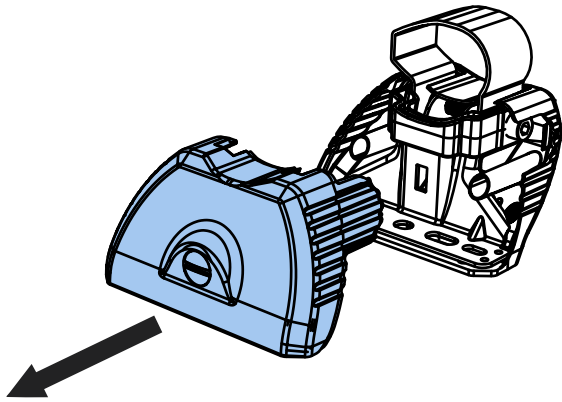

2.

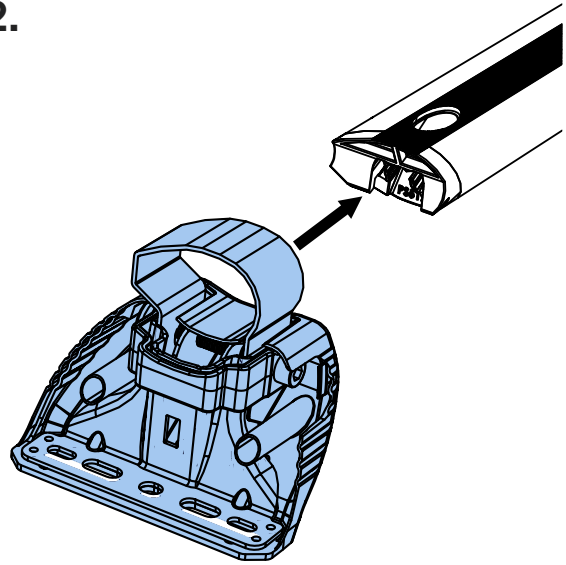


3.

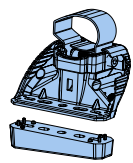


SA397U

PS176

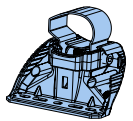


SA397U

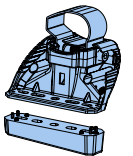

SA397U

PS176


R

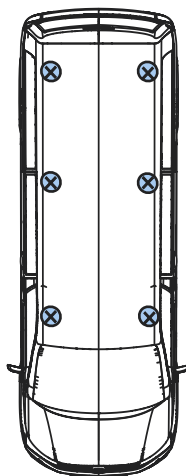

F

SA398U



PS176

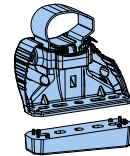


SA398U

SA398U


PS176





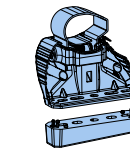
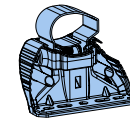


4.

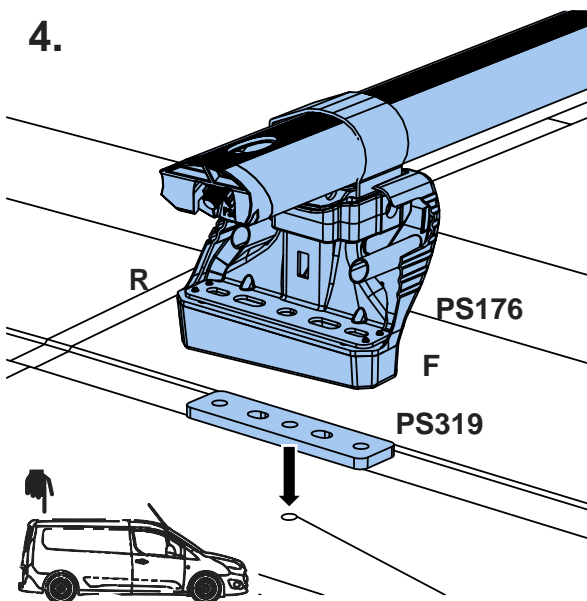


5.

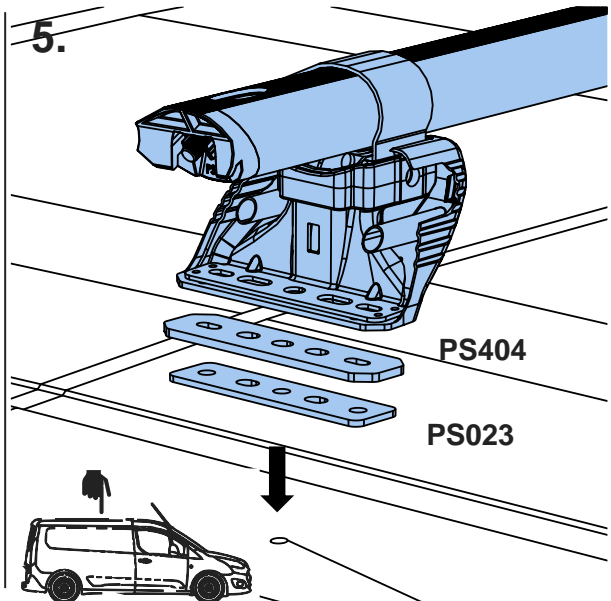


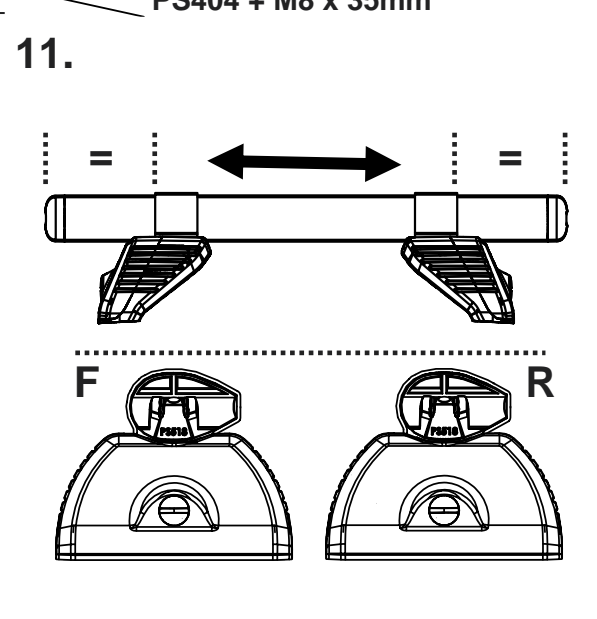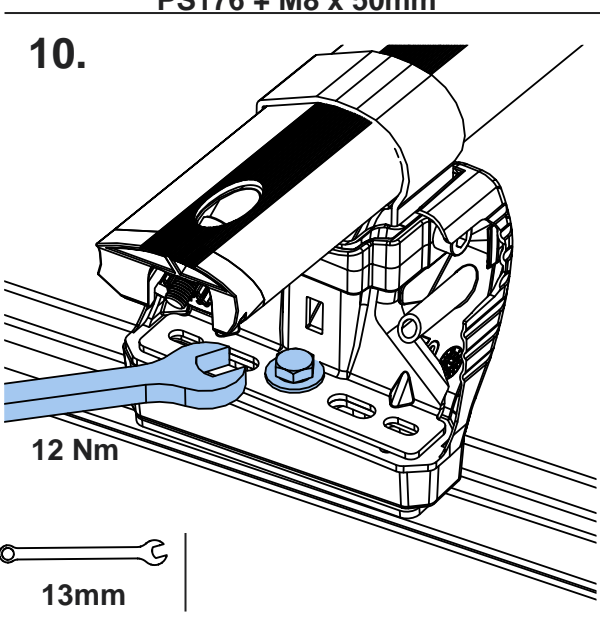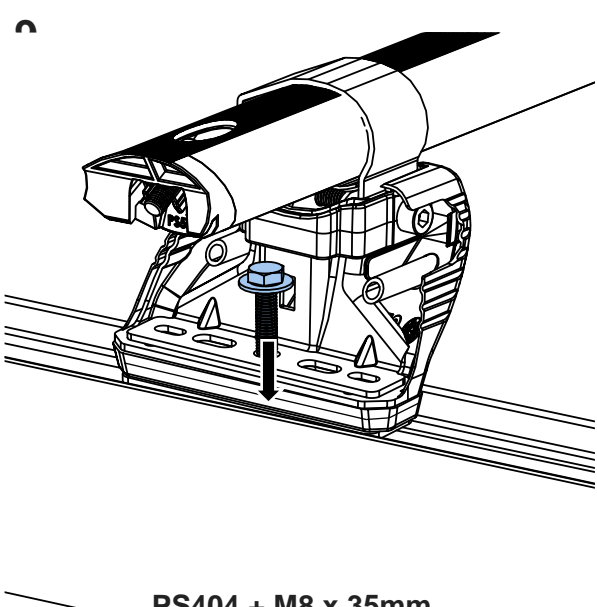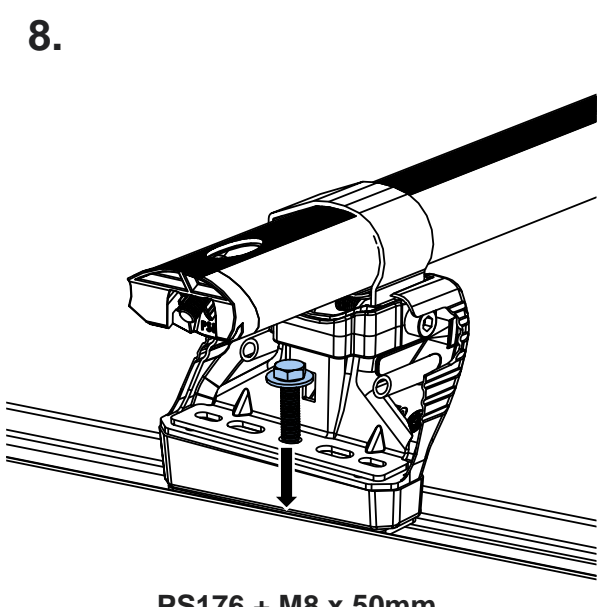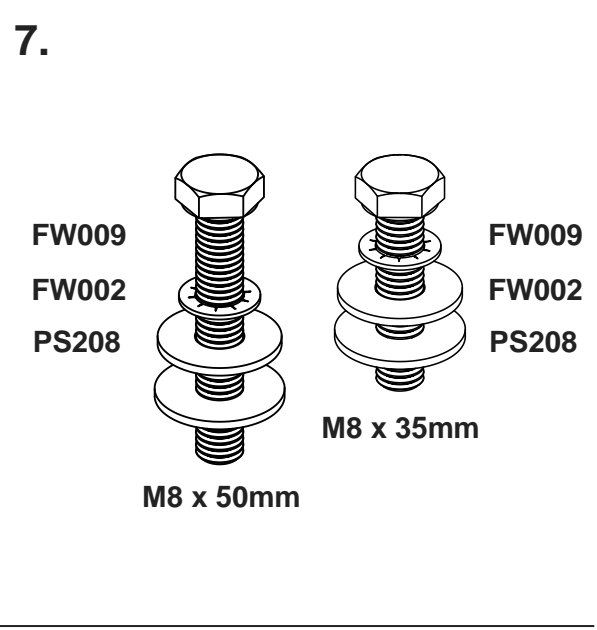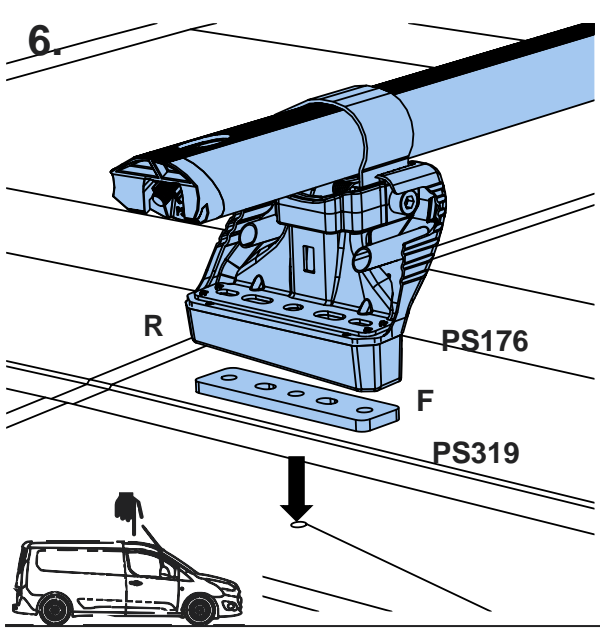


12.

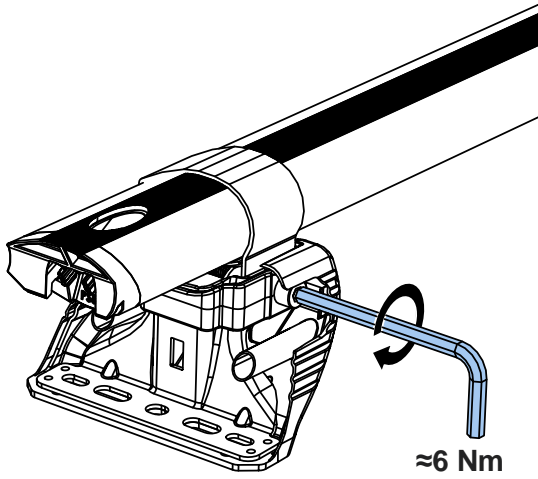



13.

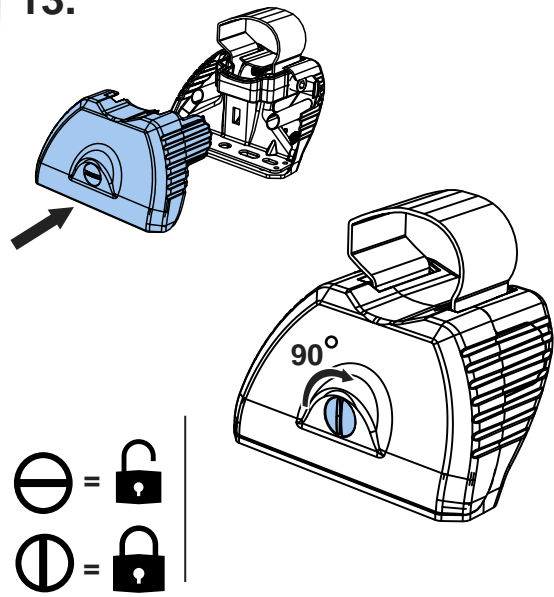



14.

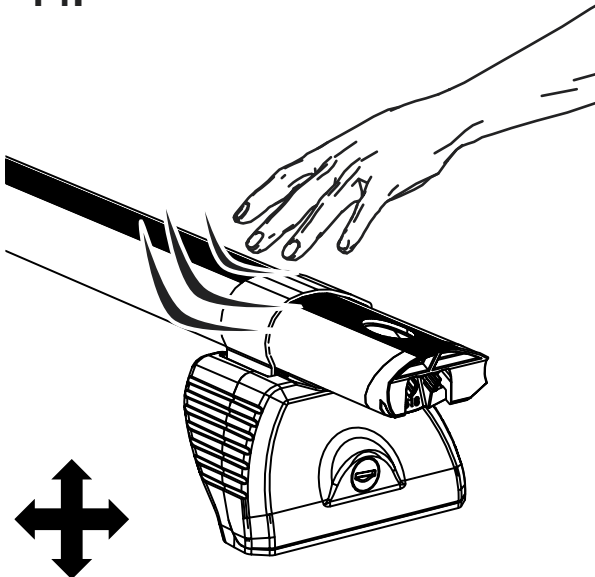


K676/B676- VW Caddy 5 2020- Standard Roof, Tailgate

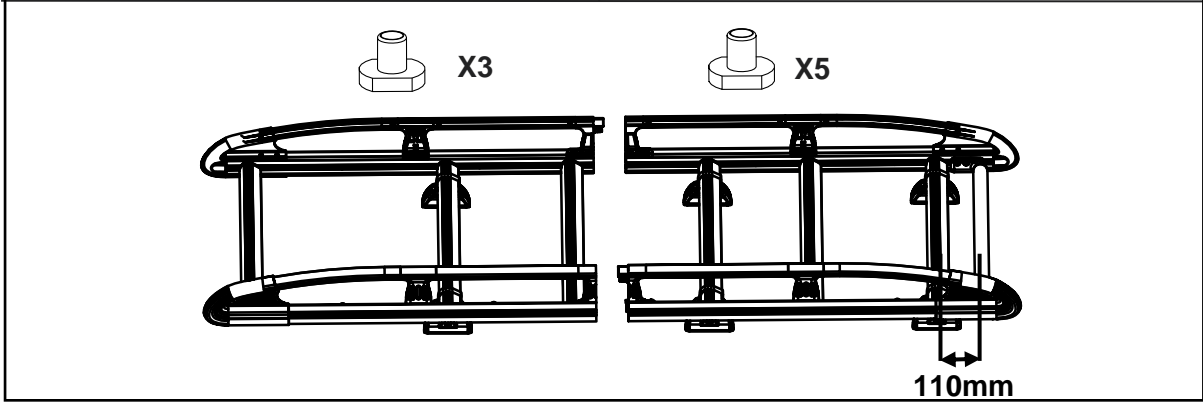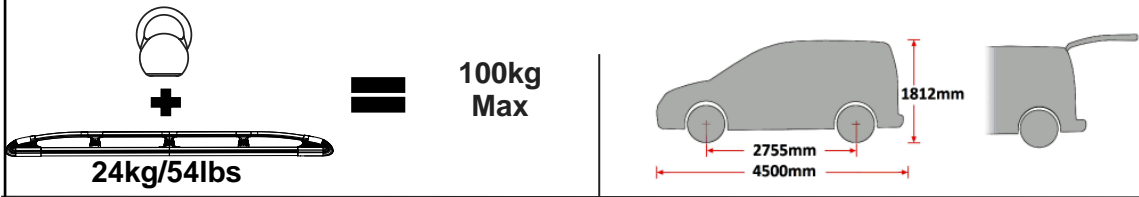


K677/B677- VW Caddy 5 2020- Standard Roof, Twin Door

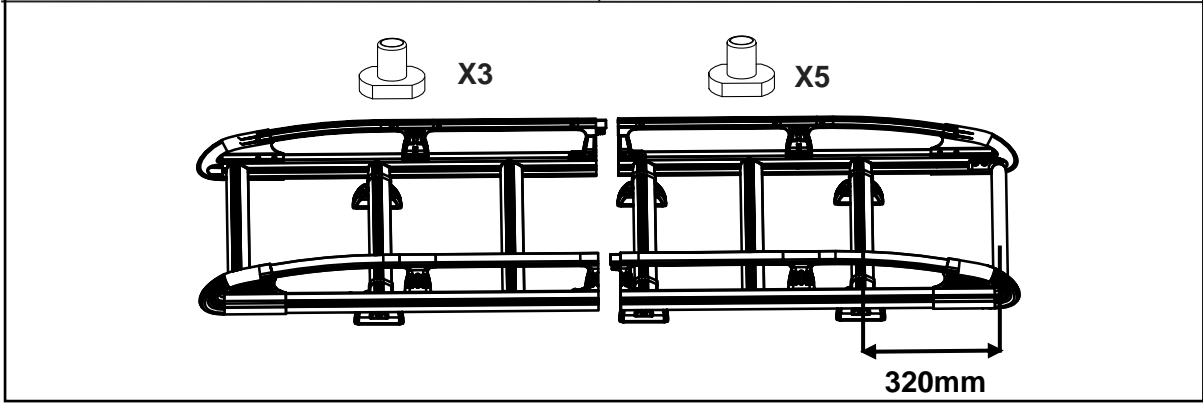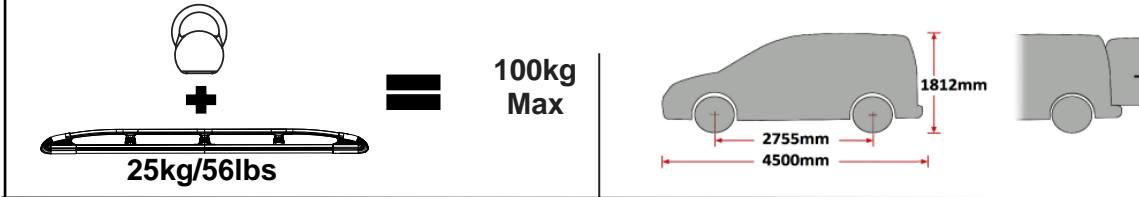


15.

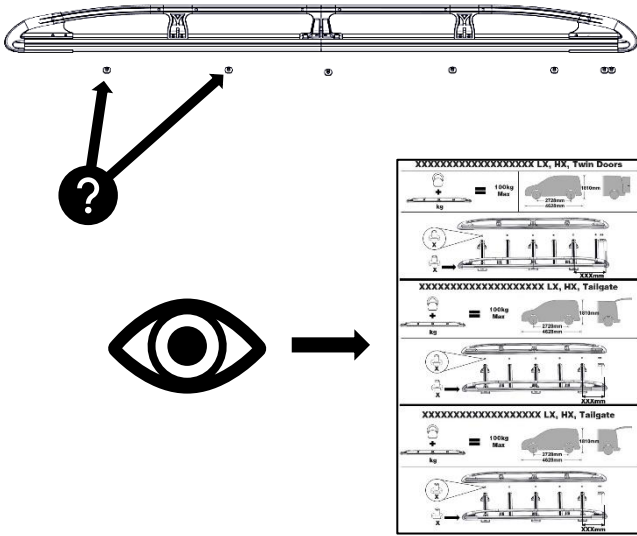


16.

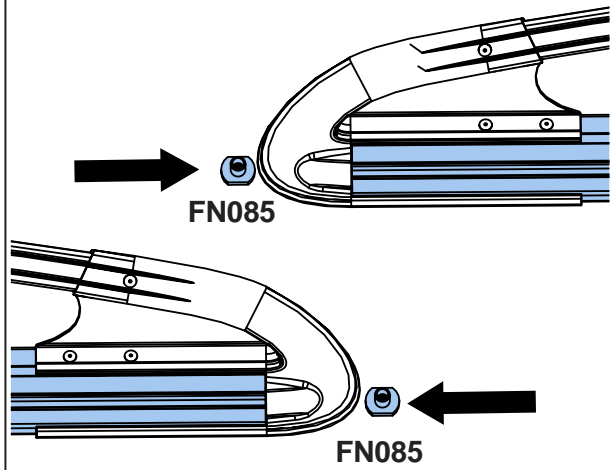


17.

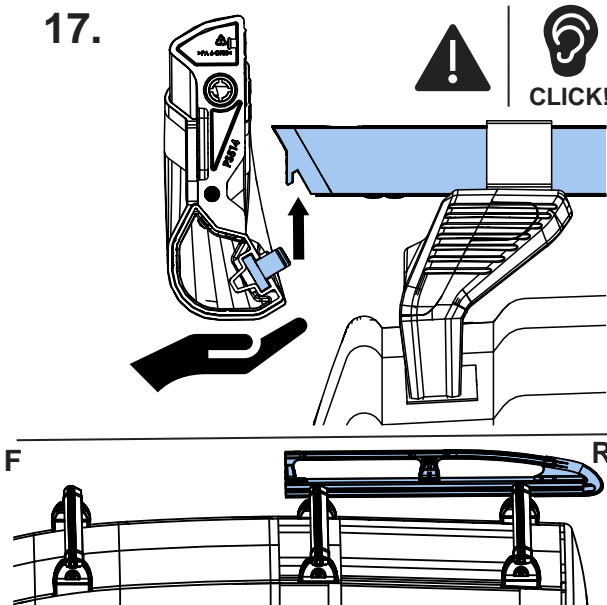


18.






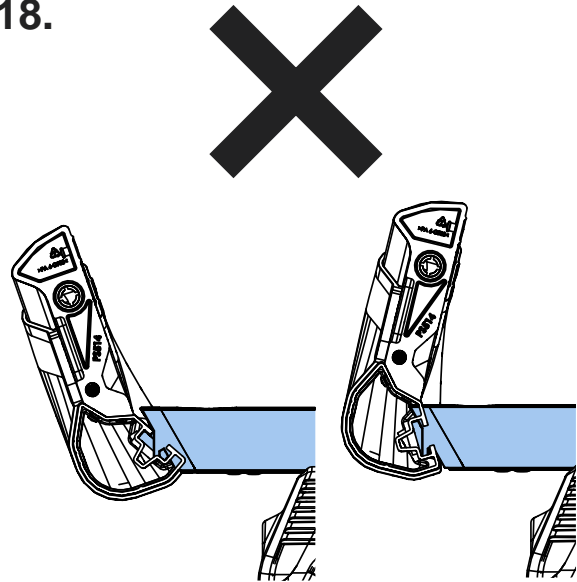


19.

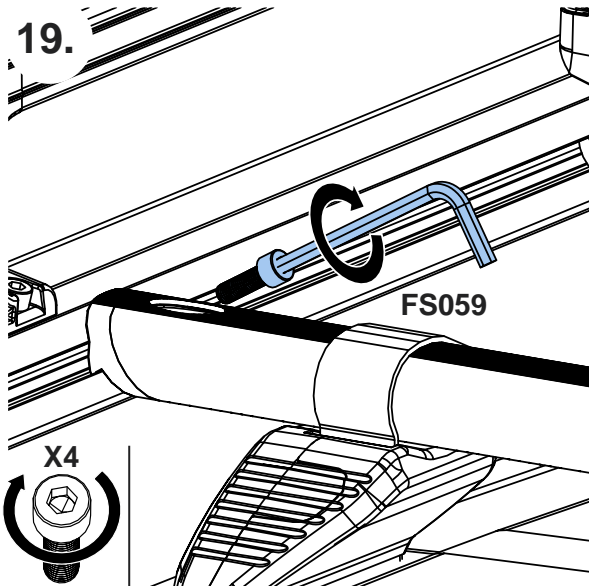


20.

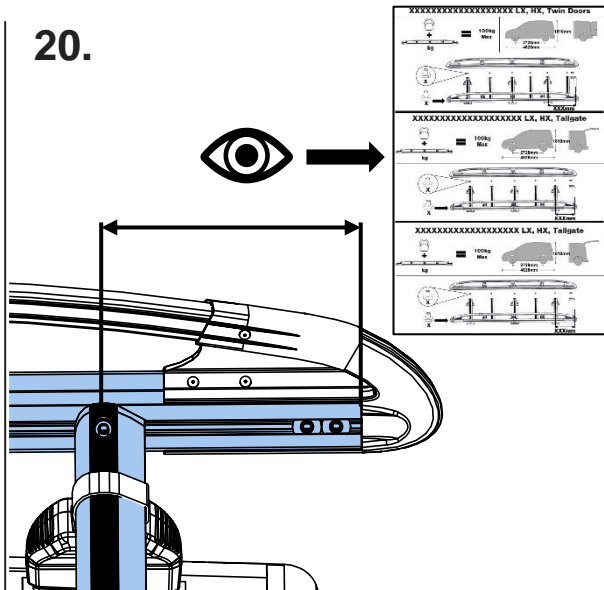


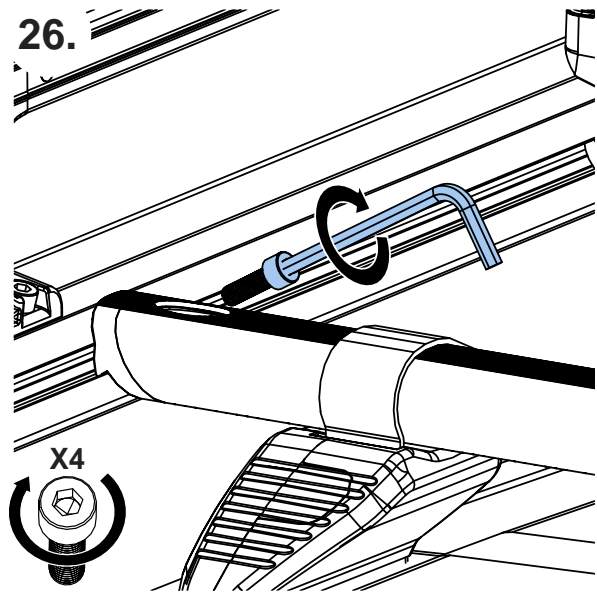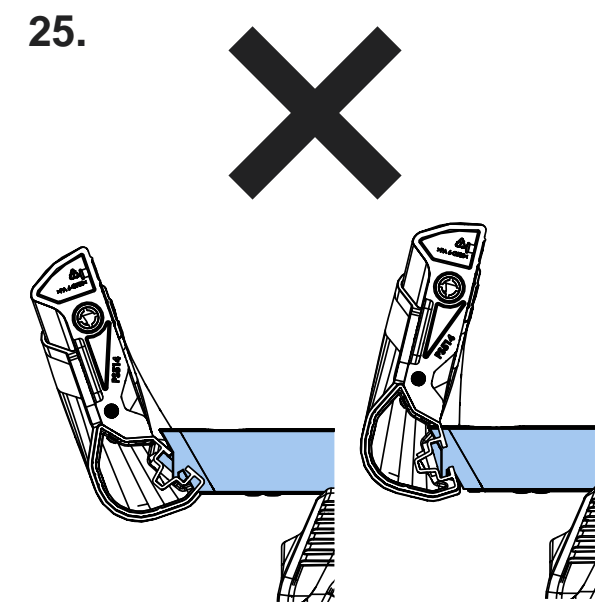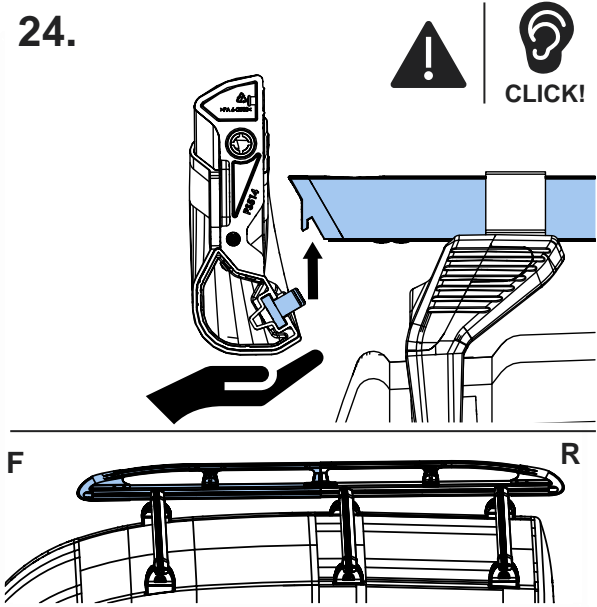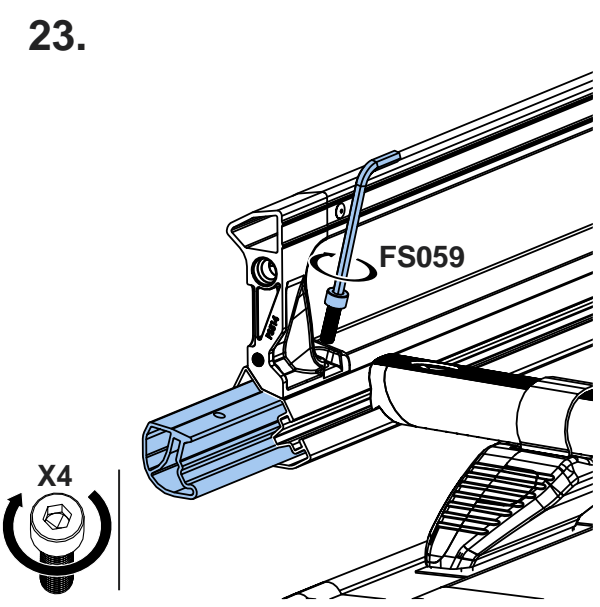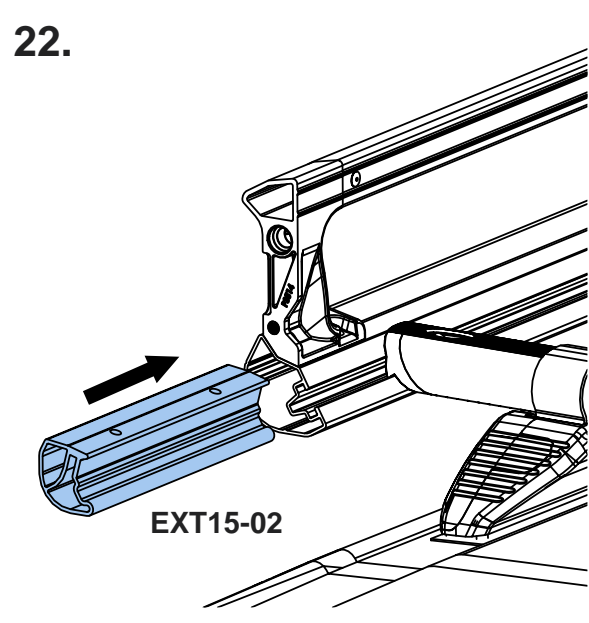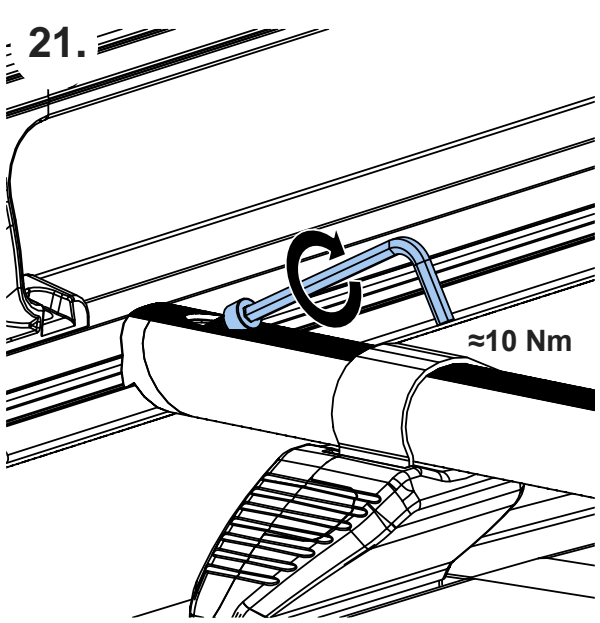


27.

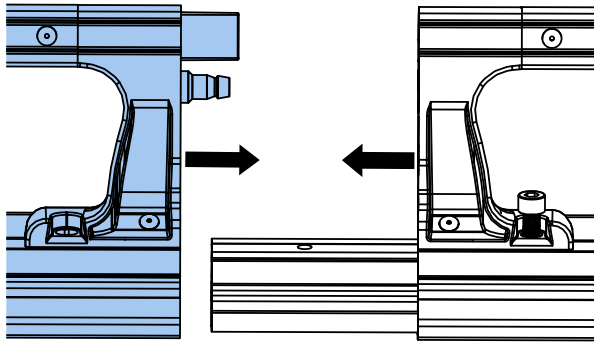


28.

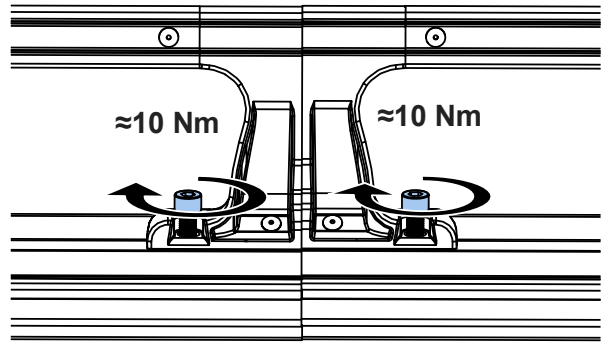



29.

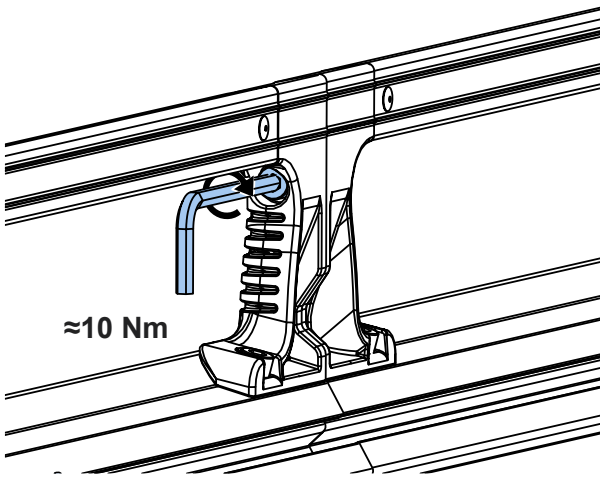


30.

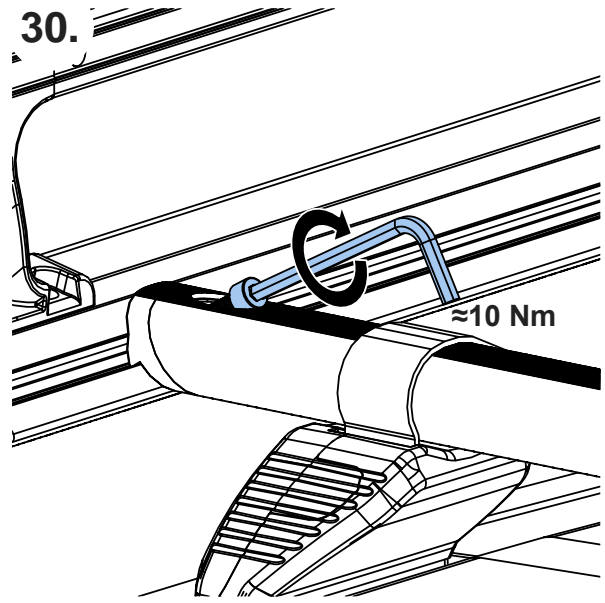


31.

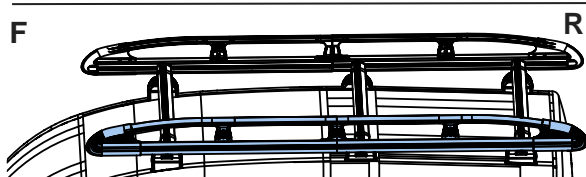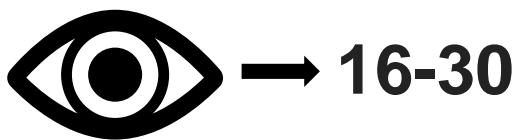

32.

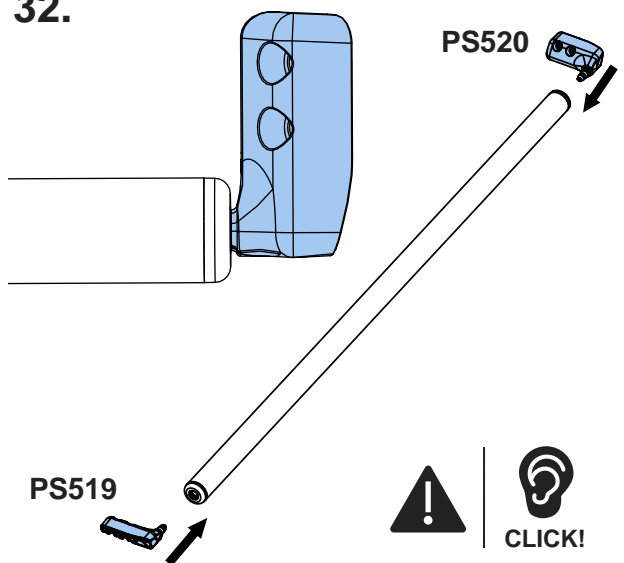


33.

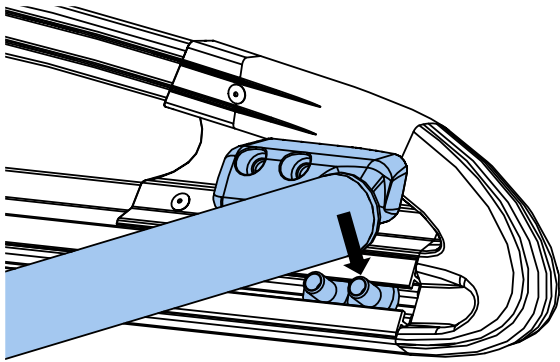


34.


30mm MAX

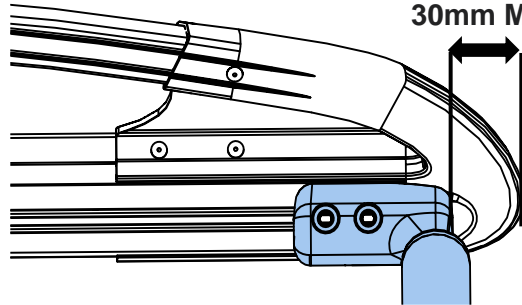


35.

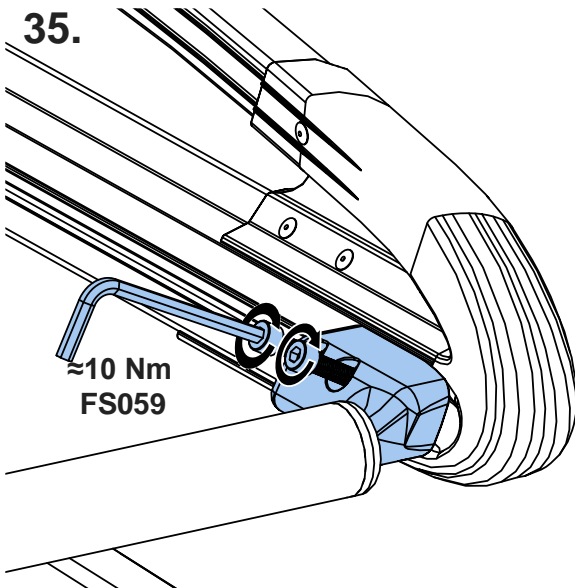


36.

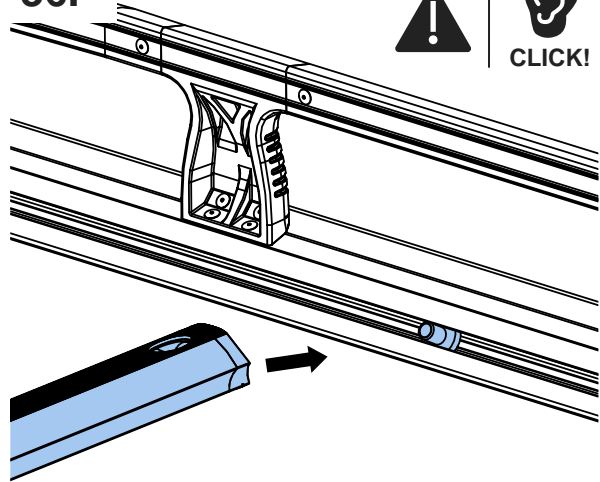


37.

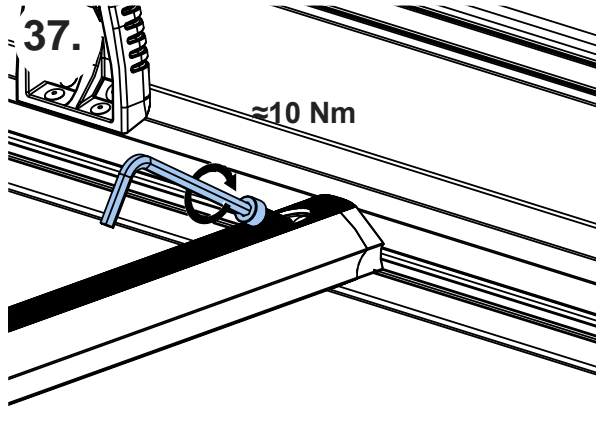


38.

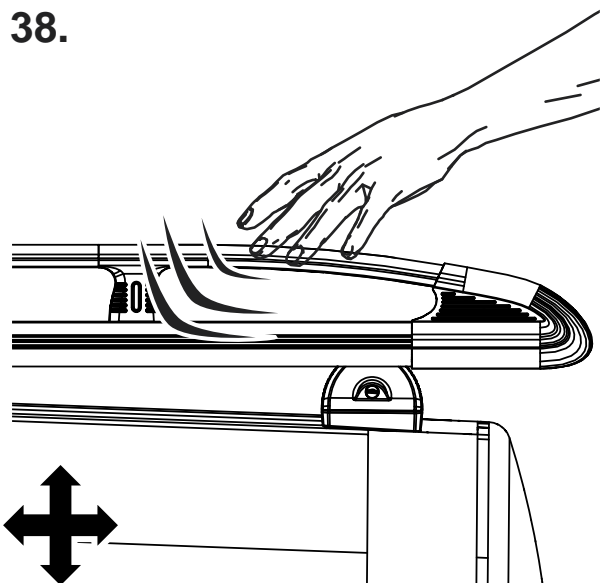

39.

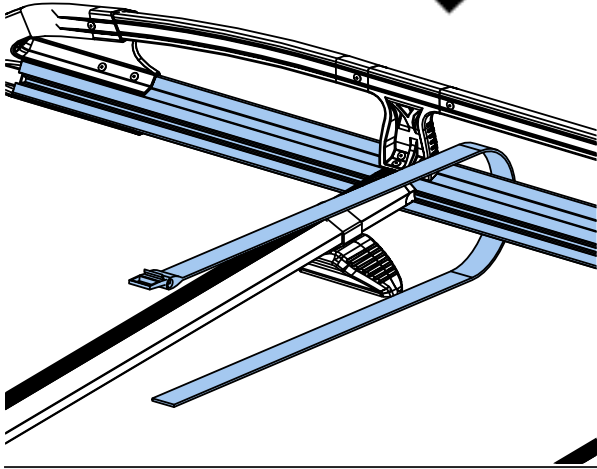


40.

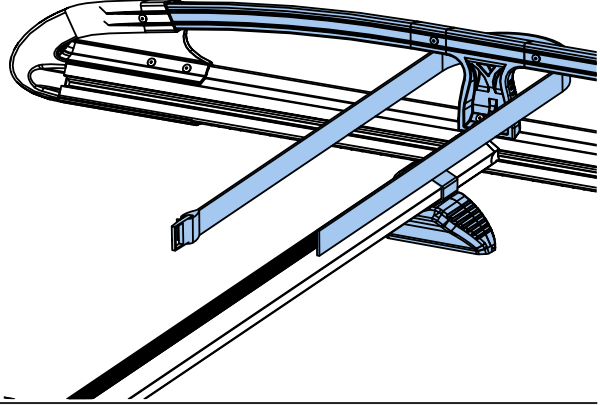

KD4KR

KammRack

Instructions



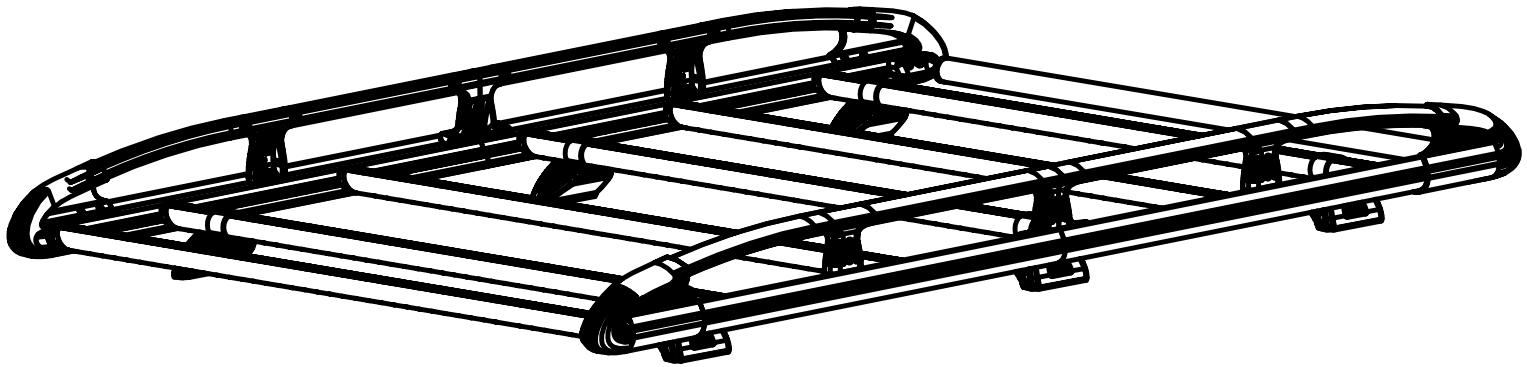


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

KD4KR:


VW Caddy 5, 2020-

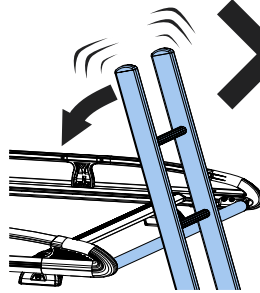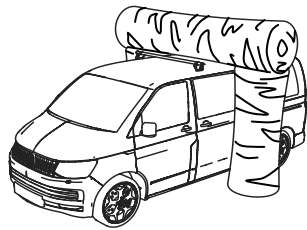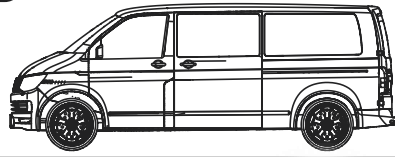


Max
50kg/110lbs

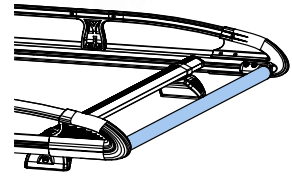


KammRack

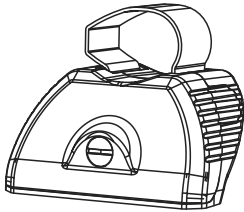

SA397U x 4

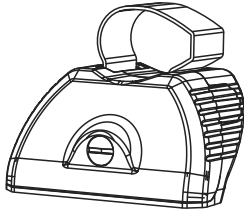


SA398U x 4

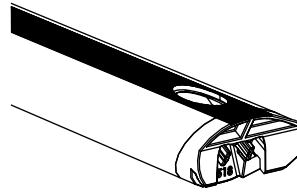


**SA428/S
A466**



C04 x 8
optional upgrade

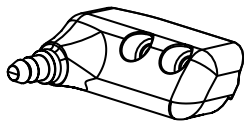


PS519 x 1

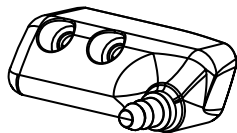


PS520 x 1

LHS x 2


RHS x 2

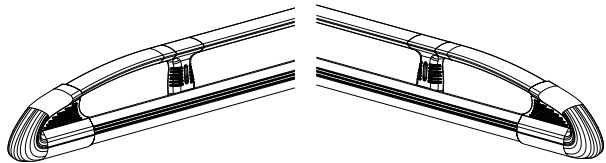

ASF x 1

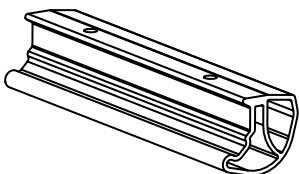


EXT15-02 x 2

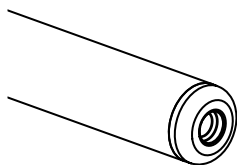


SA436 x 1


Fitting Kit




PS176 x 4




PS023 x 4




PS319 x 4




PS404 x 4

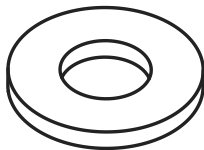


FW002 (M8) x 8

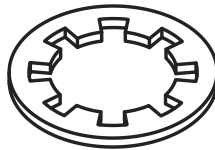

FW009 (M8) x 8

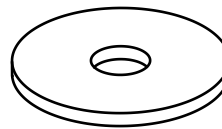


PS208 (M8) x 8

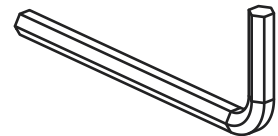


FT01 x 1




FS081 (M8 x 50) x 4




FS061 (M8 x 35) x 4



FS059 (M8 x 25) x 16

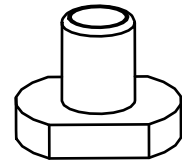


FN085 x 16

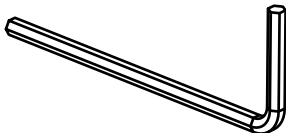


FT05 x 1


1.

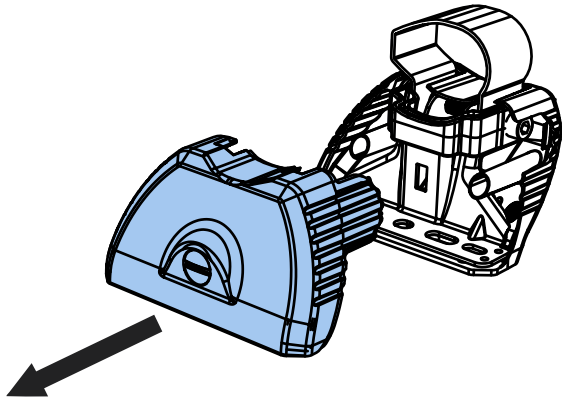

2.

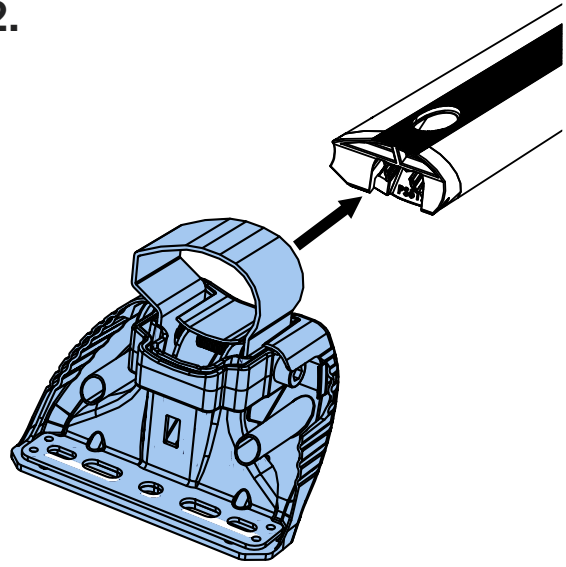


3.

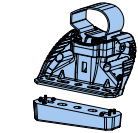


SA397U
PS176



SA397U
PS404

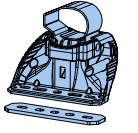


SA397U
PS404

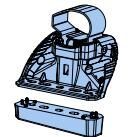


SA397U
PS176

R

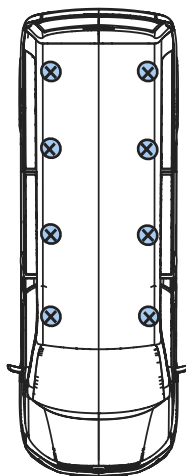


F


SA398U
PS176




SA398U
PS404




SA398U
PS404




SA398U
PS176









4.

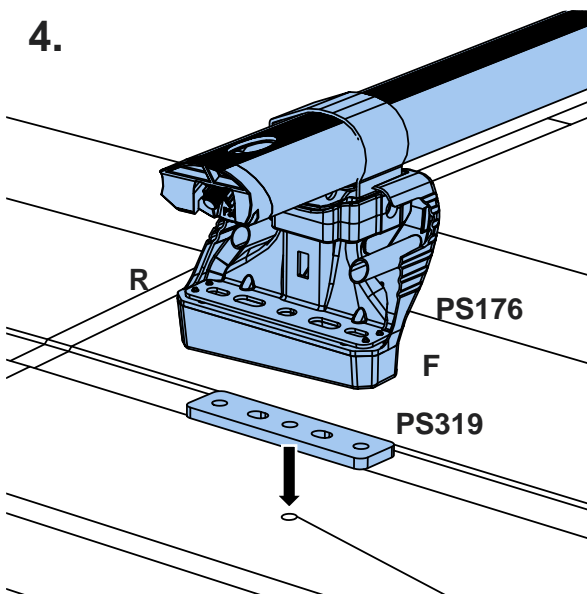


5.

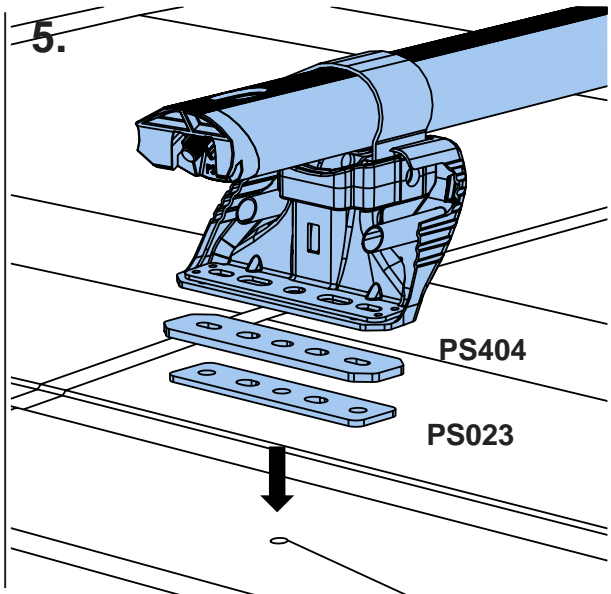


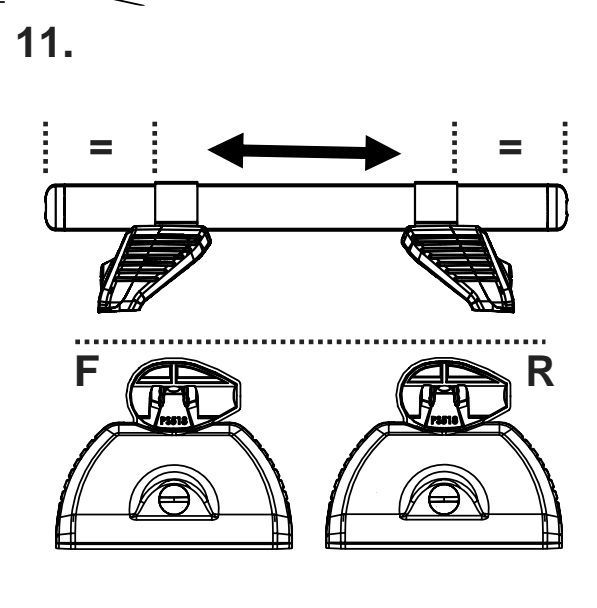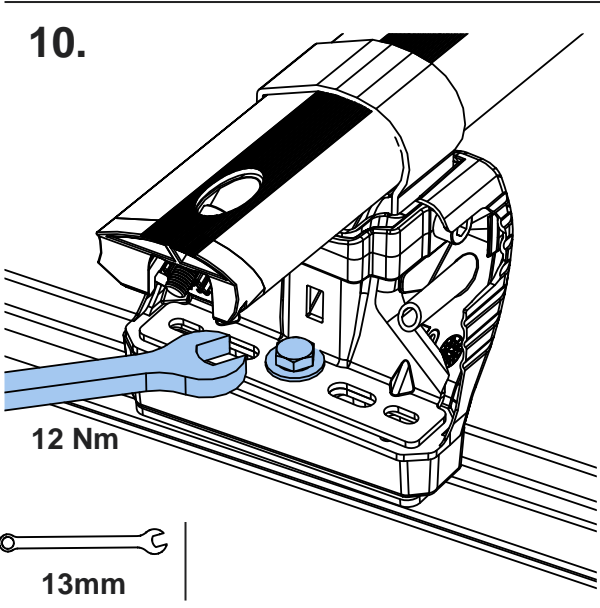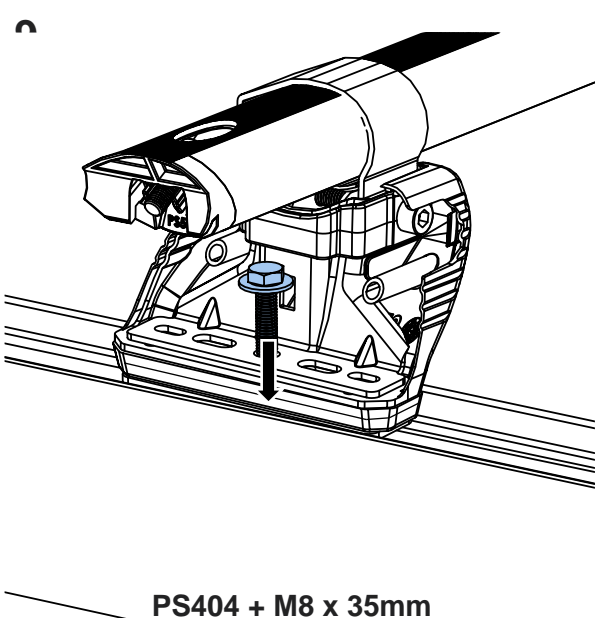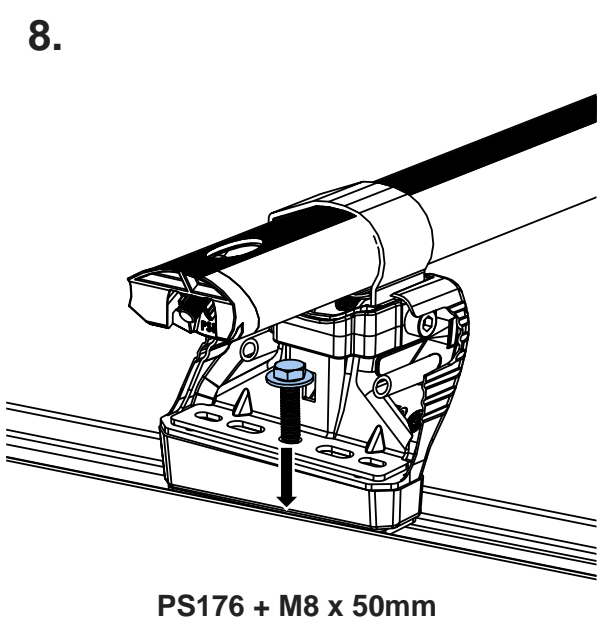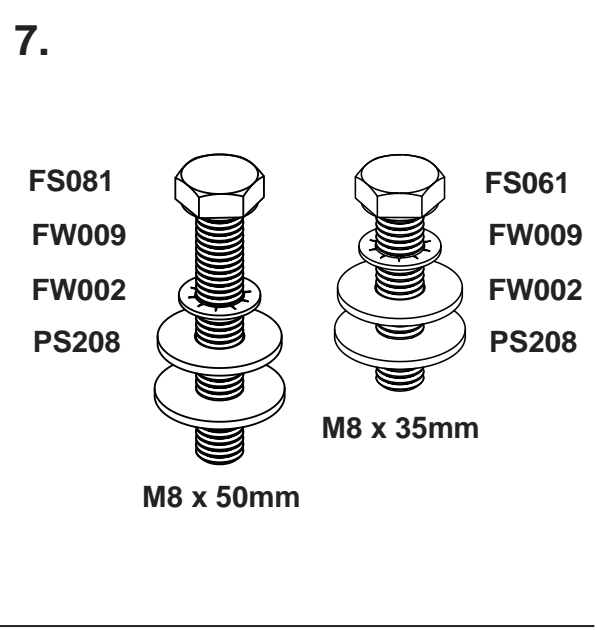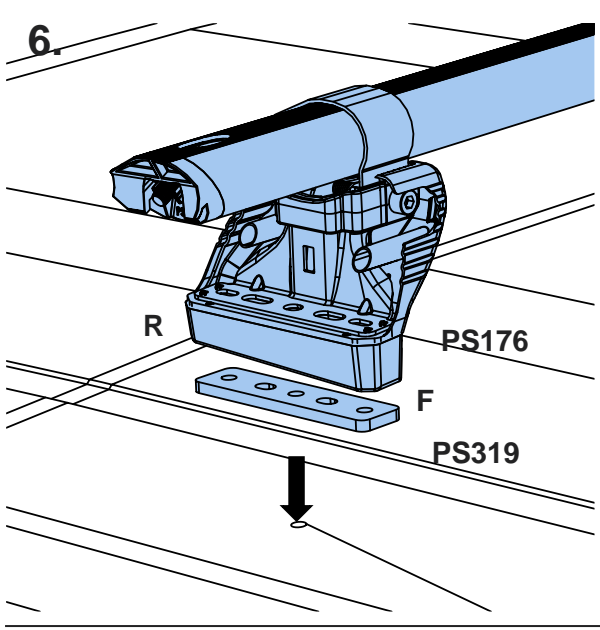


12.

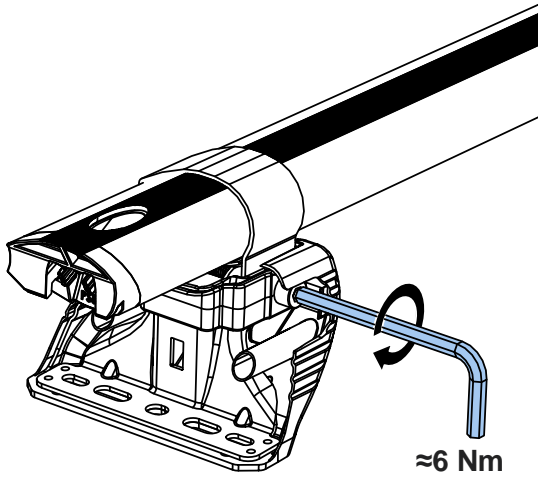




13.

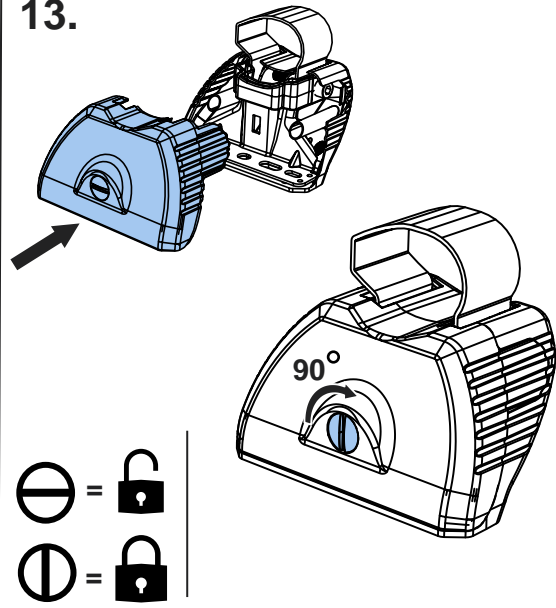




14.

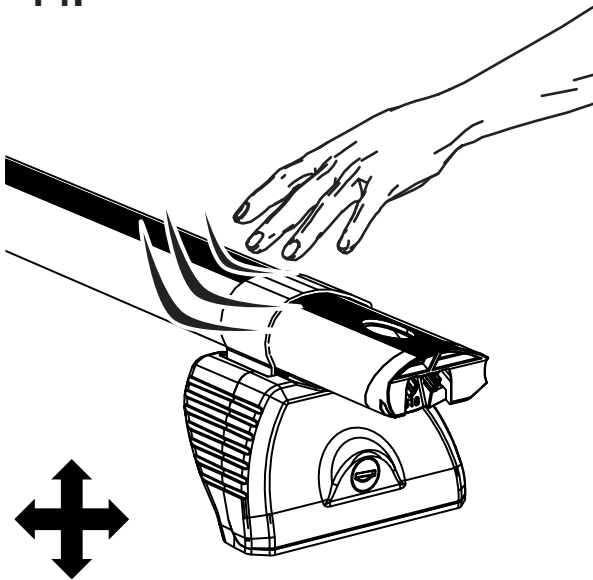


K663/B663- VW Caddy 5 2020- L2, Twin Doors

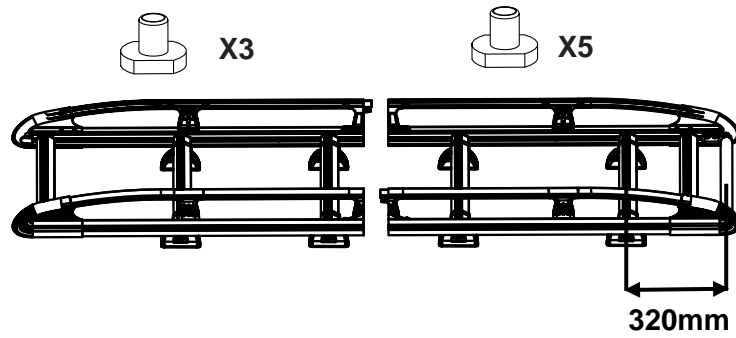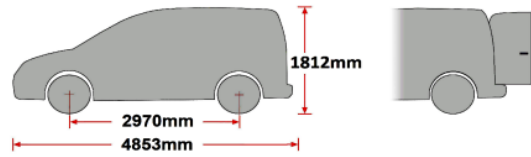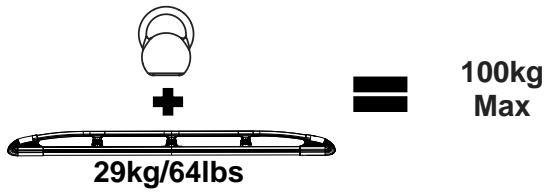


K684/B684- VW Caddy 5 2020- L2, Tailgate

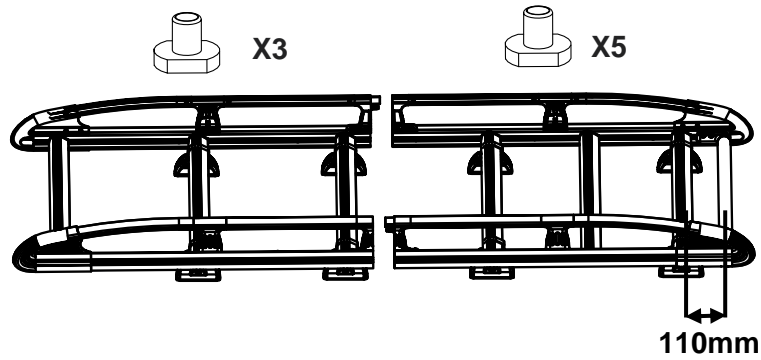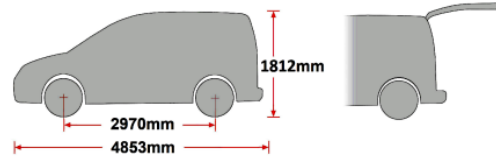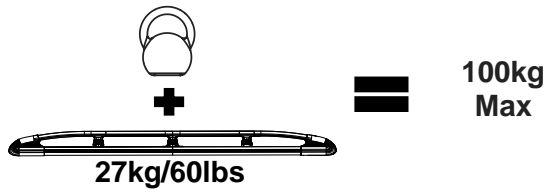


15.

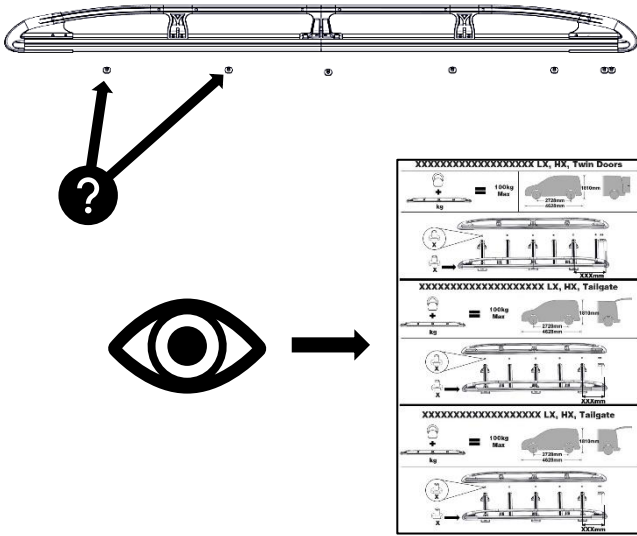


16.

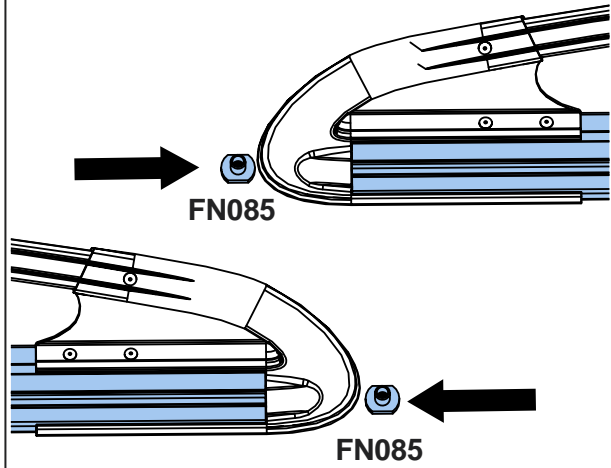


17.

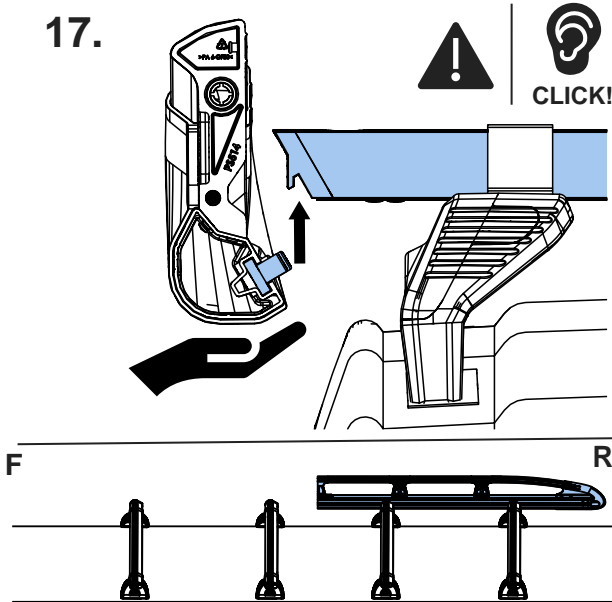


18.






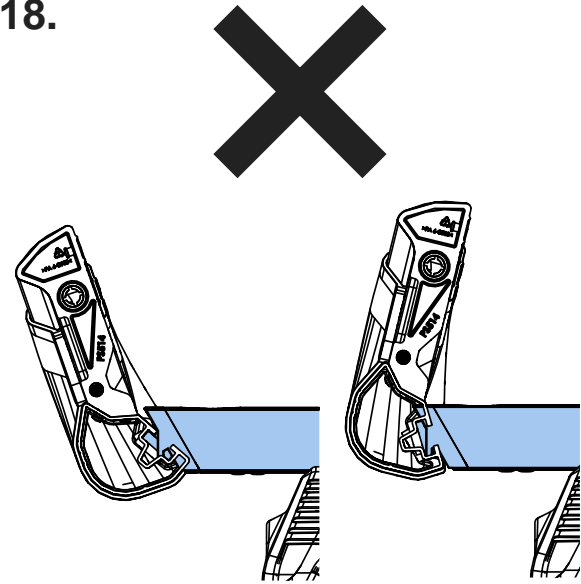


19.

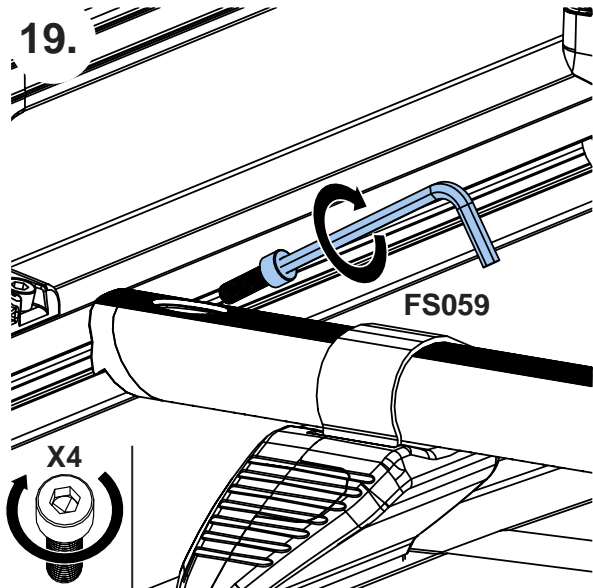


20.

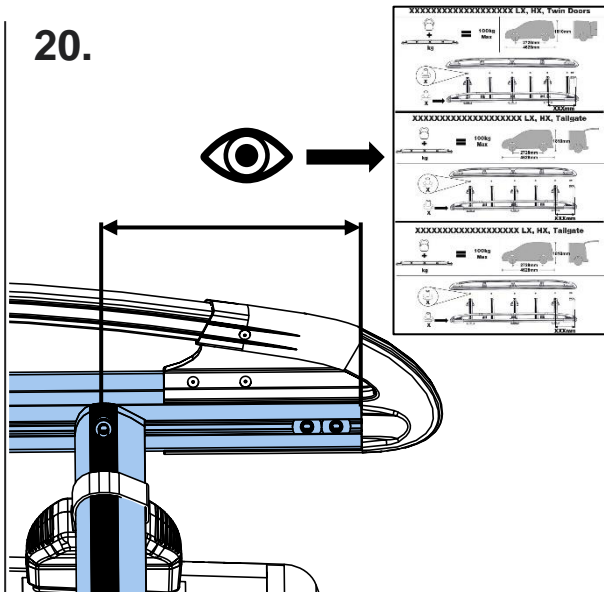


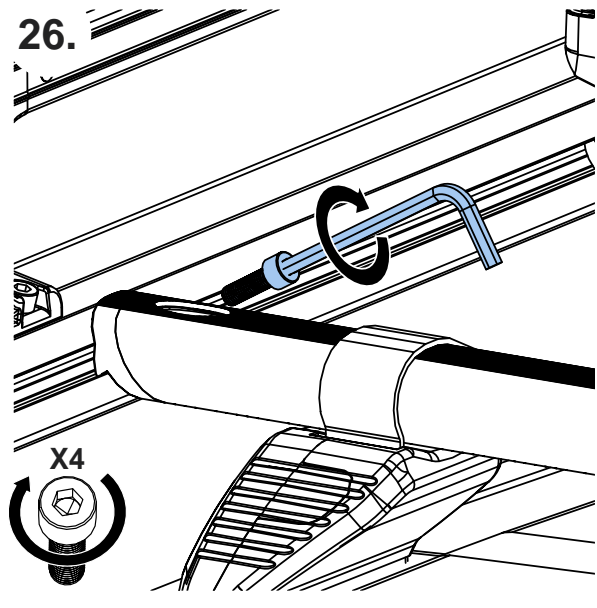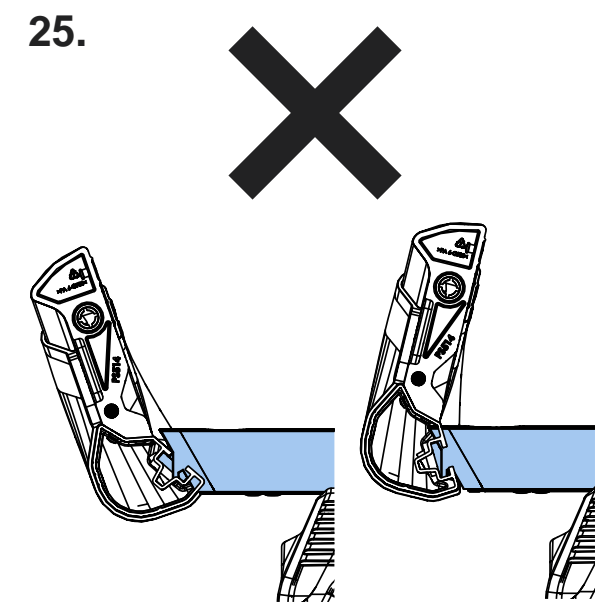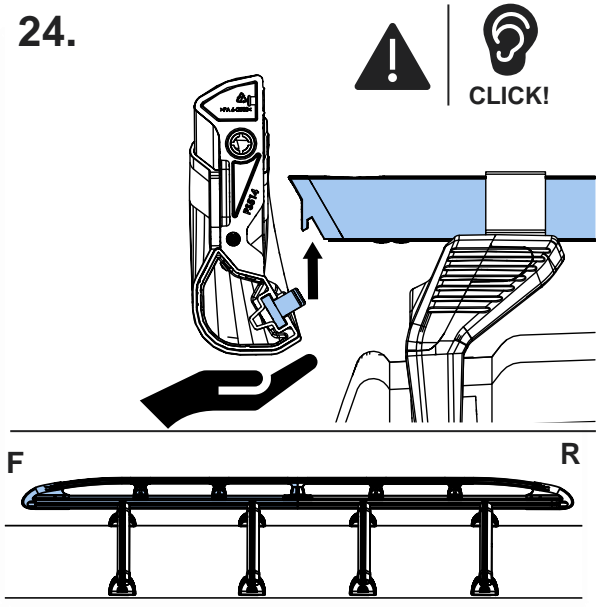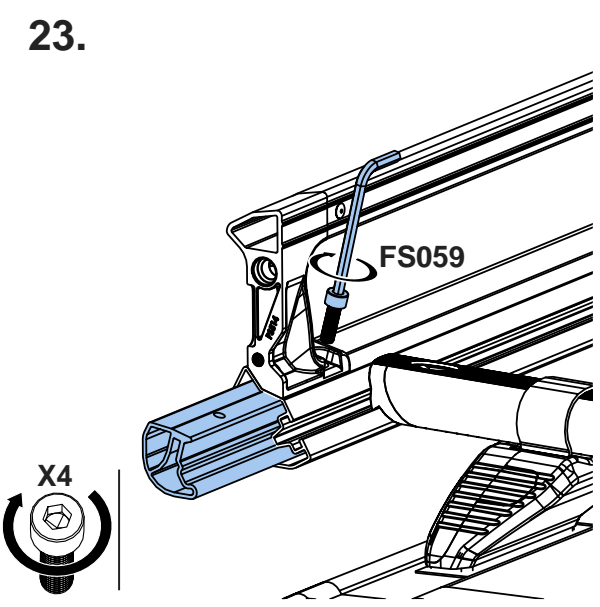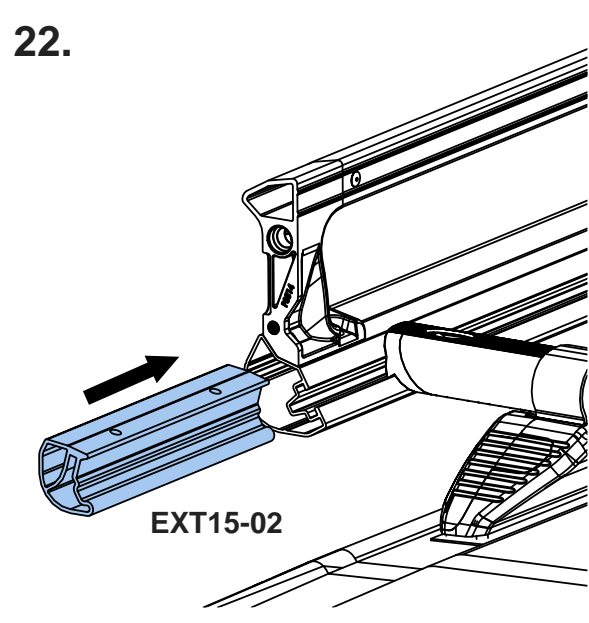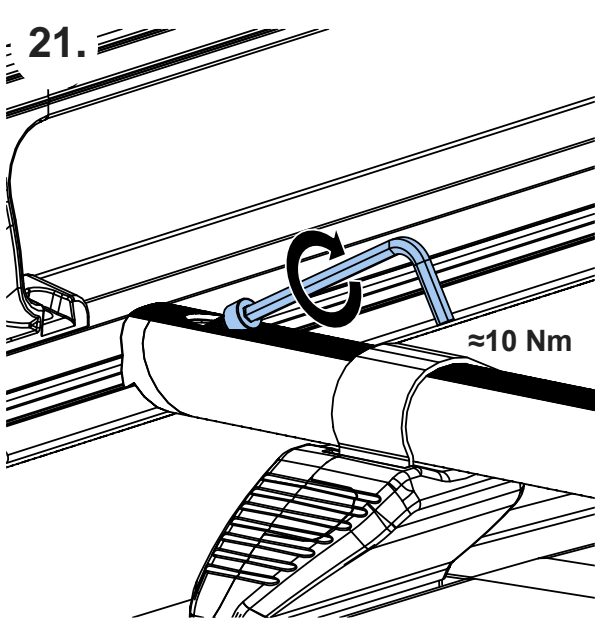


27.

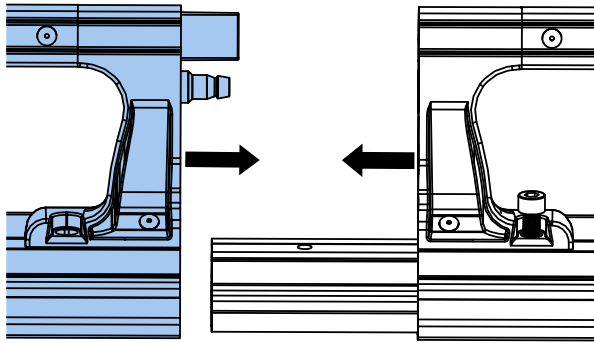


28.

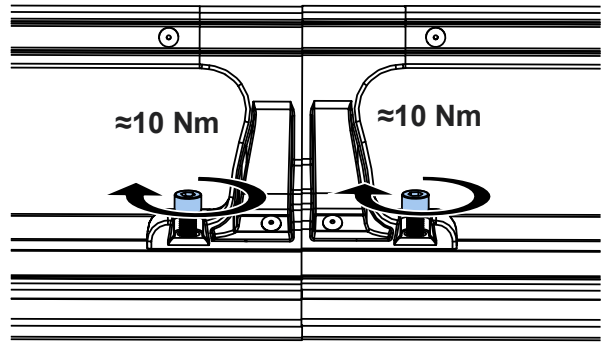



29.

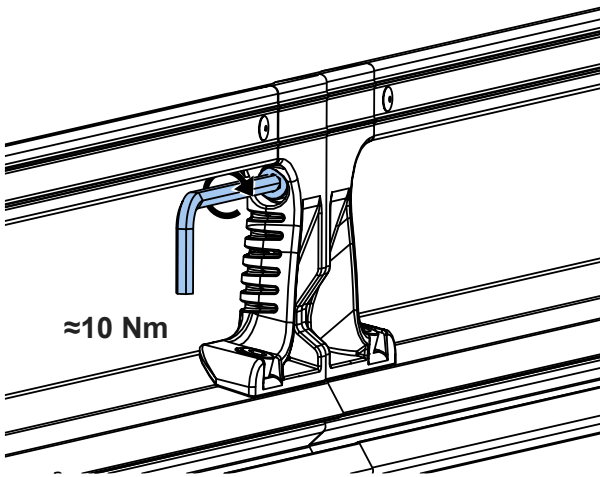


30.

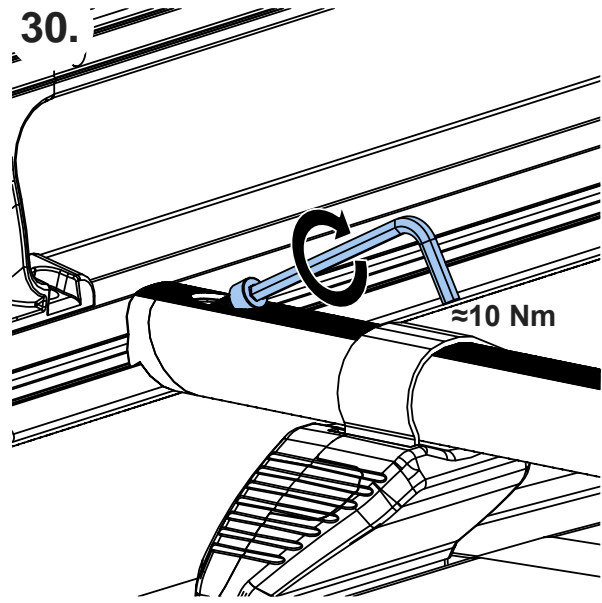


31.

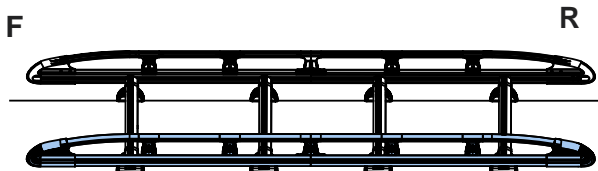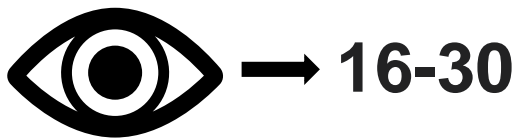


32.

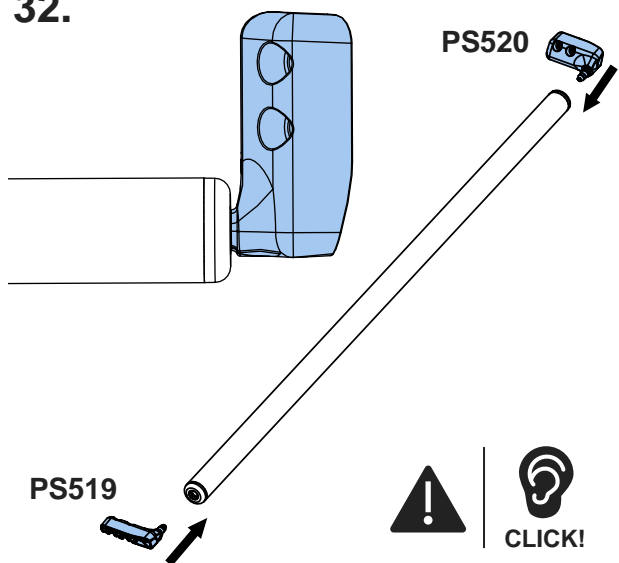


33.

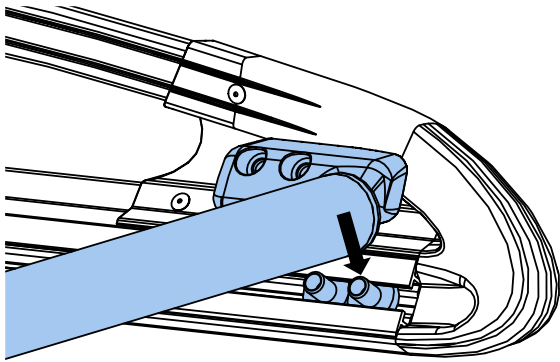


34.

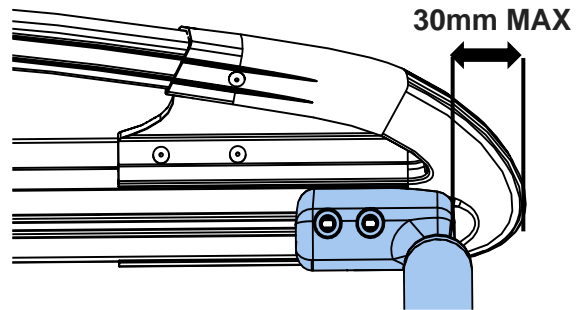


35.

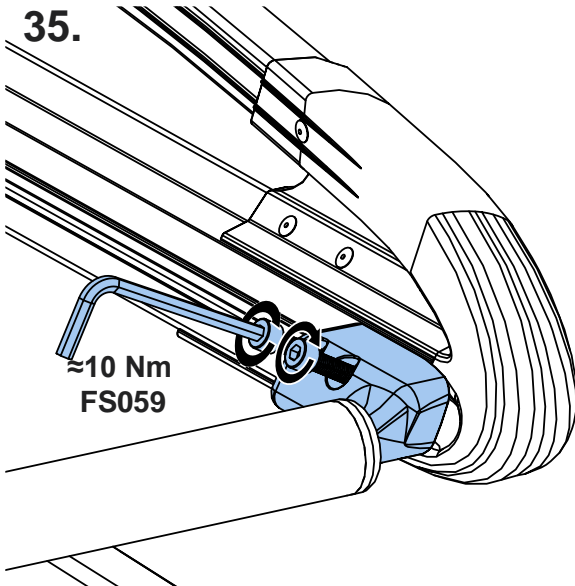


36.

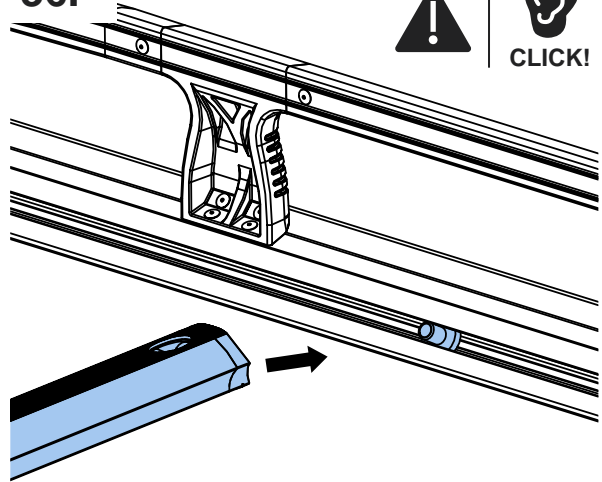


37.

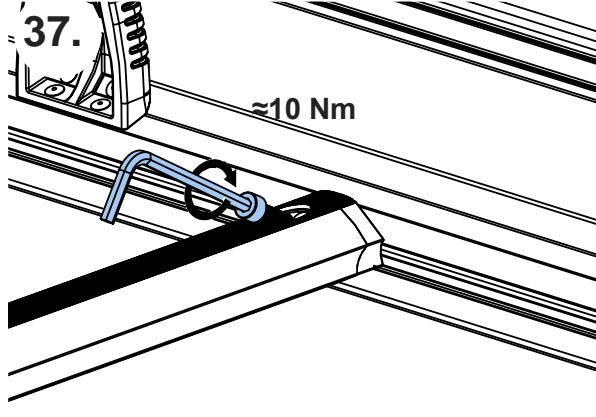


38.

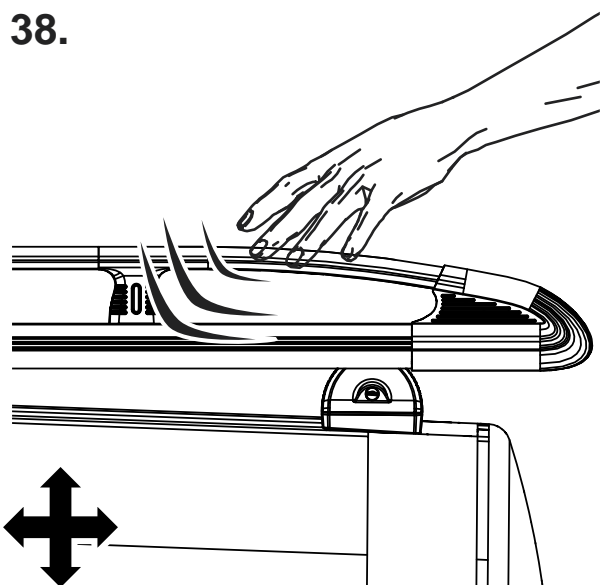

39.

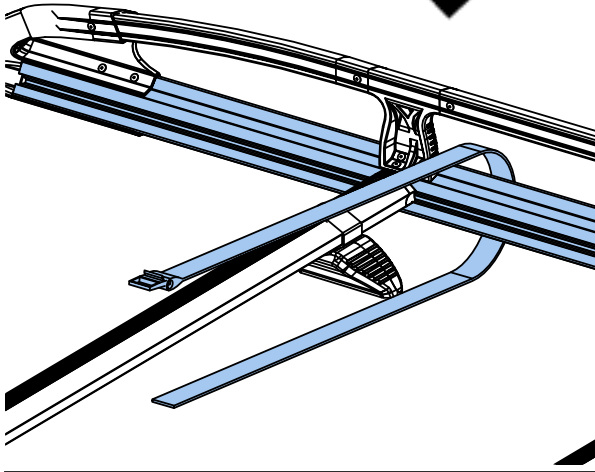


40.

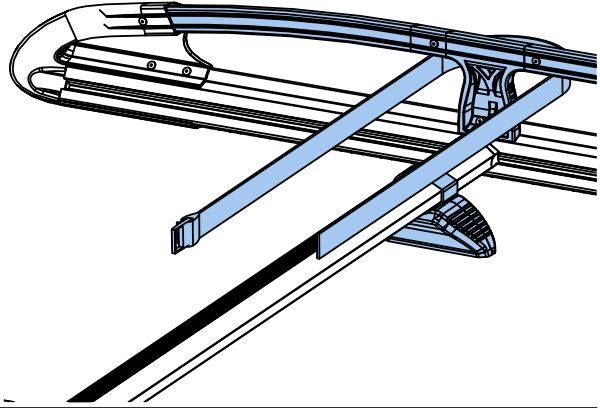

KA3KR

KammRack

Instructions



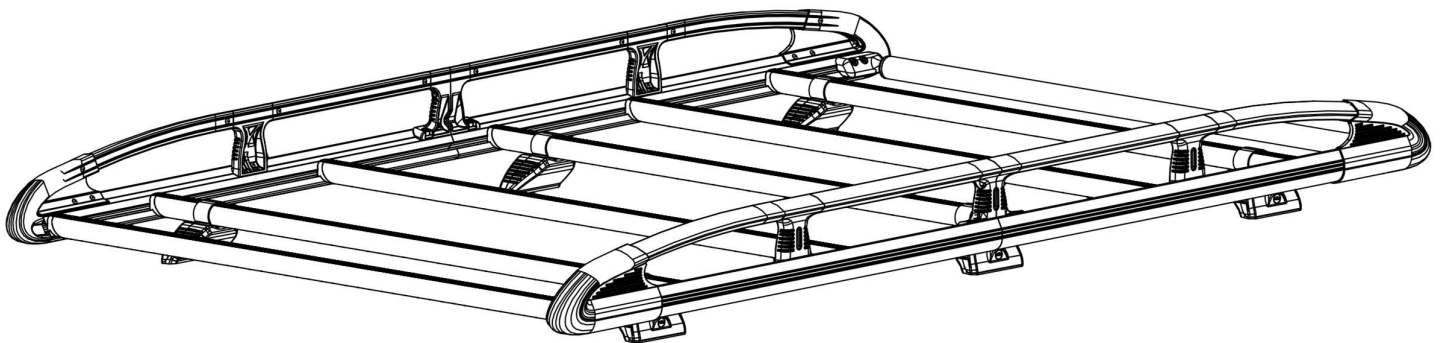


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

KA3KR:


VW Caddy, 2010–

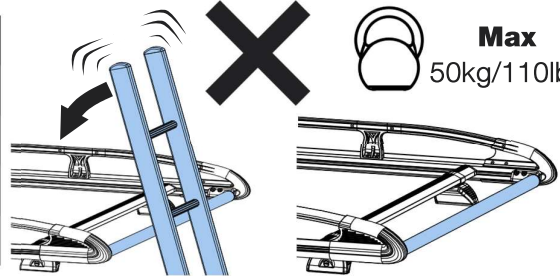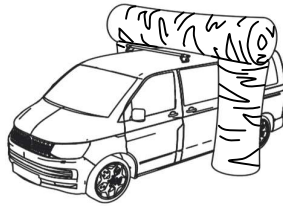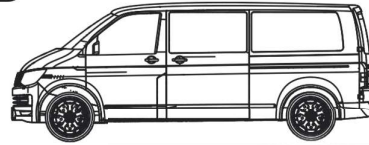


KammRack

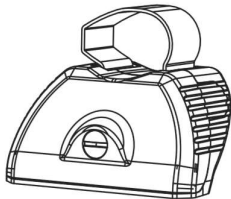

SA397U x 3

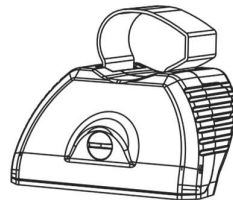

SA398U x 3

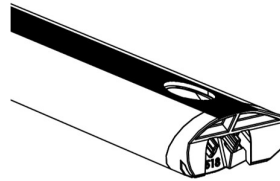


SA428




C04 x 6
optional upgrade

LHS x 2


RHS x 2




PS519 x 1

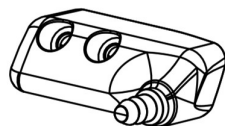


PS520 x 1

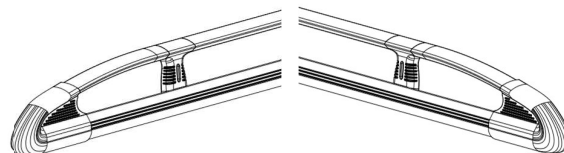

ASF x 1

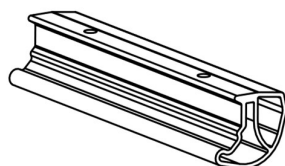


EXT15-02 x 2

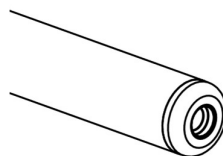


SA436 x 1

Fitting Kit




PS176 x 4




PS023 x 6




FT01 x 1

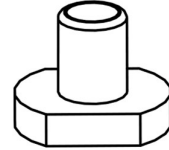


FN085 x 14

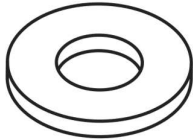

FW002 (M8) x 6

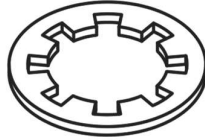

FW009 (M8) x 6

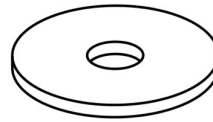

PS260 (M8) x 6



FT05 x 1



FS081
(M8 x 50) x 4




FS062
(M8 x 25) x 2




FS059
(M8 x 25) x 14


1.

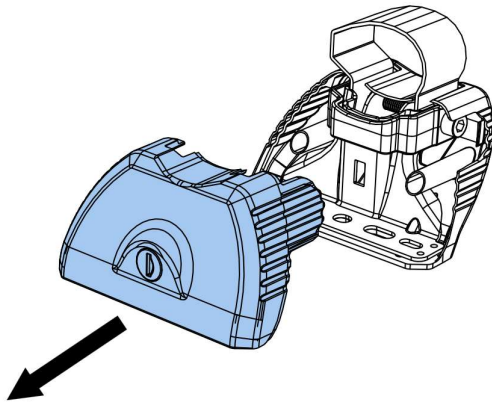

2.

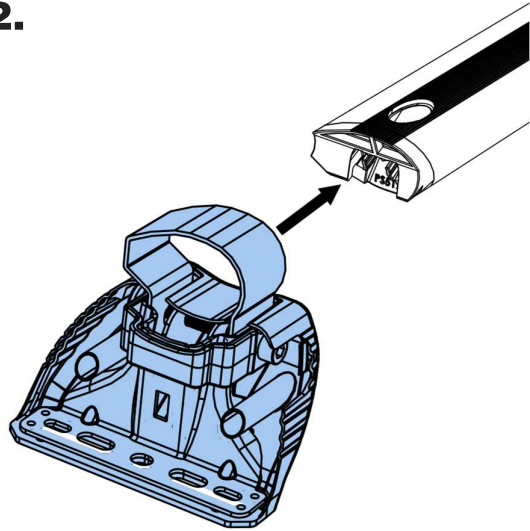


3.

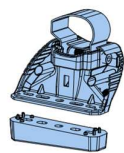

SA397U
PS176




SA397U

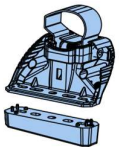


SA397U
PS176

R

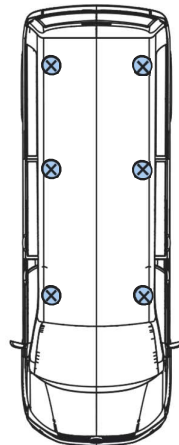

F


SA398U
PS176

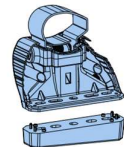


SA398U



SA398U
PS176

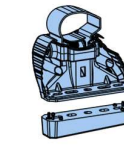

4.

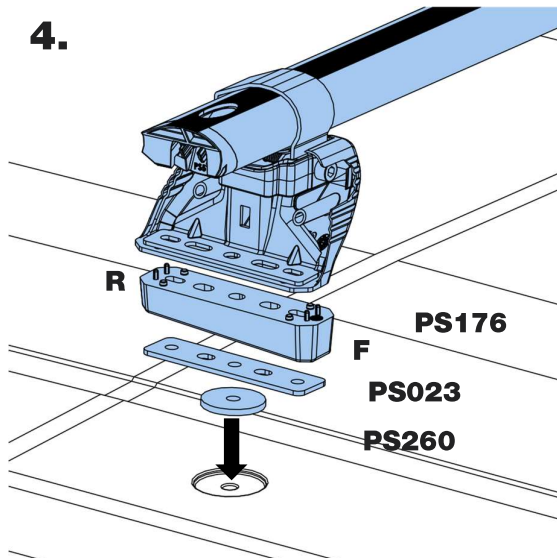


PS176

PS023







PS260

5.

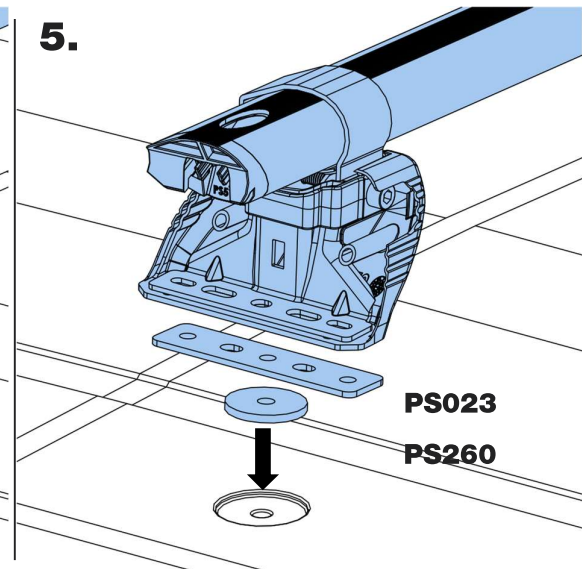


PS023


PS260

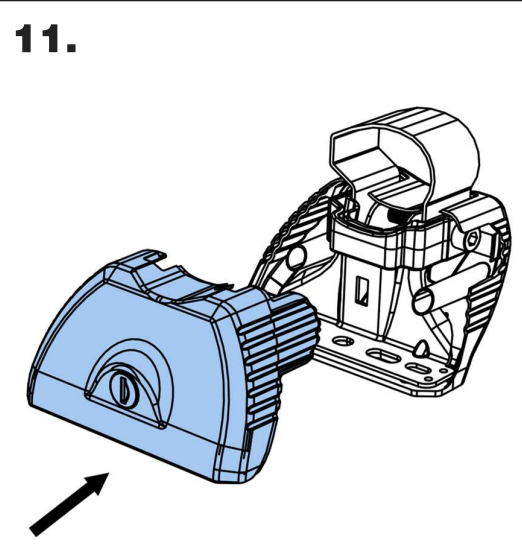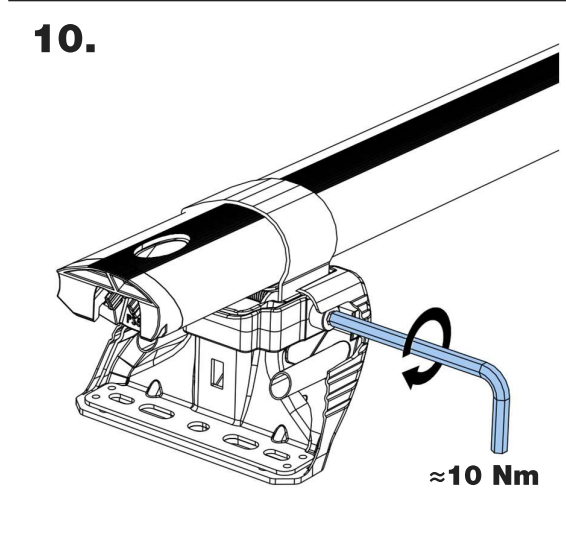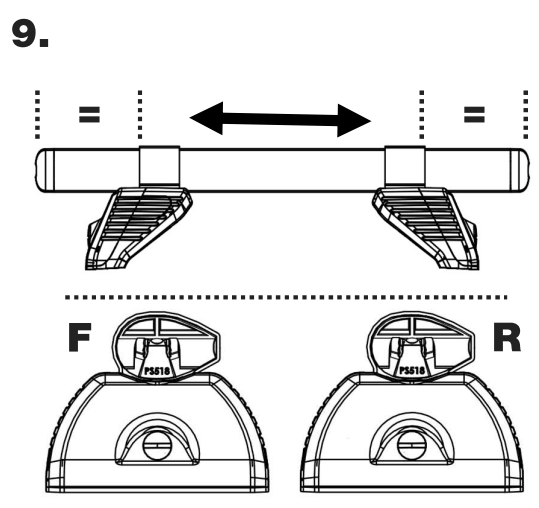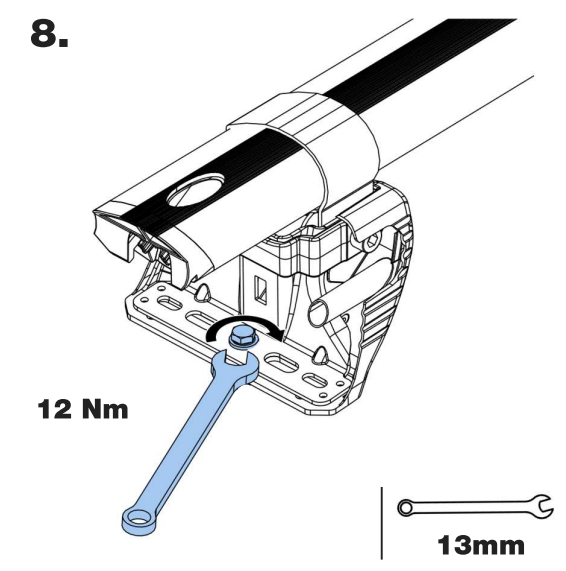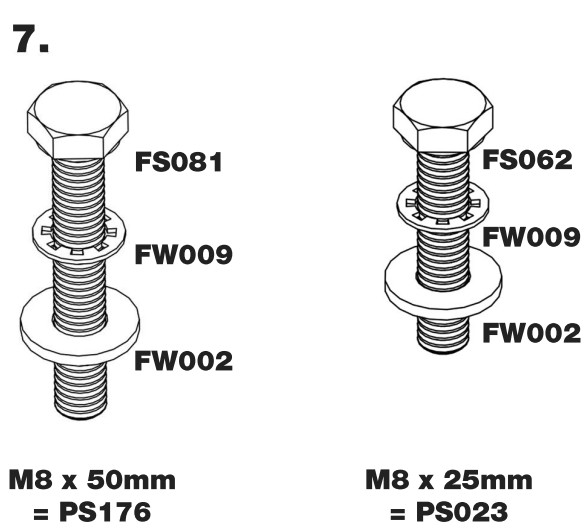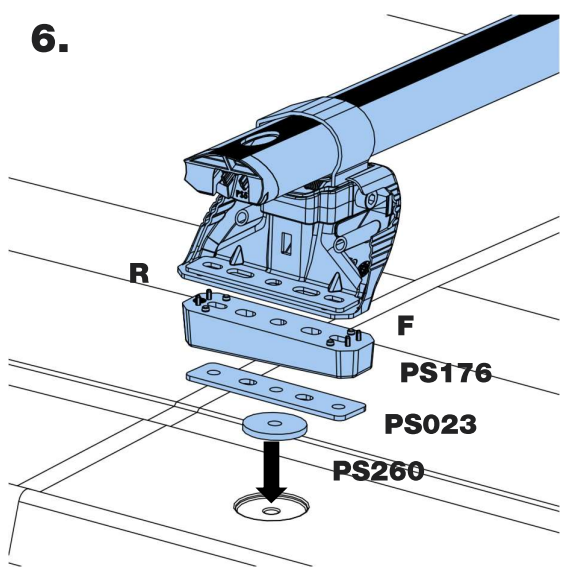




12.

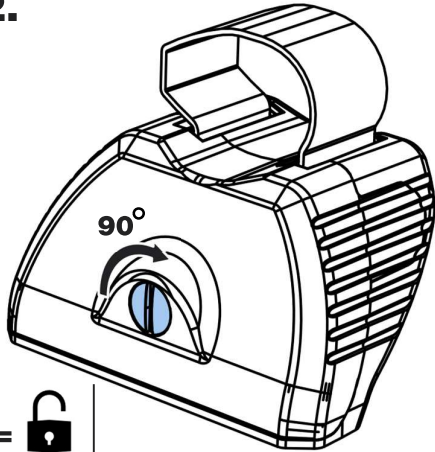




13.

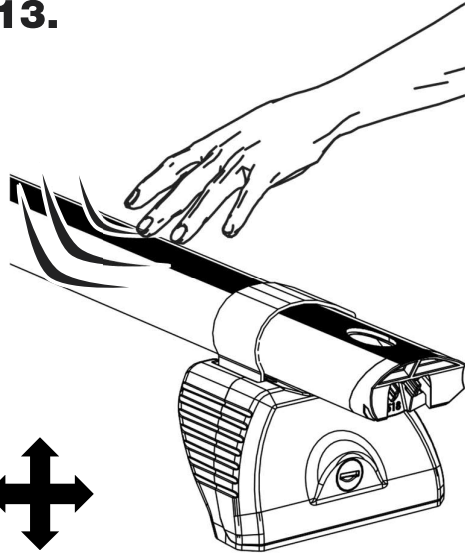


K608- Caddy 2010- L1, H1, Twin Doors

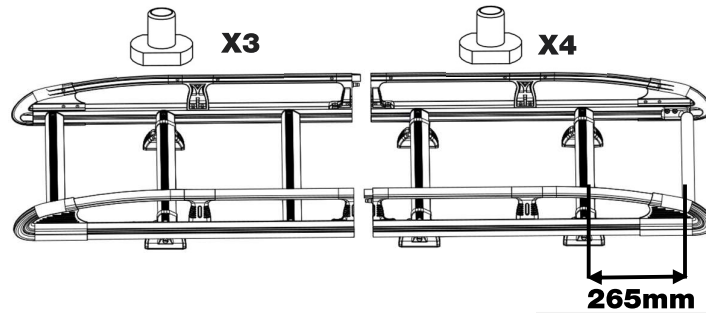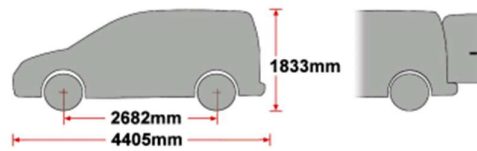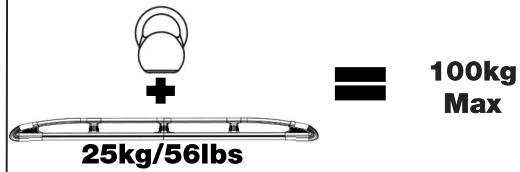



K609- Caddy 2010-2015- L1, H1, Tailgate

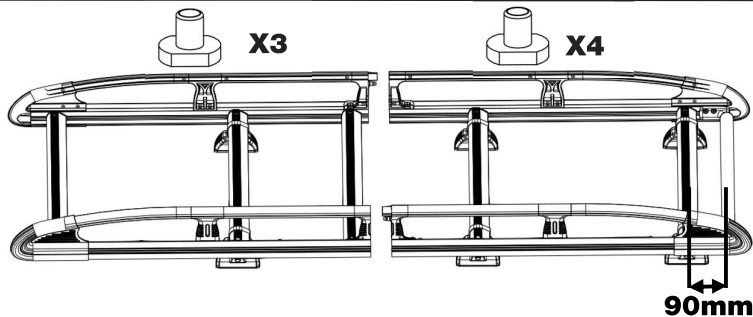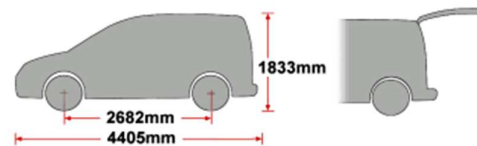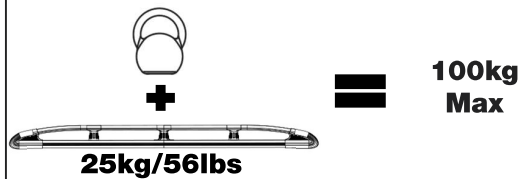


K609- Caddy 2015- L1, H1, Tailgate

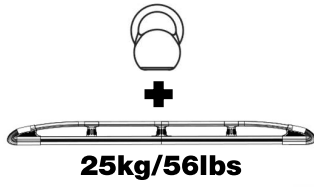


+ **=** **100kg**
Max

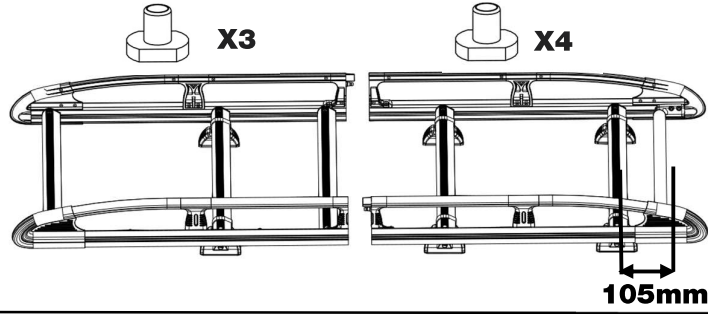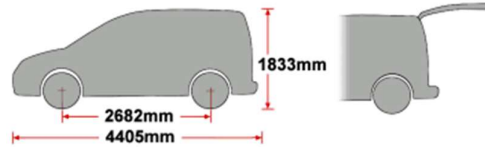


14.

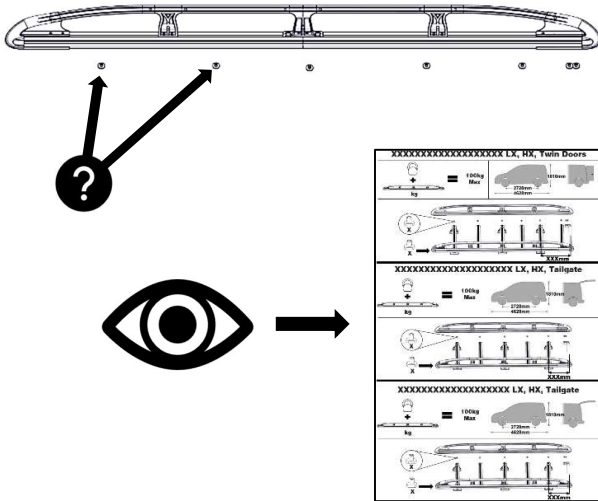


15.

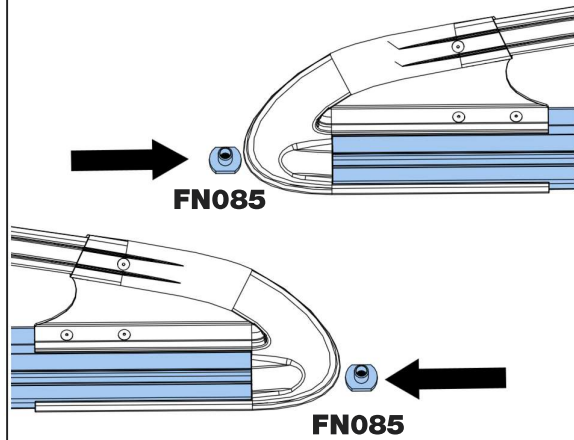


16.

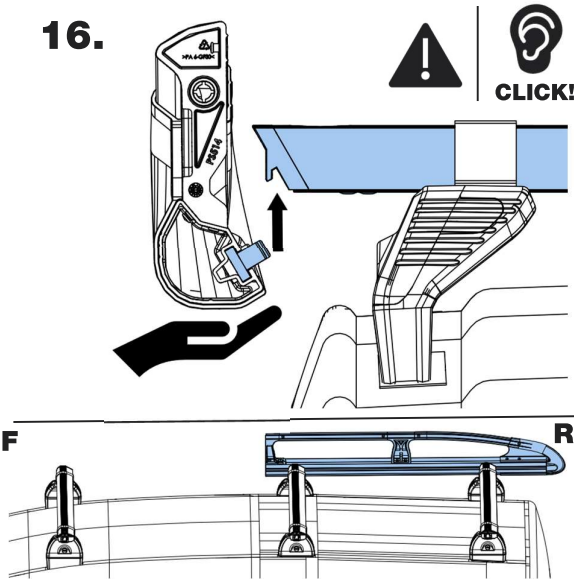


17.






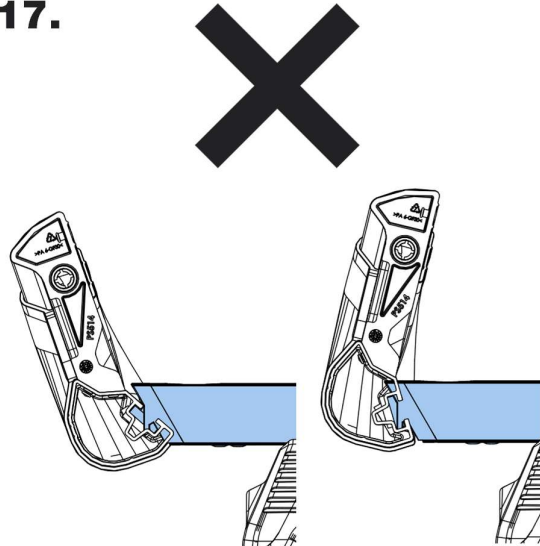


18.

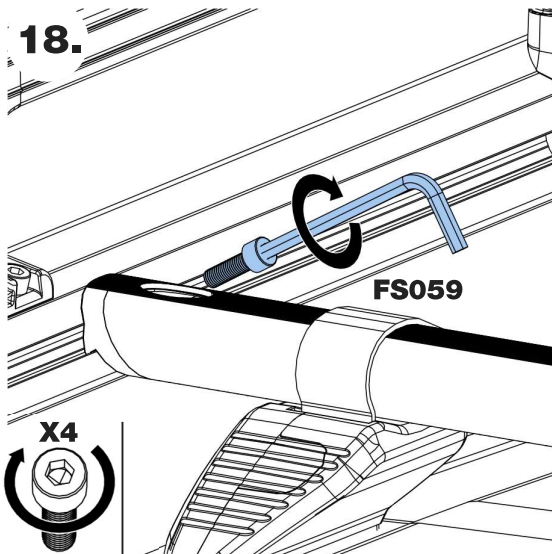


19.

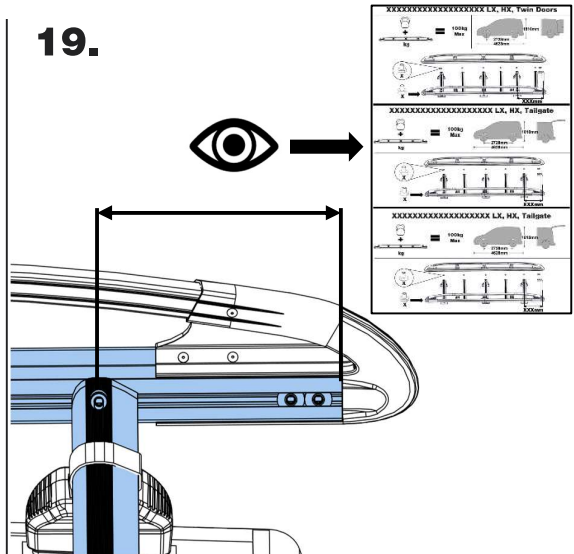


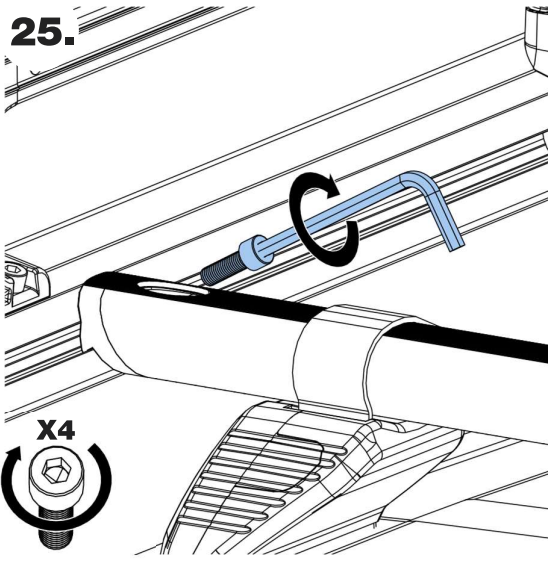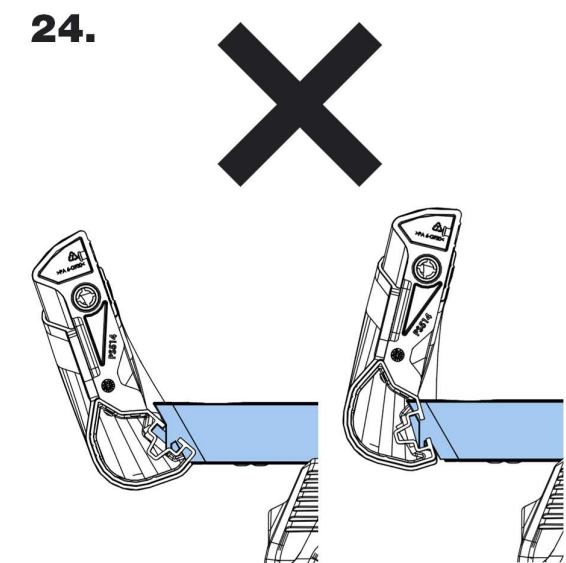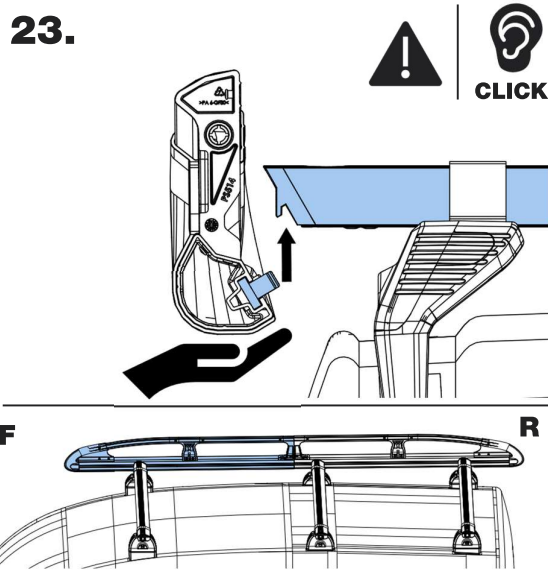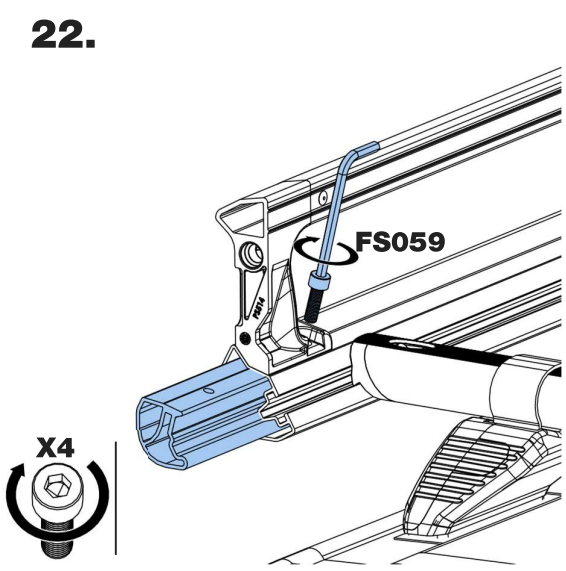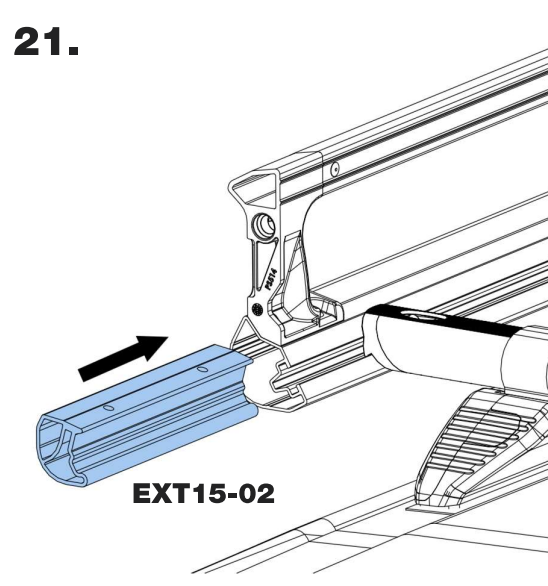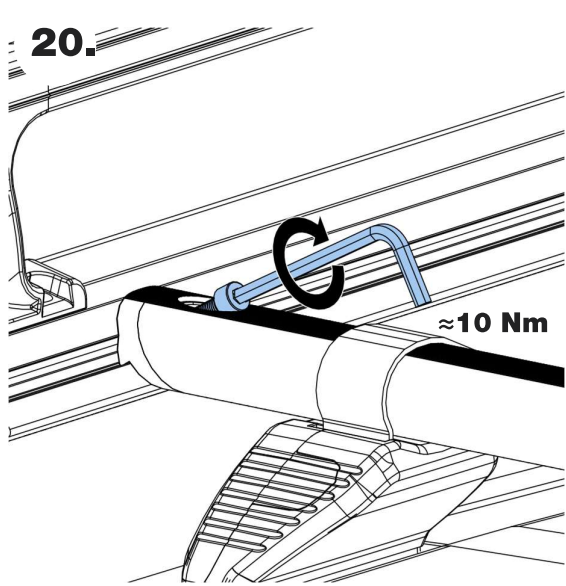


26.

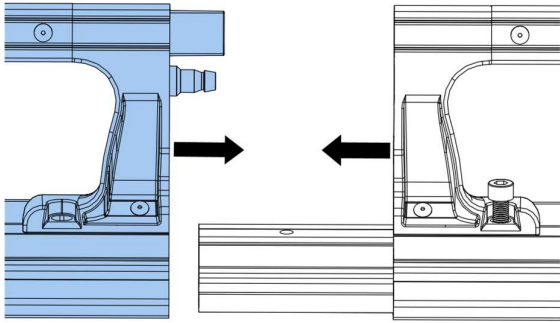


27.

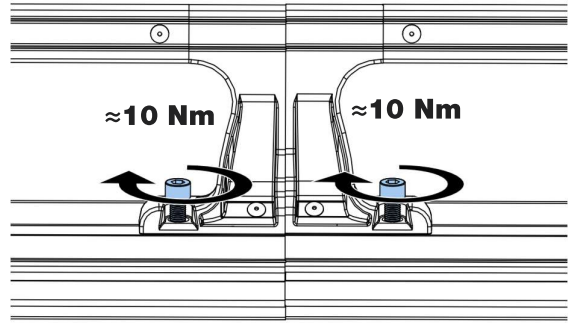


28.

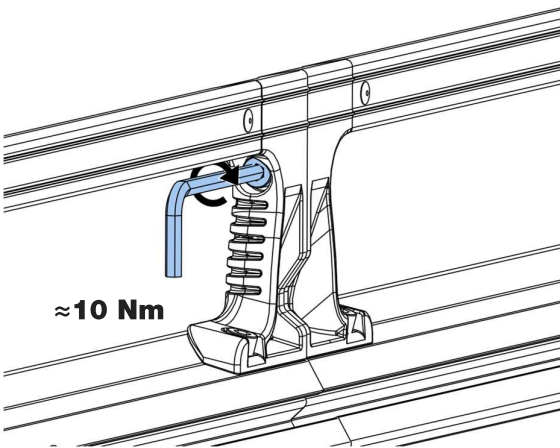



29.








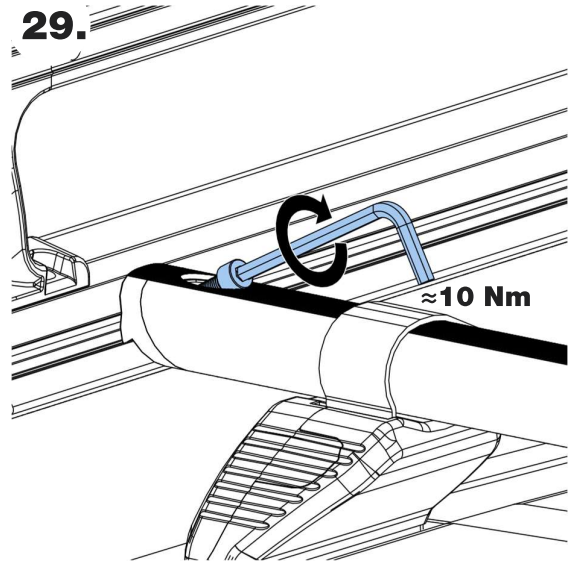


30.

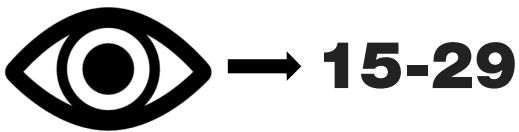


31.

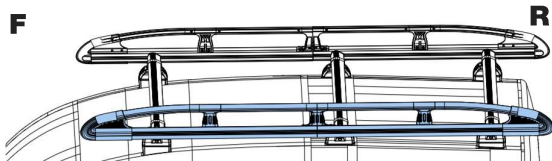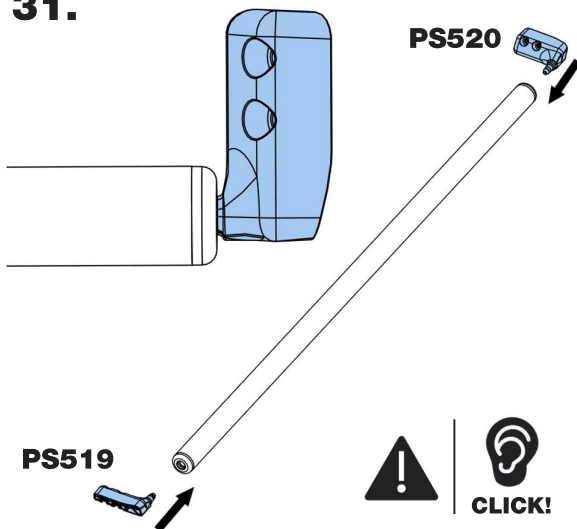


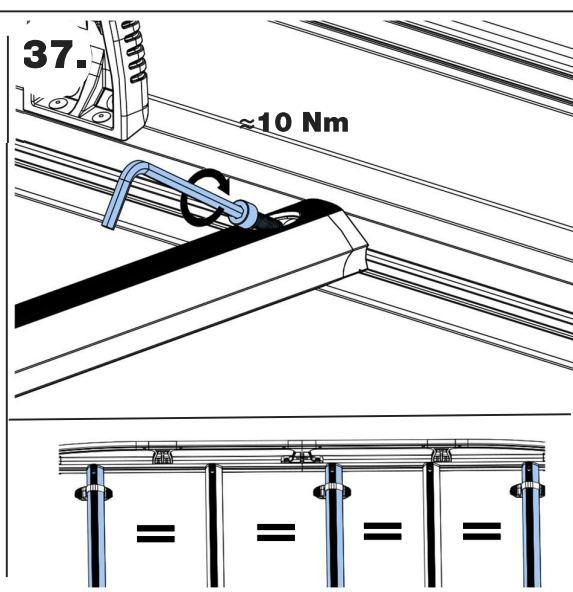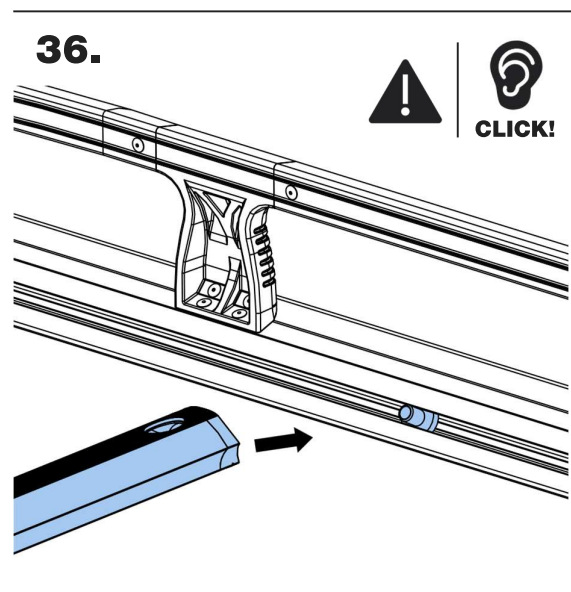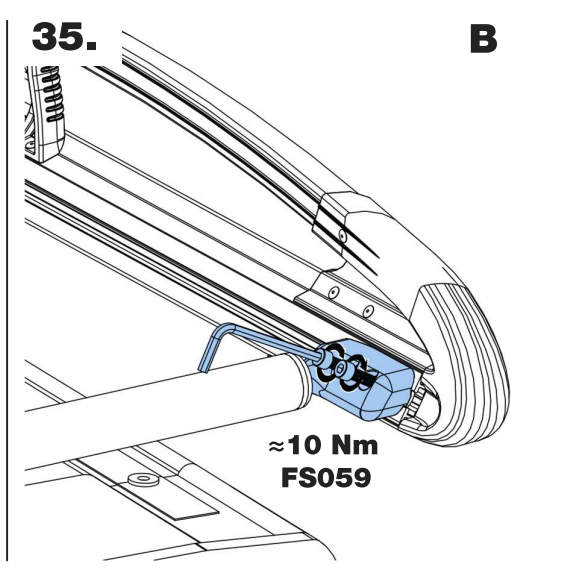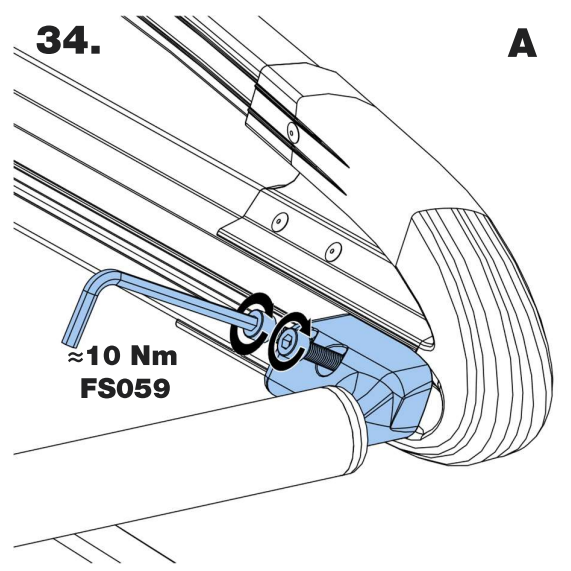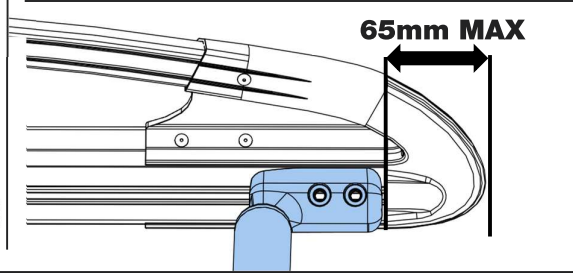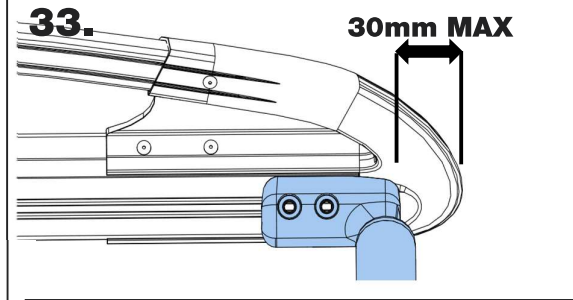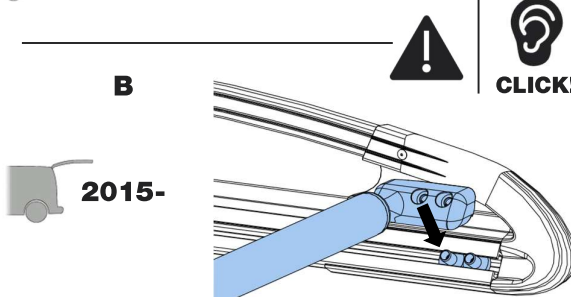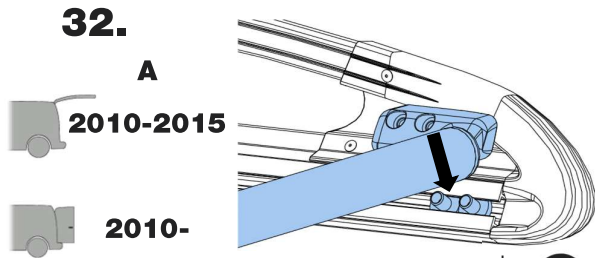


38.

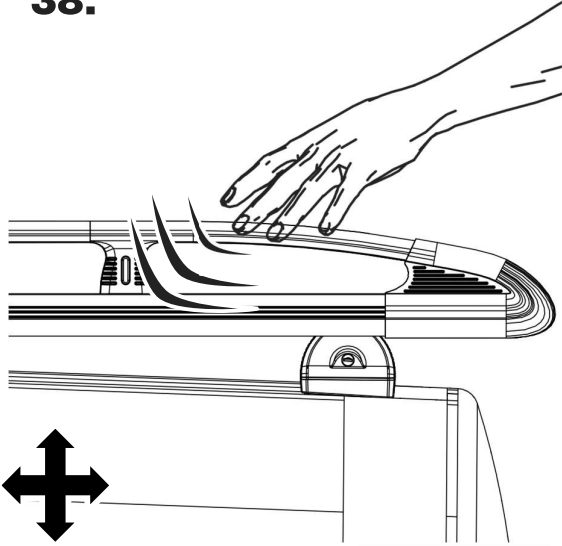

39.

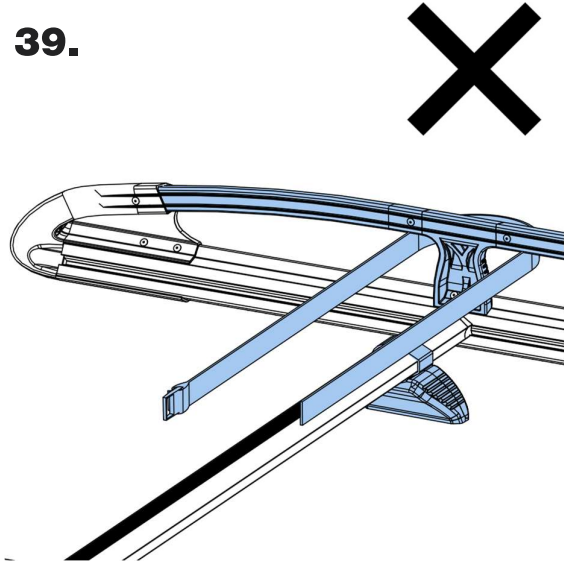


40.

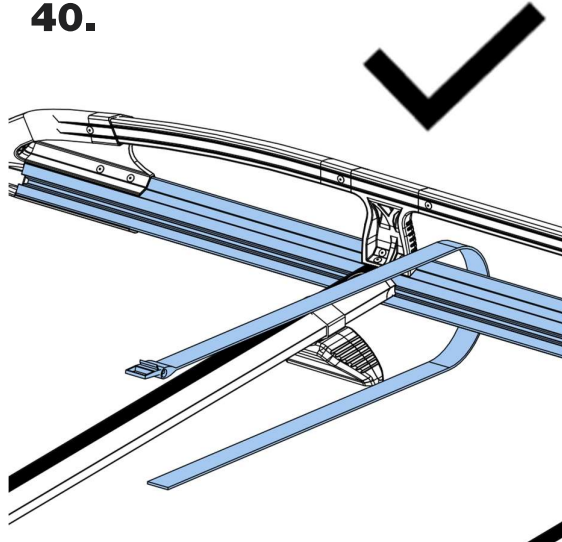

KB4KR

KammRack

Instructions



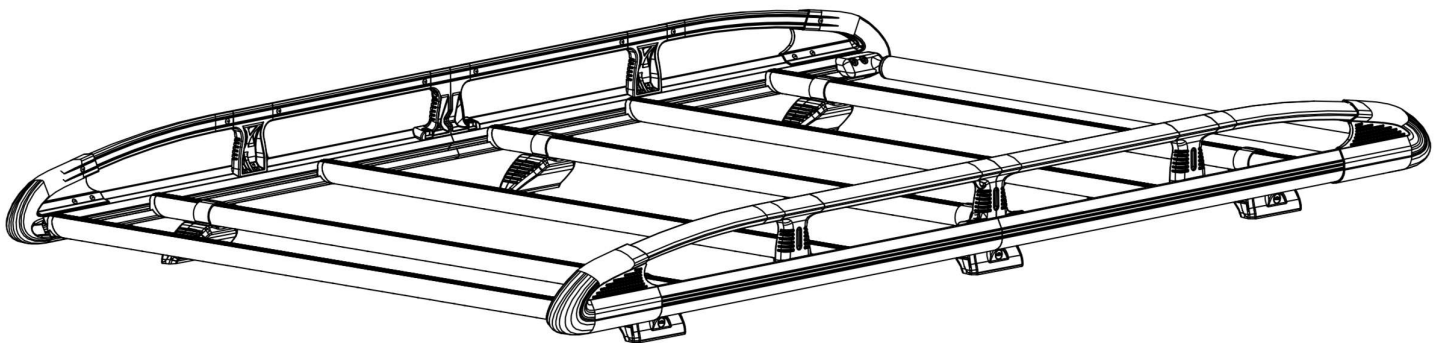


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

KB4KR:


VW Caddy, 2010 –

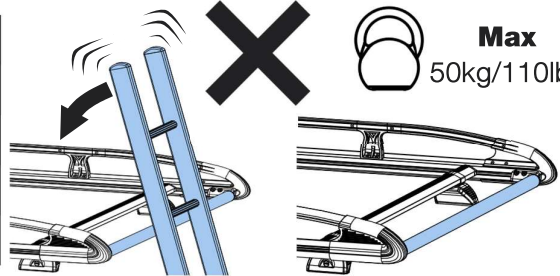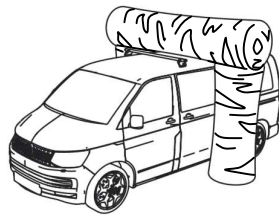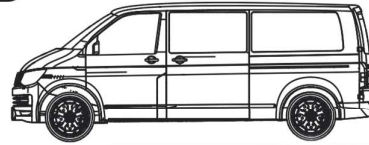


KammRack

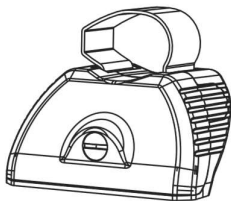

SA397U x 4

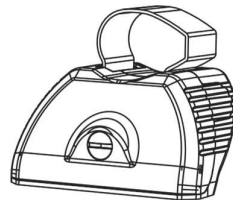


SA398U x 4

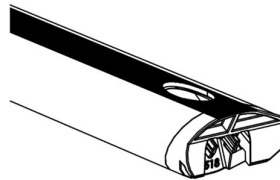


SA428



C04 x 8
optional upgrade




PS519 x 1

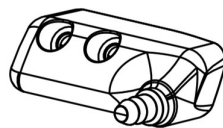


PS520 x 1

LHS x 2


RHS x 2

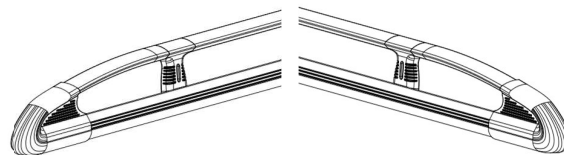

ASF x 1

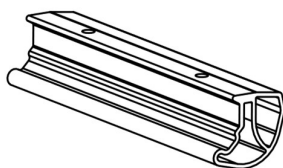


EXT15-02 x 2

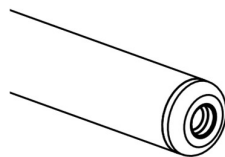


SA436 x 1

Fitting Kit




PS176 x 4




PS023 x 8




FT01 x 1

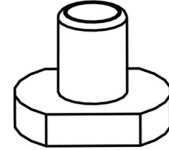


FN085 x 16

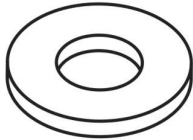

FW002 (M8) x 8

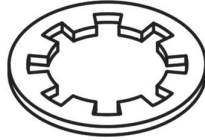


FW009 (M8) x 8

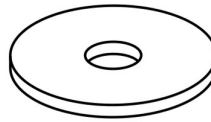

PS260 (M8) x 8



FT05 x 1



FS081
(M8 x 50) x 4




FS062
(M8 x 25) x 4




FS059
(M8 x 25) x 16

1.

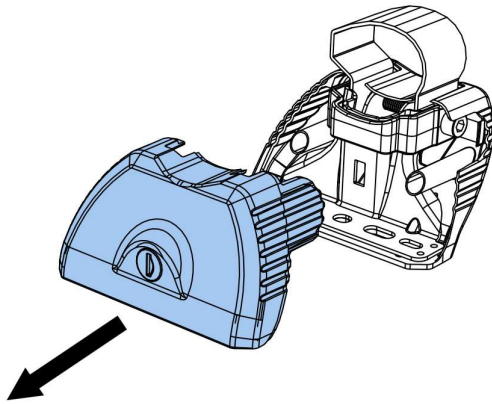


2.

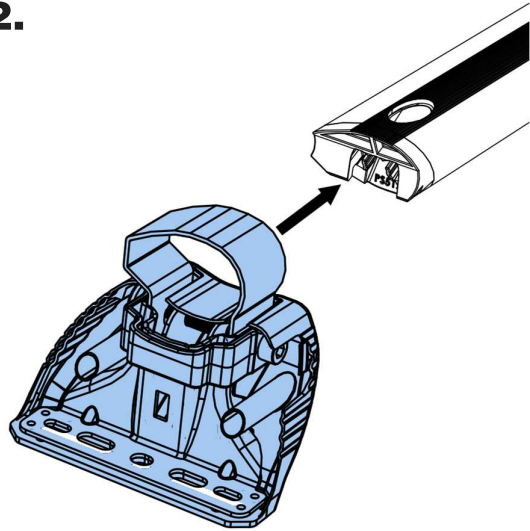

3.




R

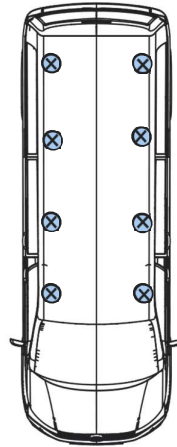


F









4.


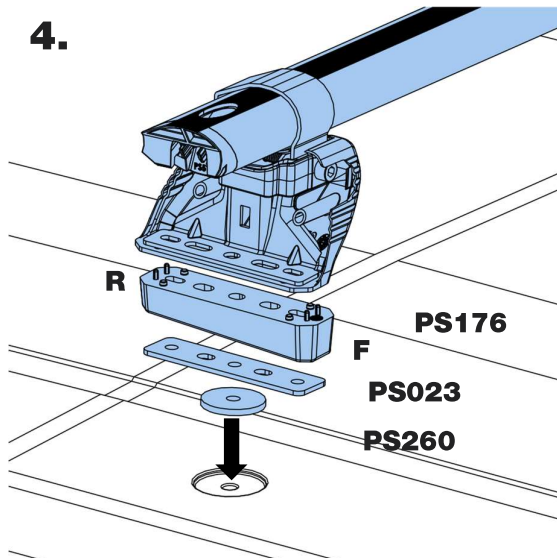


5.

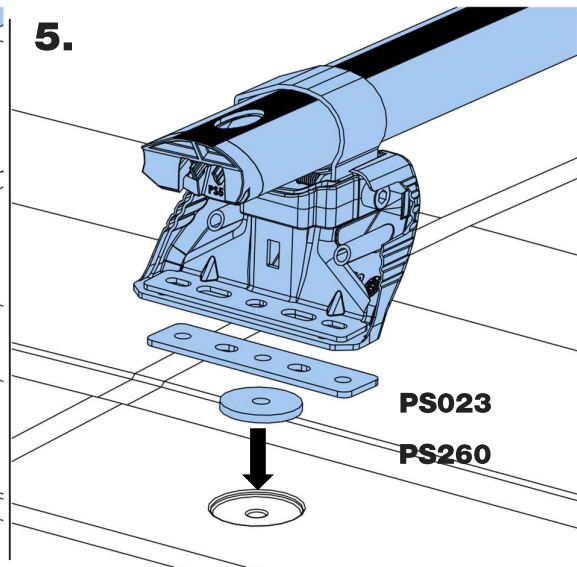


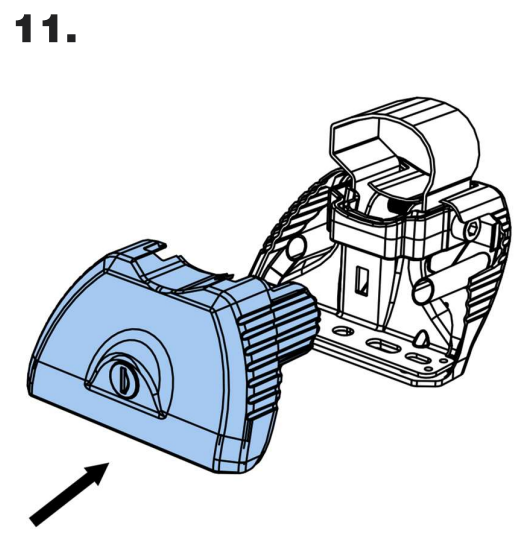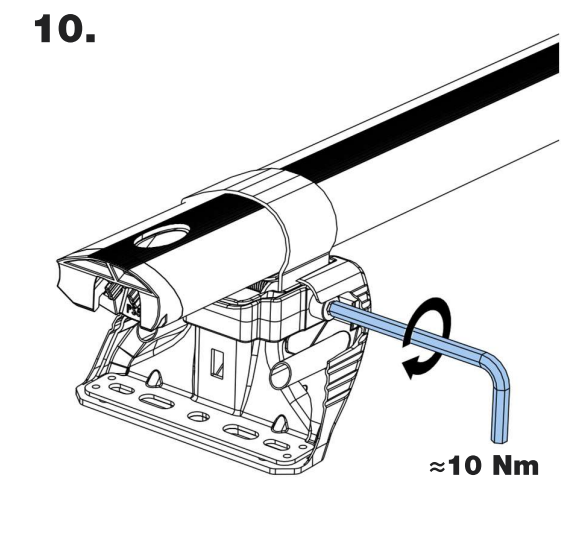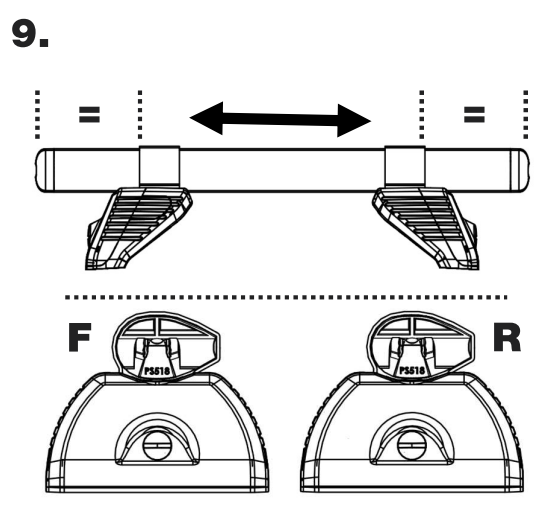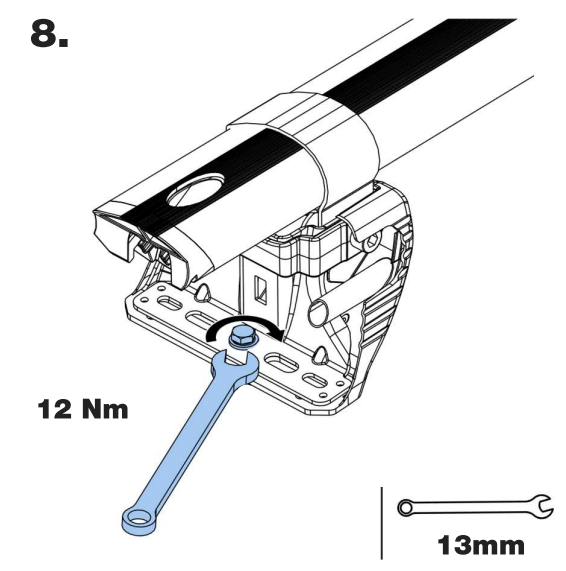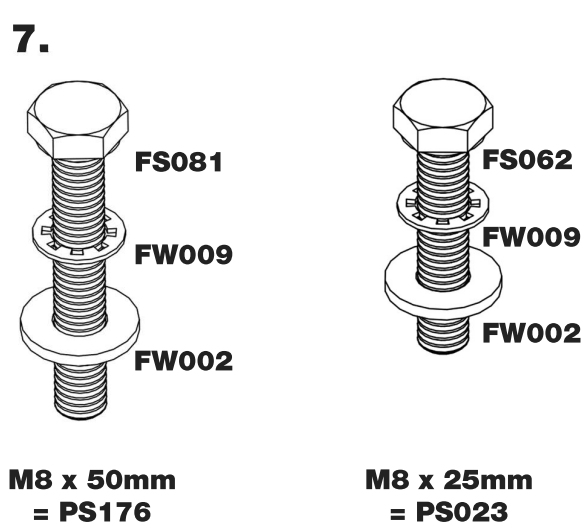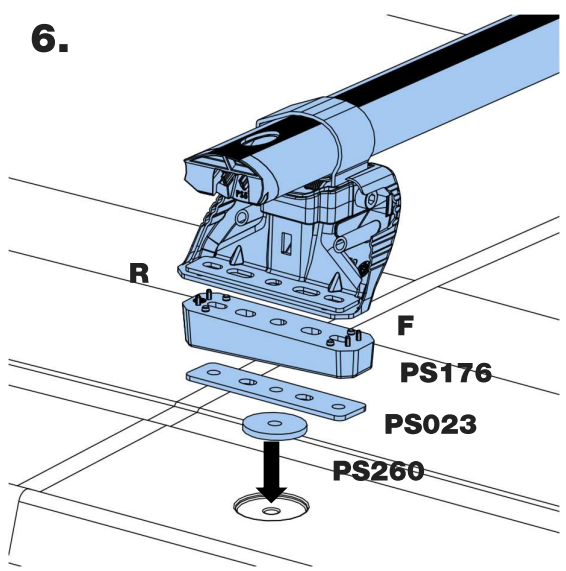


12.

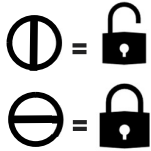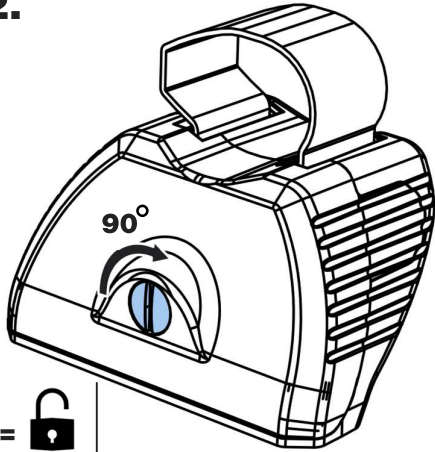



13.

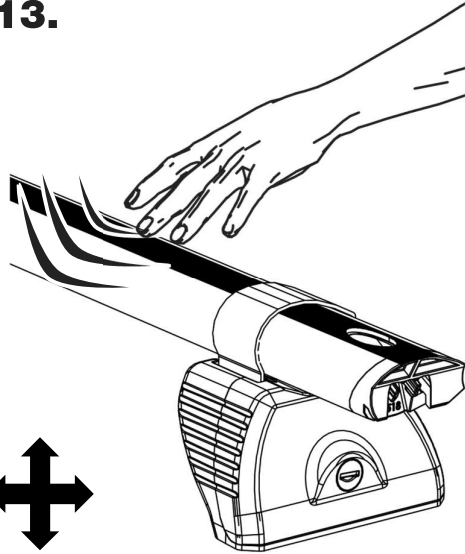


K610- Caddy Maxi 2010- L2, H1, Twin Doors

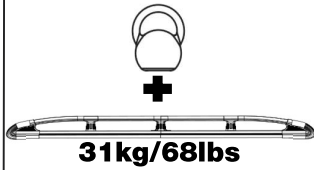



100kg Max

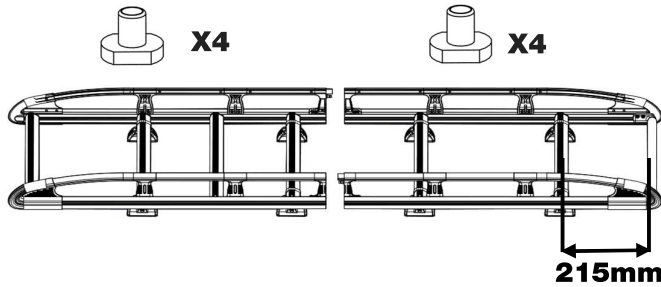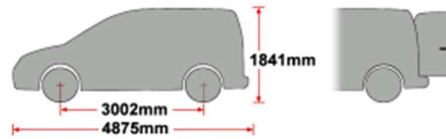




K611- Caddy Maxi 2010-2015- L2, H1, Tailgate

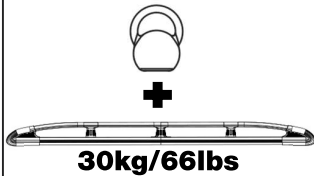


100kg Max

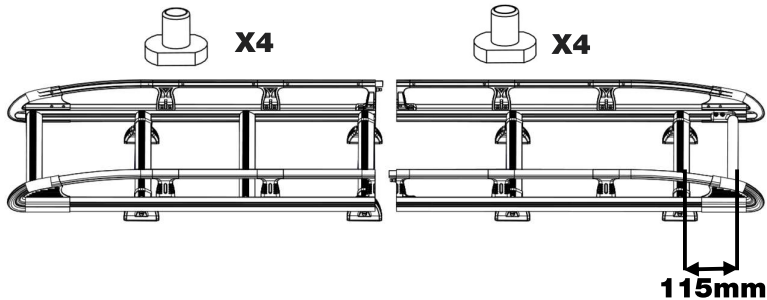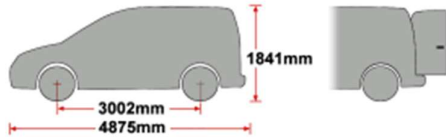


K611- Caddy Maxi 2015- L2, H1, Tailgate

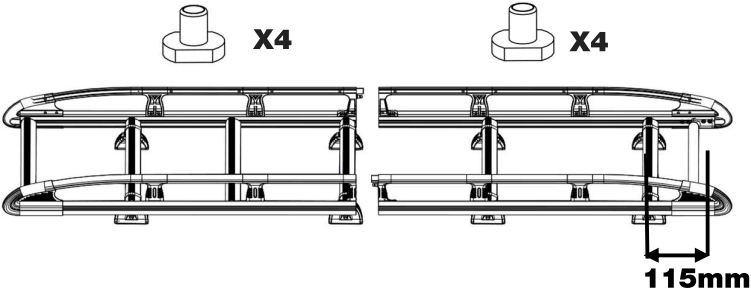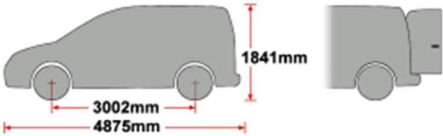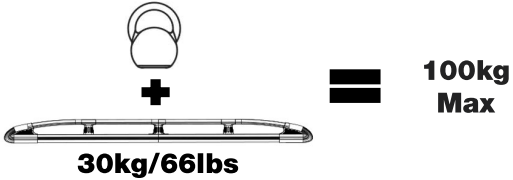


14.

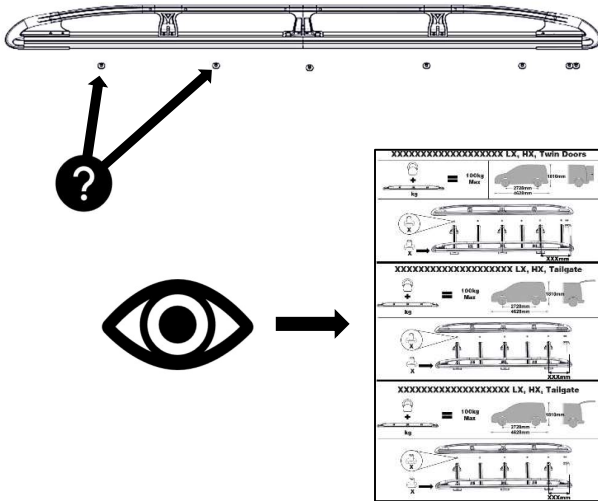


15.

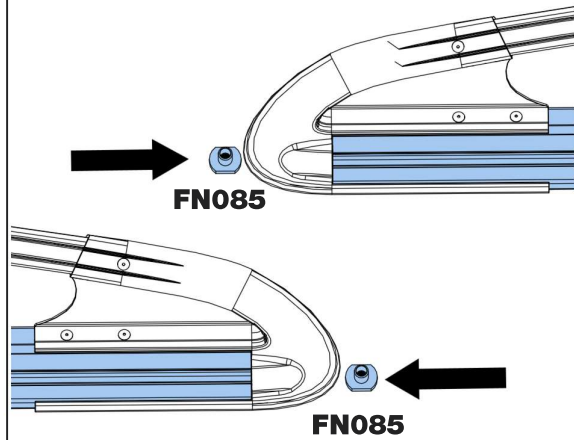


16.

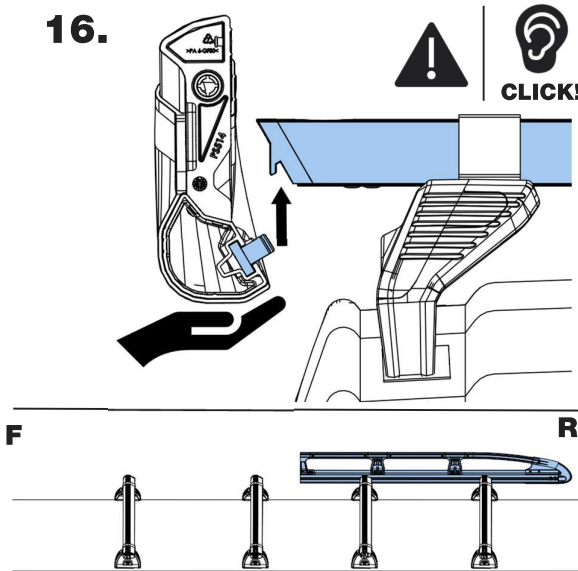


17.






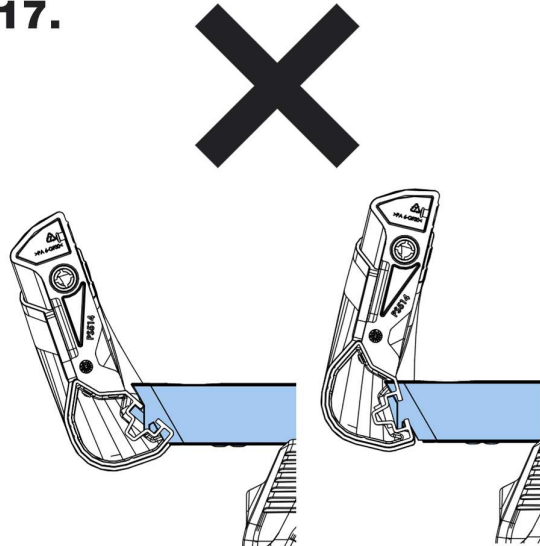


18.

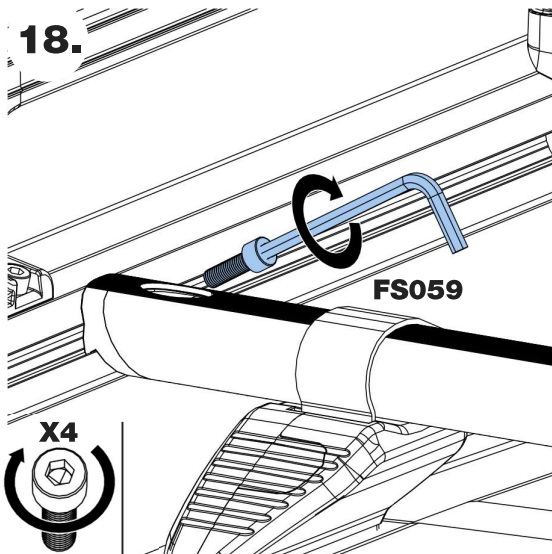


19.

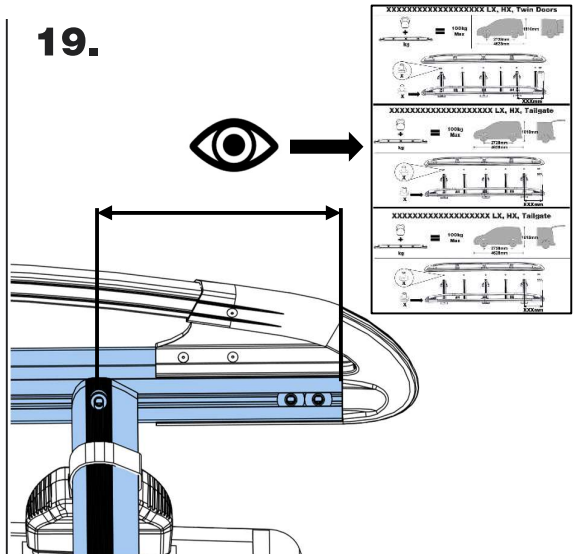


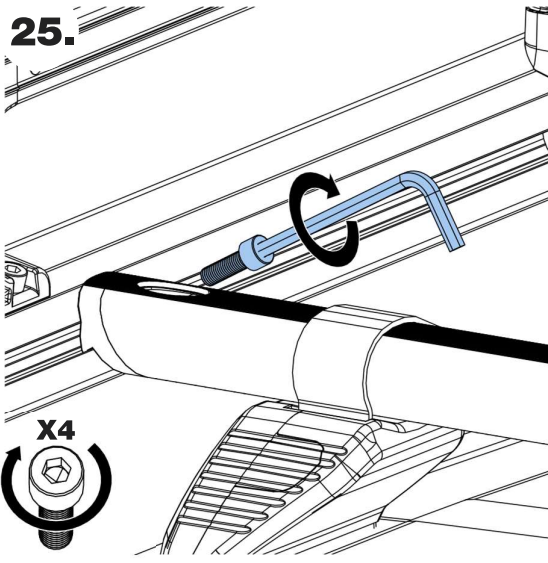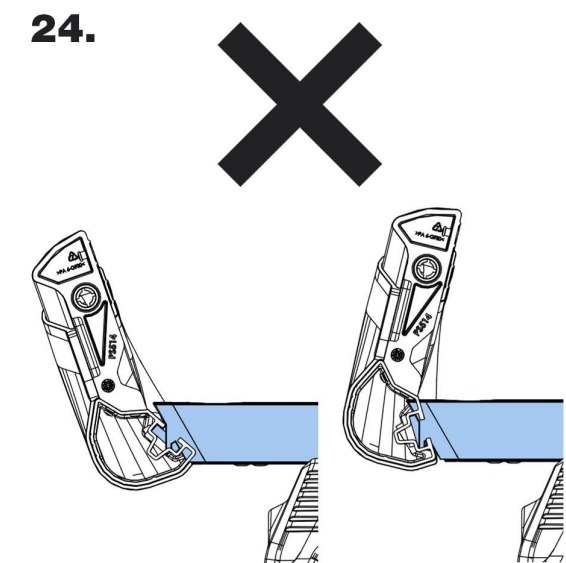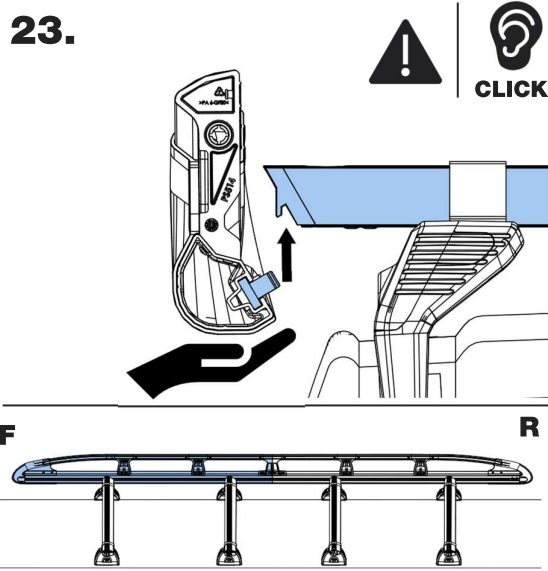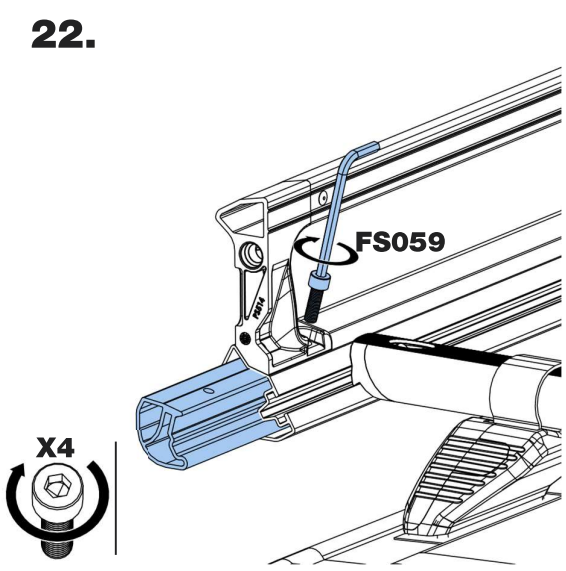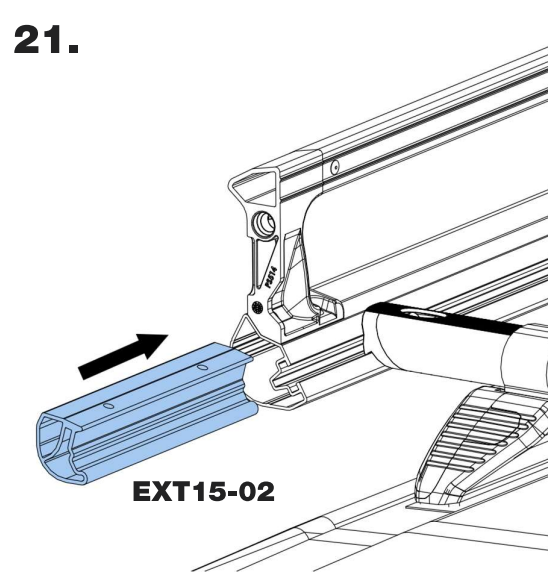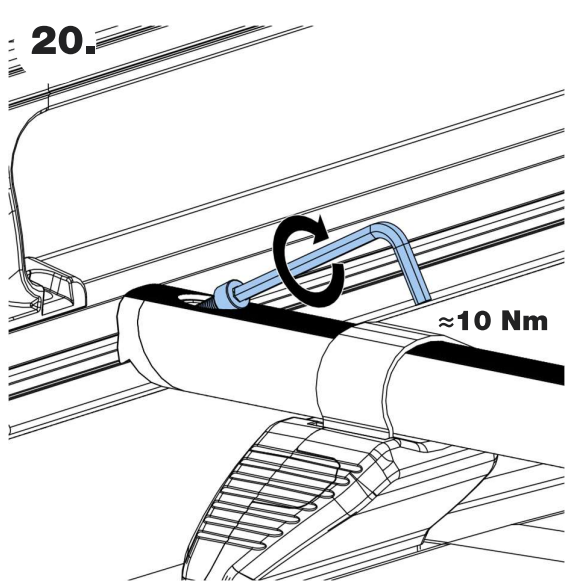


26.

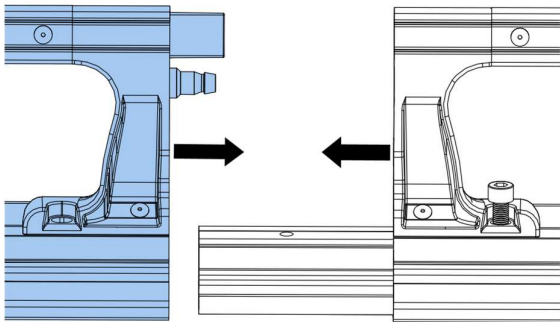


27.

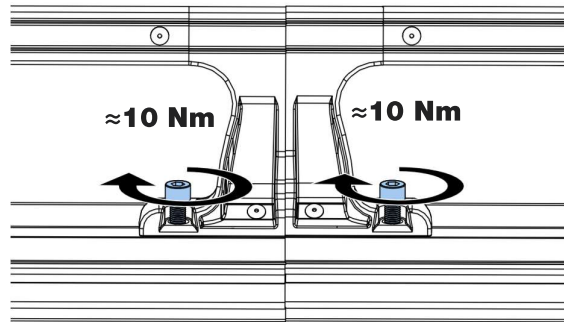



28.

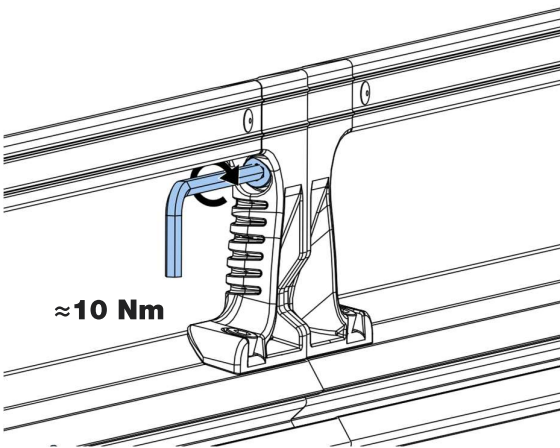


29.








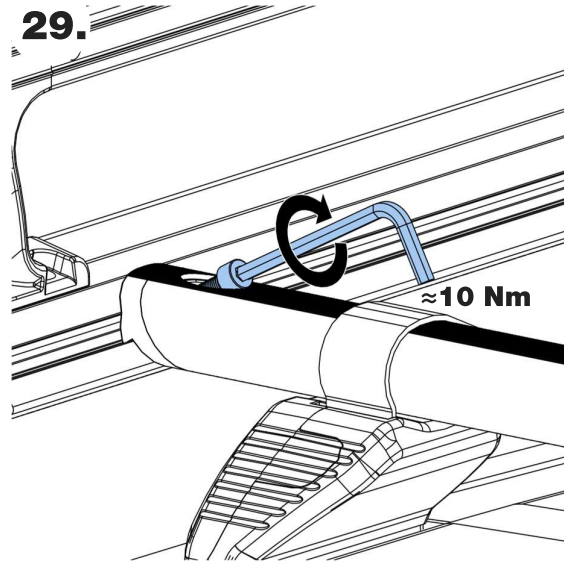


30.

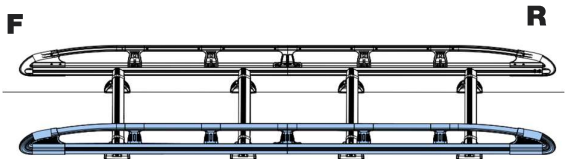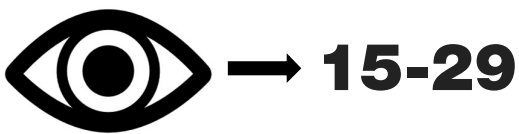


31.

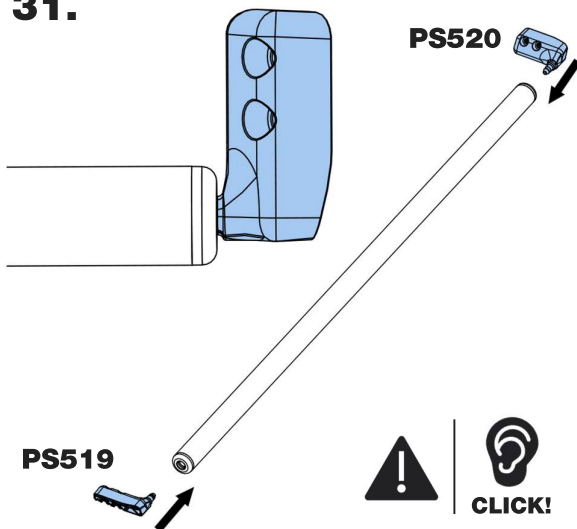


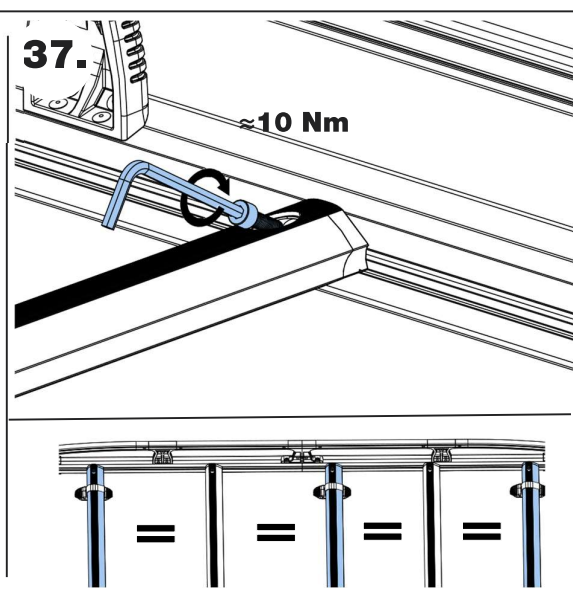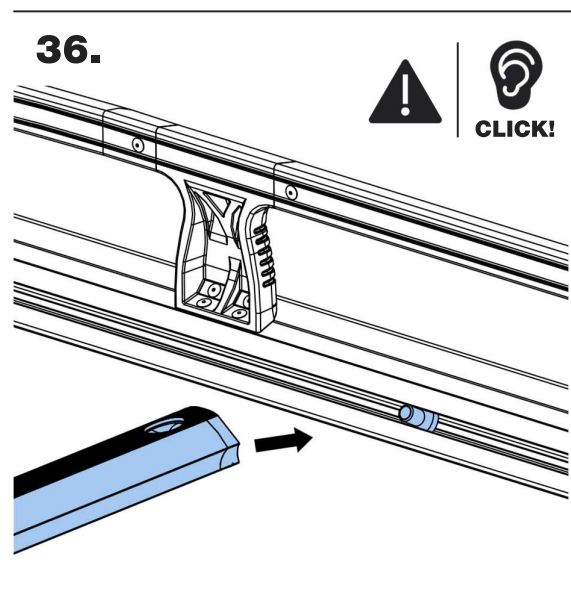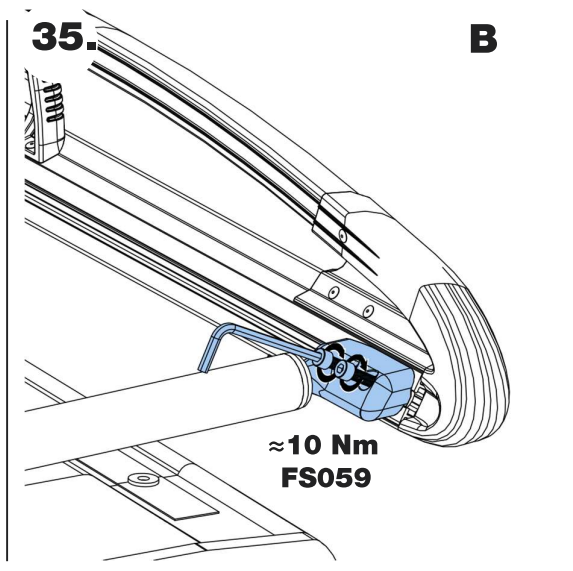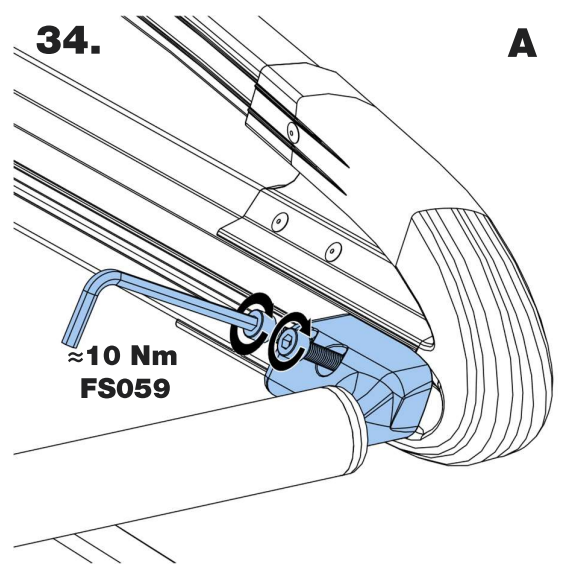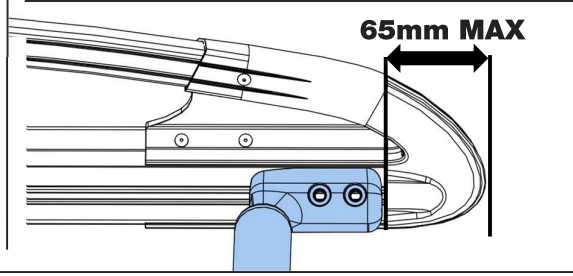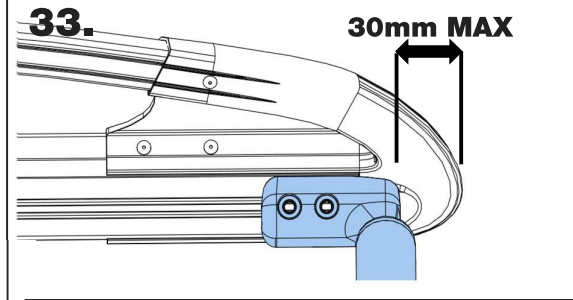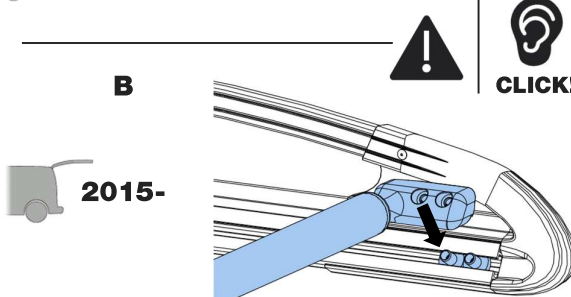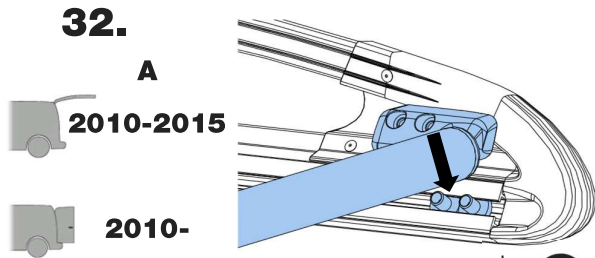

38.

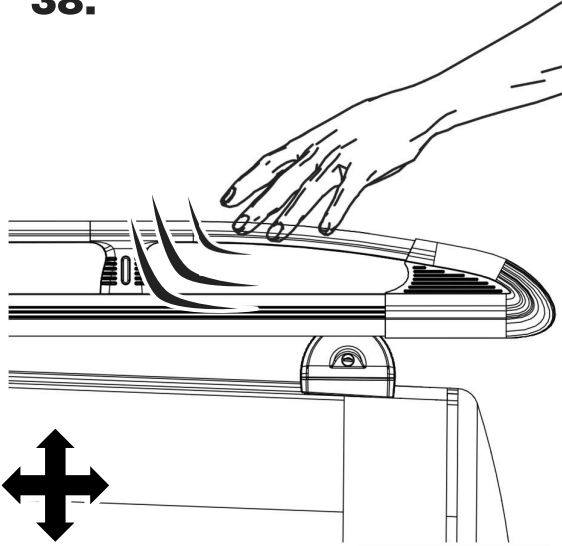

39.

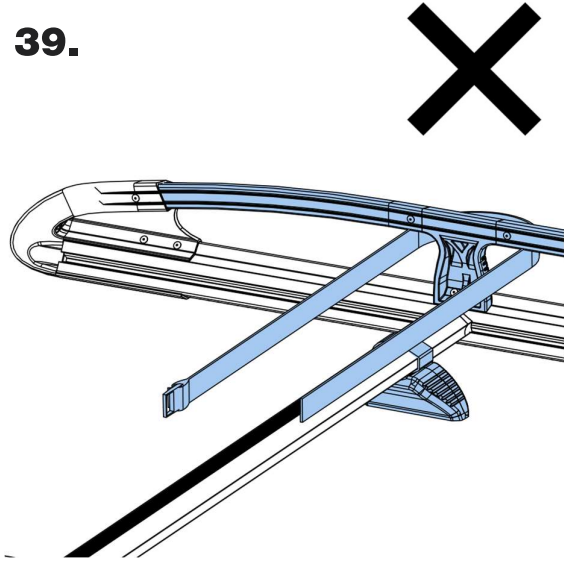

40.

