






WD3PR/FL KammBar

Instructions

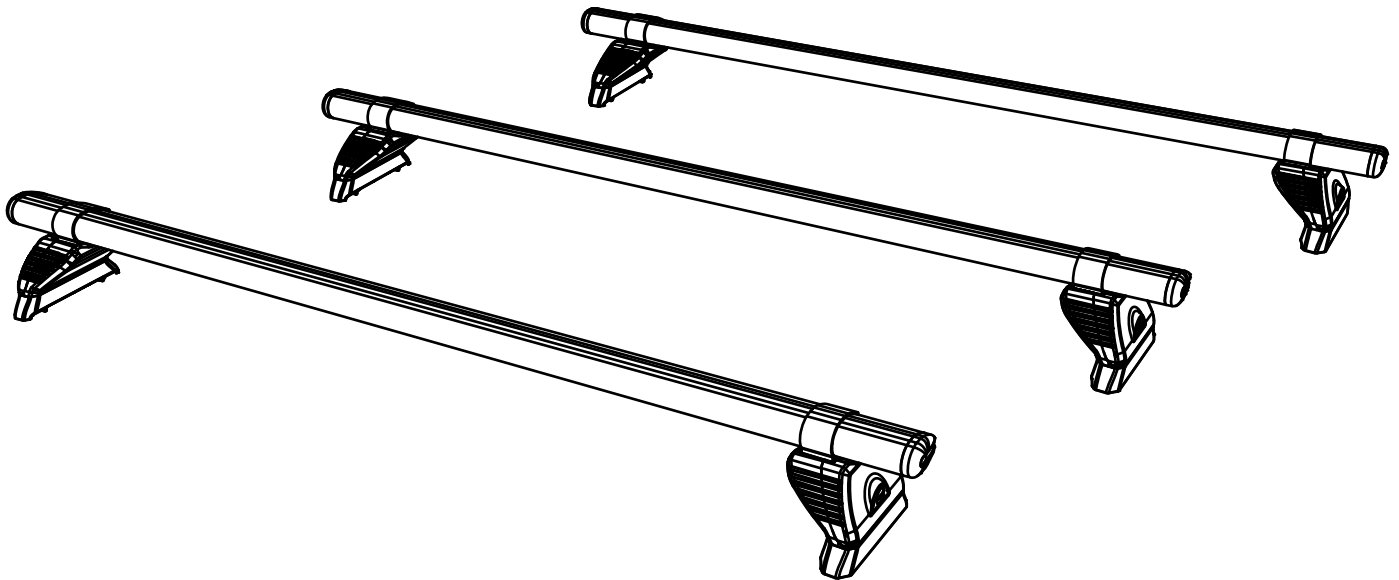


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

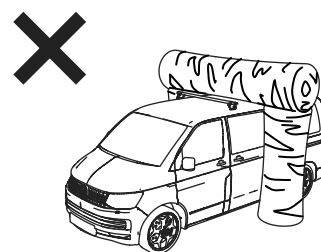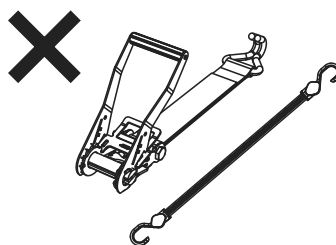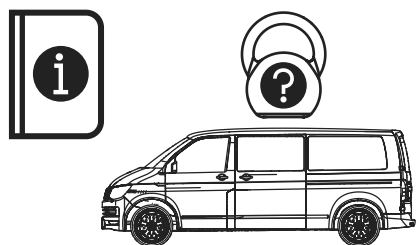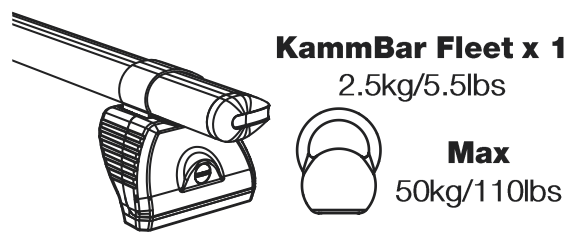


KammBar Pro

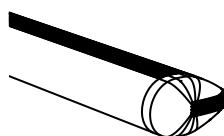


SA419 x 3 ☐



SA070 x 4 ☐

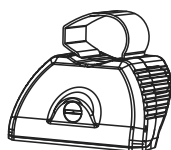


SA397 x 3 ☐

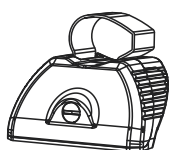


SA398 x 3 ☐


KammBar Fleet

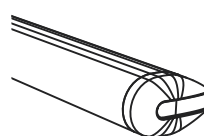


SA393 x 3 ☐



C04 x 3
optional upgrade

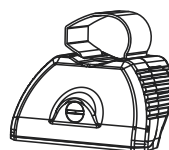


SA397 x 3 ☐

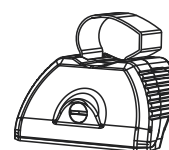


SA398 x 3 ☐


Fitting Kit




PS176 x 4 ☐




PS178 x 2 ☐




PS030 x 4 ☐



PS031 x 4 ☐

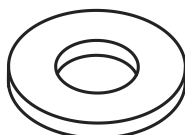


FW001 (M6) x 10 ☐

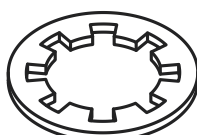


FW008 (M6) x 10 ☐




FT01 x 1 ☐




FB007
(M6 x 45) x 4 ☐



FS042
(M6 x 40) x 4 ☐




FS039
(M6 x 30) x 2 ☐




FS038
(M6 x 25) x 2 ☐


1.

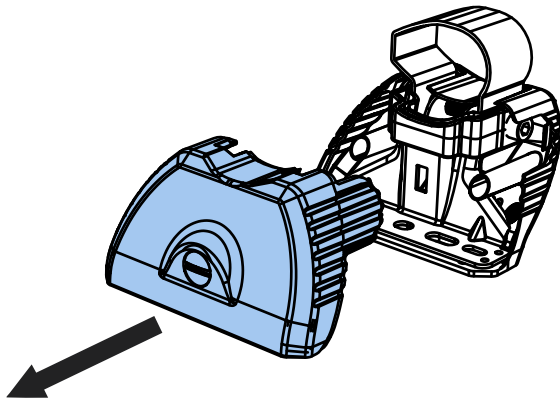


2.

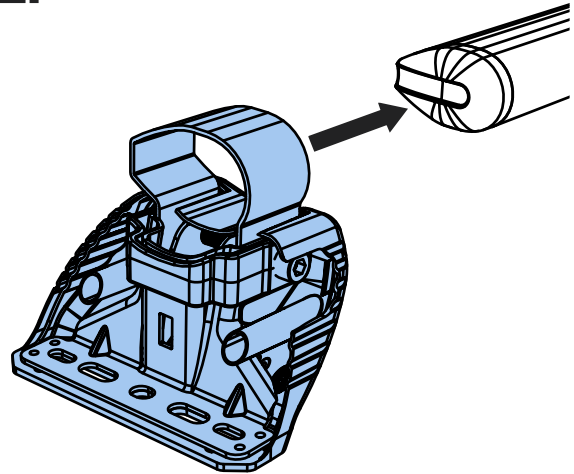


3.






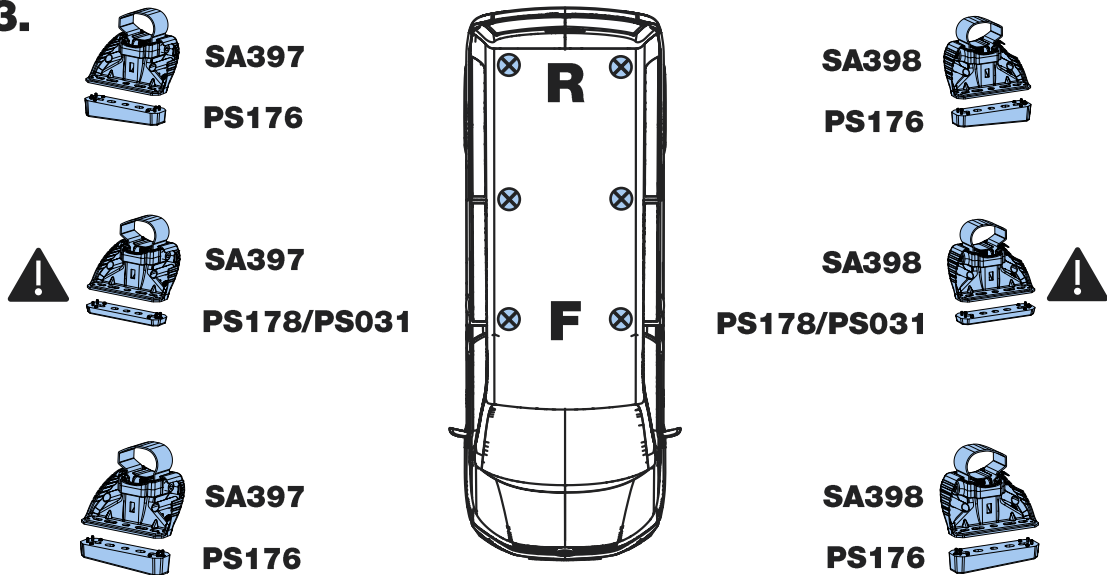


4.

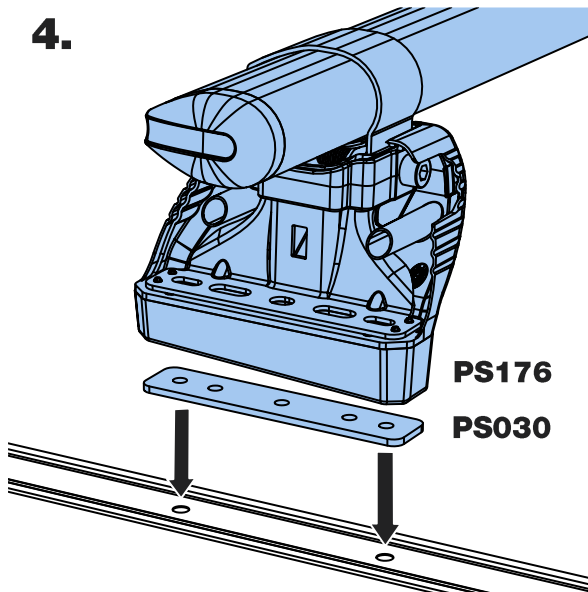


5.

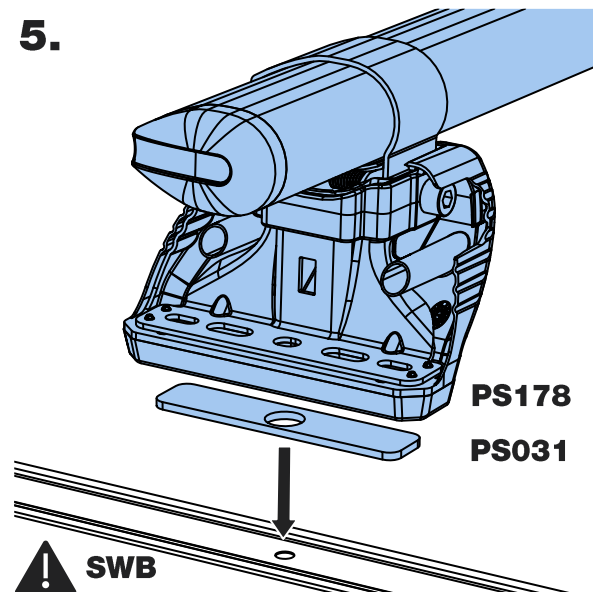

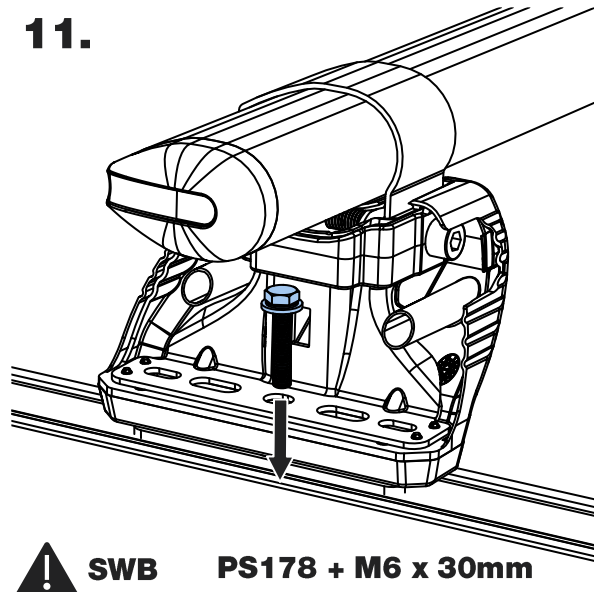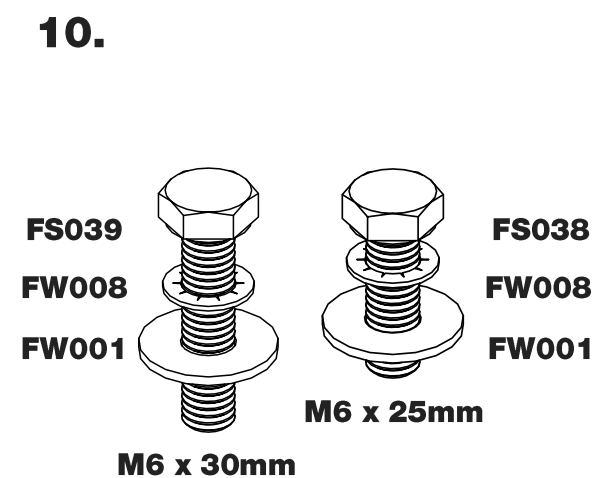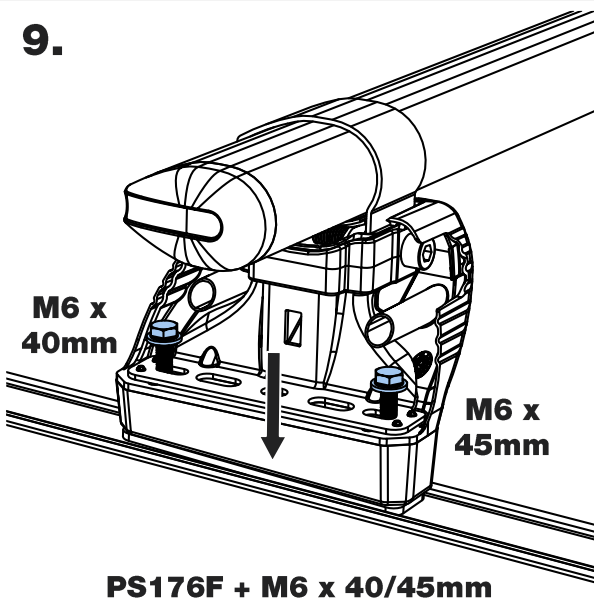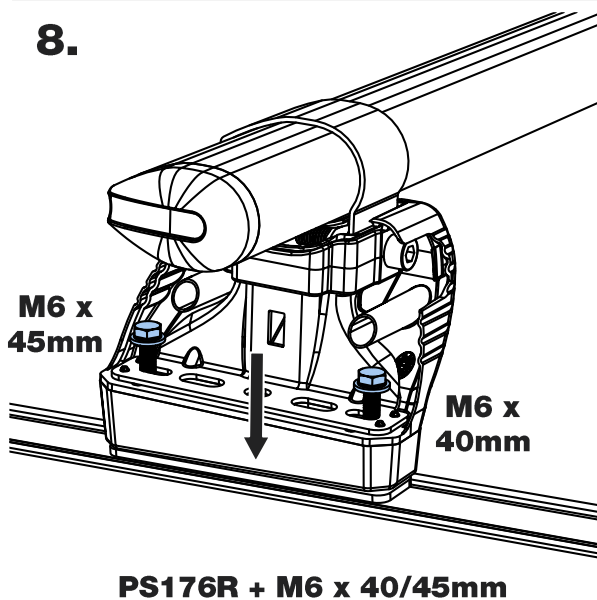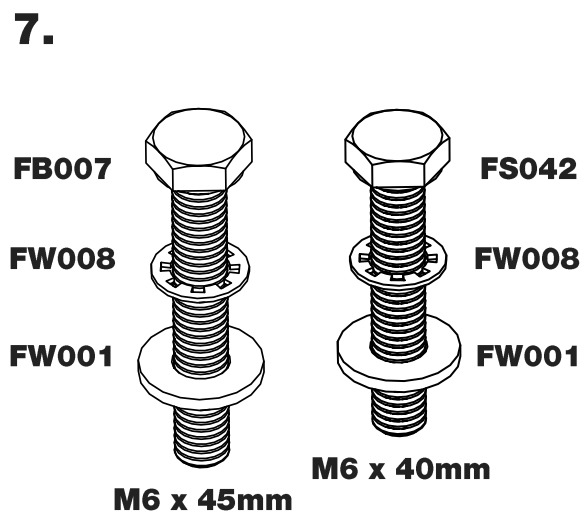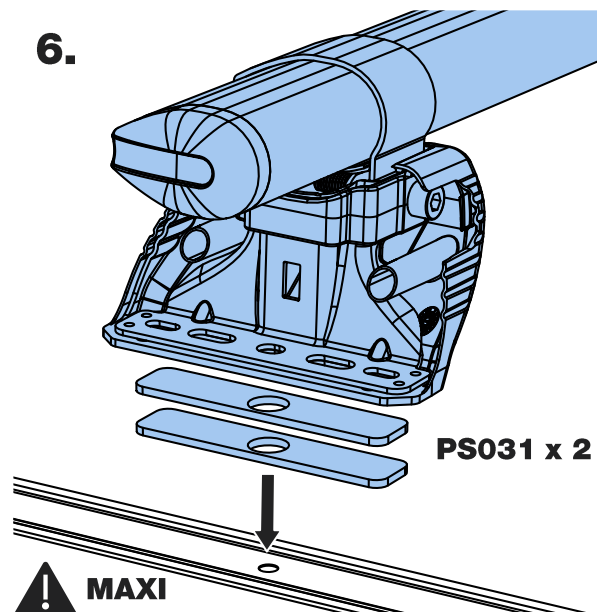


12.

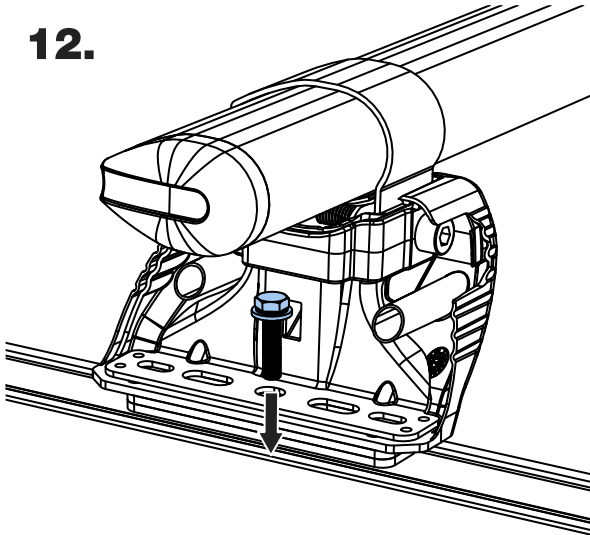


! MAXI PS031 x 2 + M6 x 25mm


13.

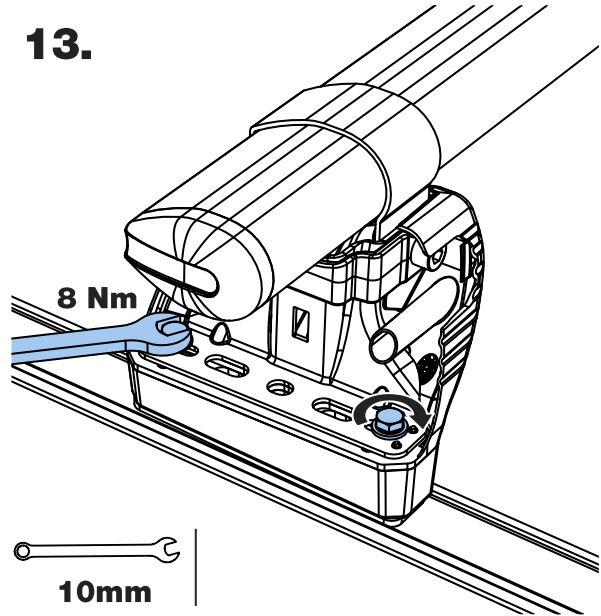


14.

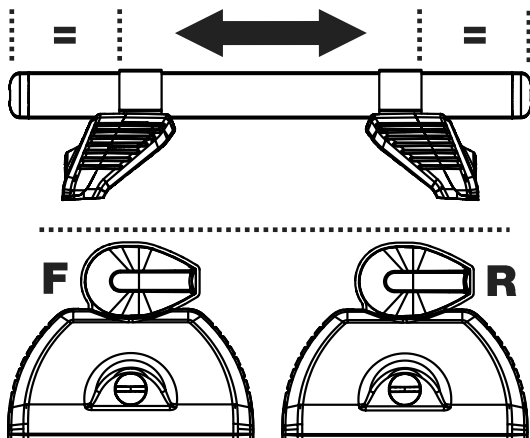


15.

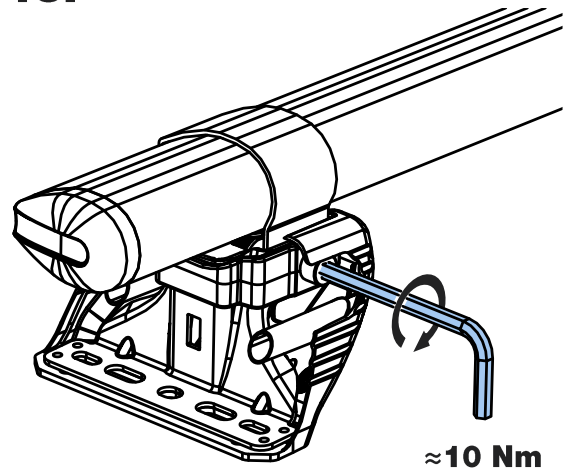

16.

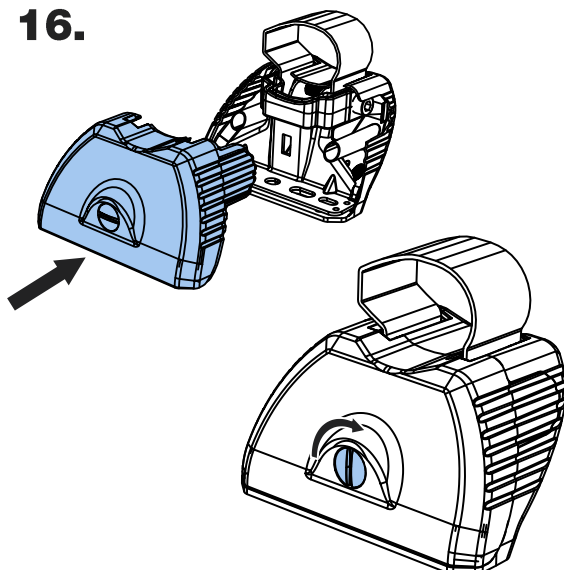


17.

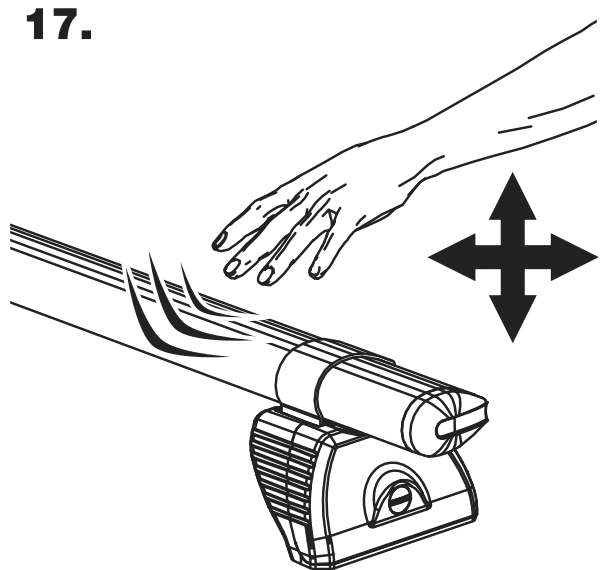

GB3PR/FL





KammBar

Instructions


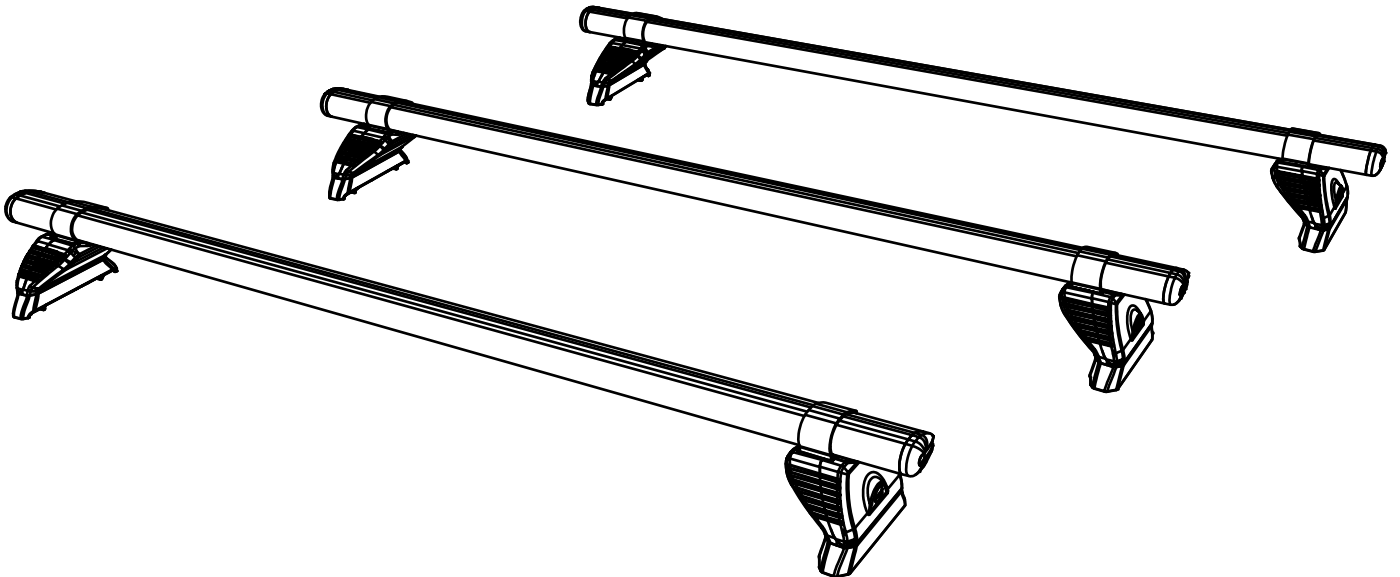


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

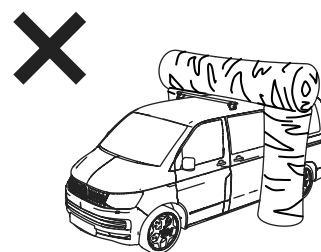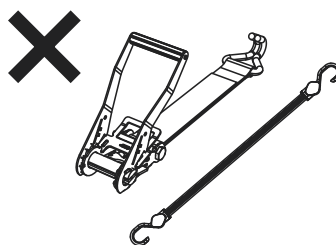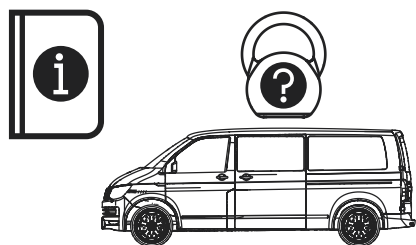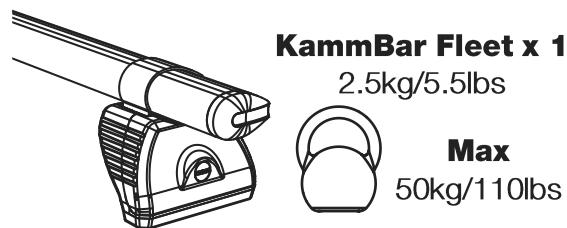




KammBar Pro

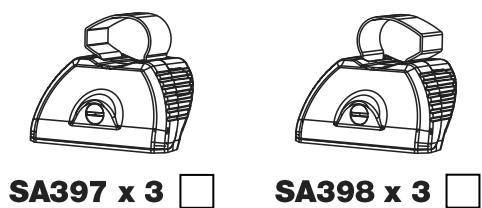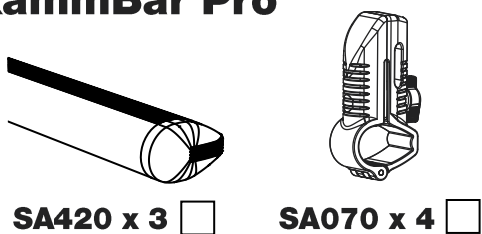


KammBar Fleet

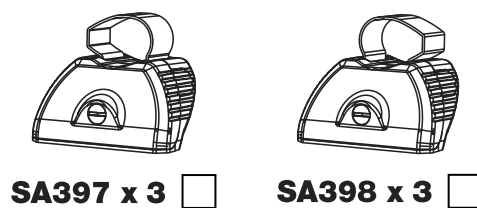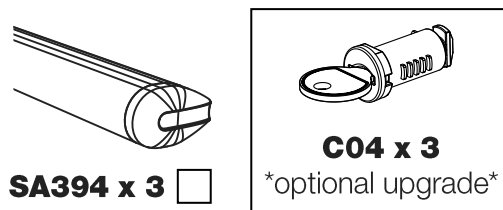


Fitting Kit

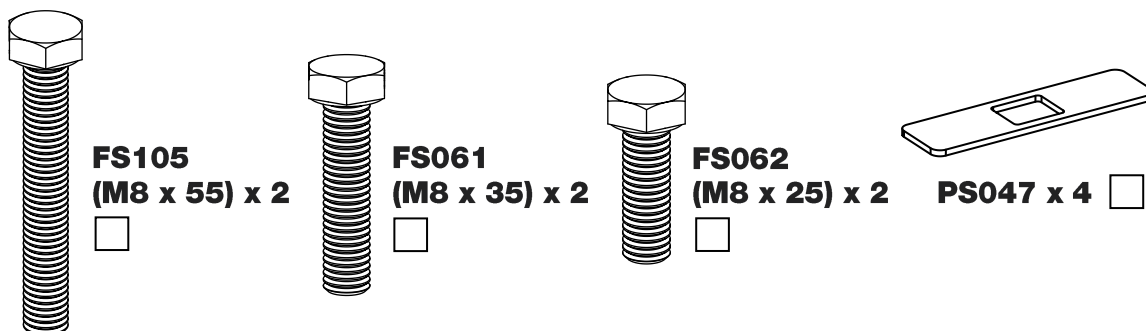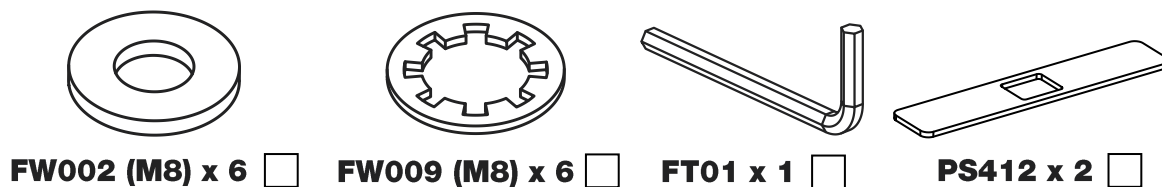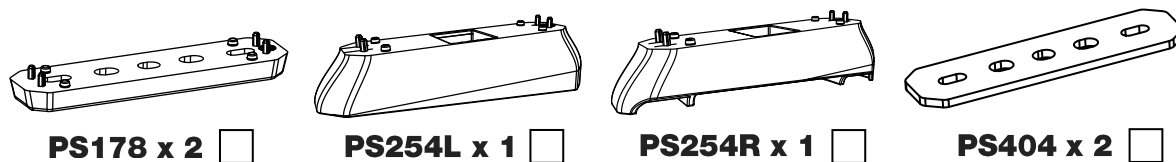

1.

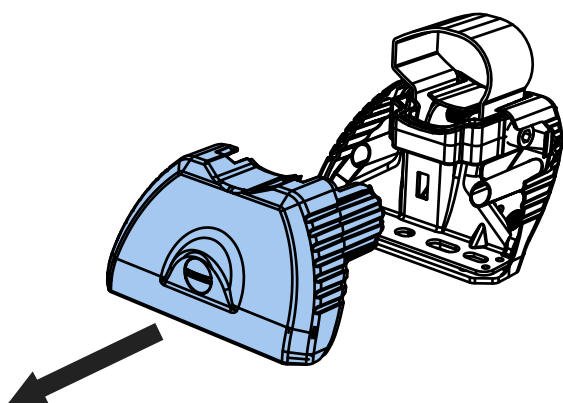

2.

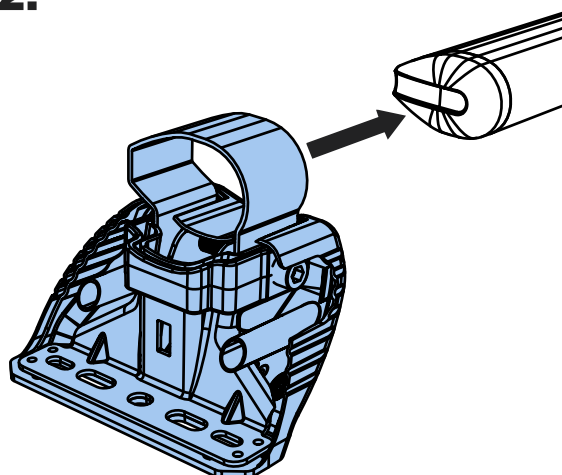

3.




SA397
PS178




SA397



SA397
PS254L

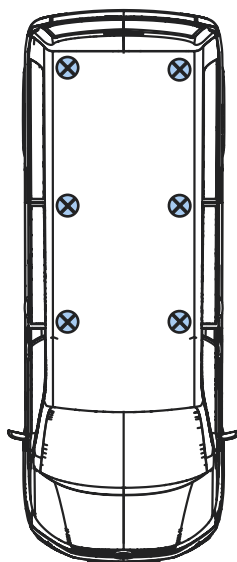


SA398
PS178




SA398




SA398
PS254R









4.

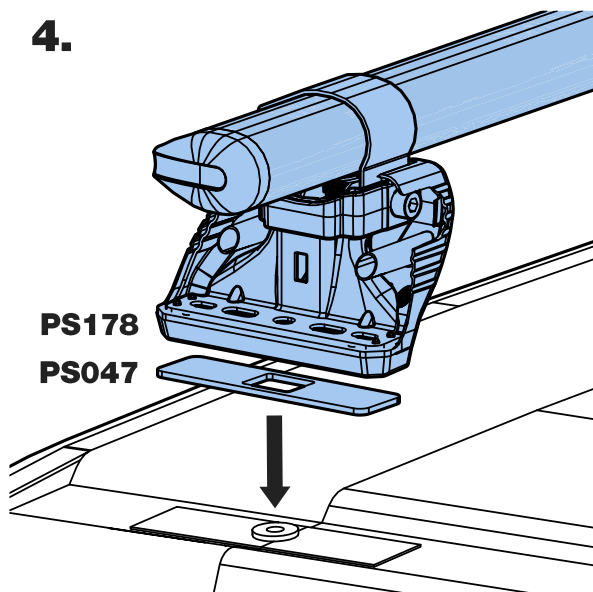


5.

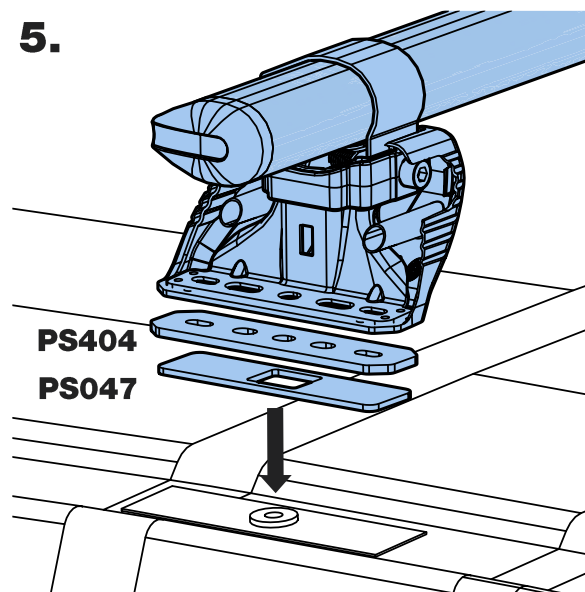


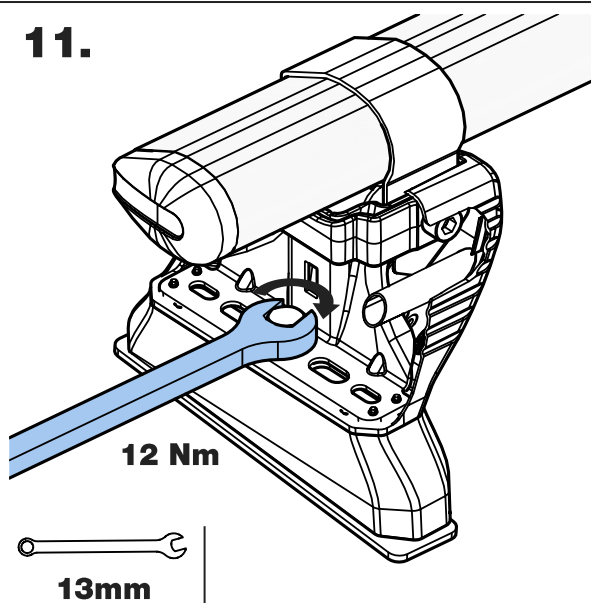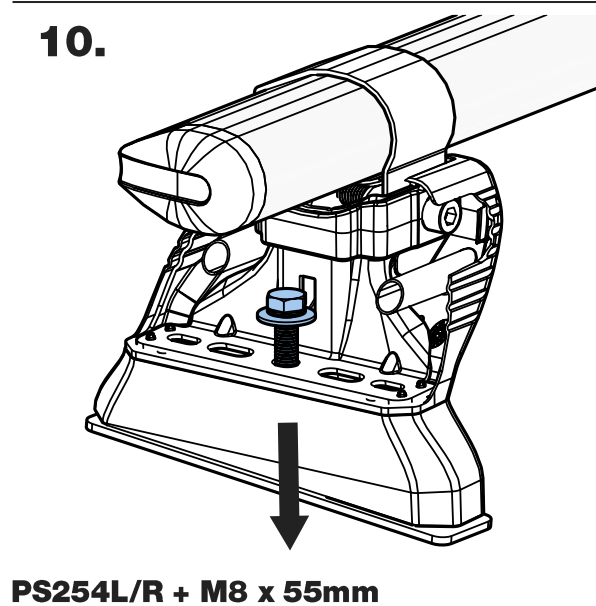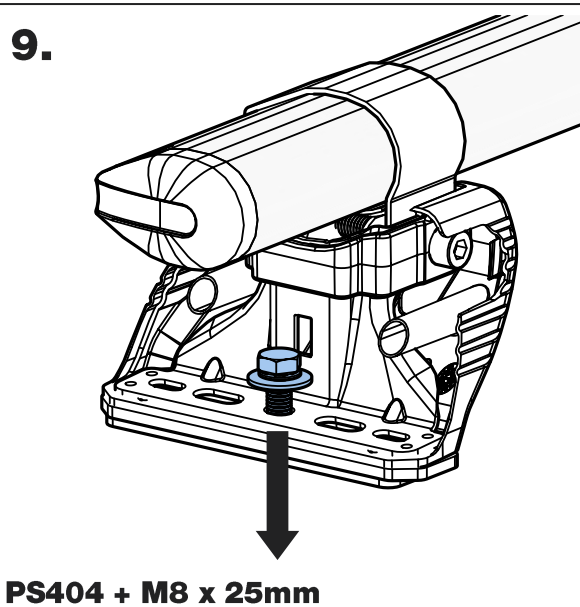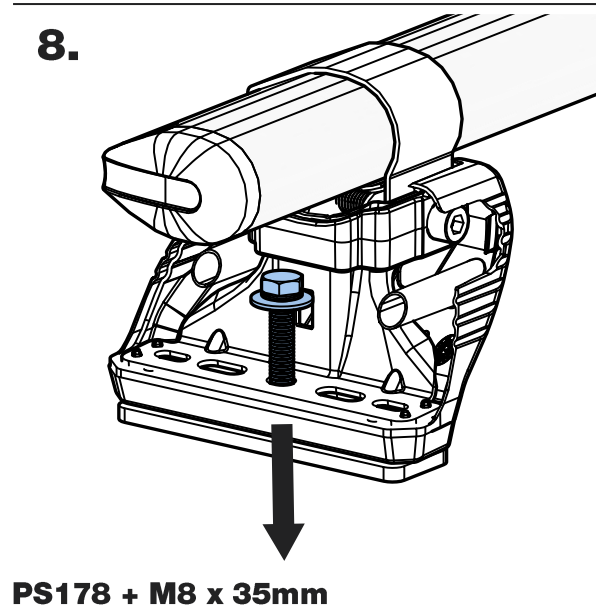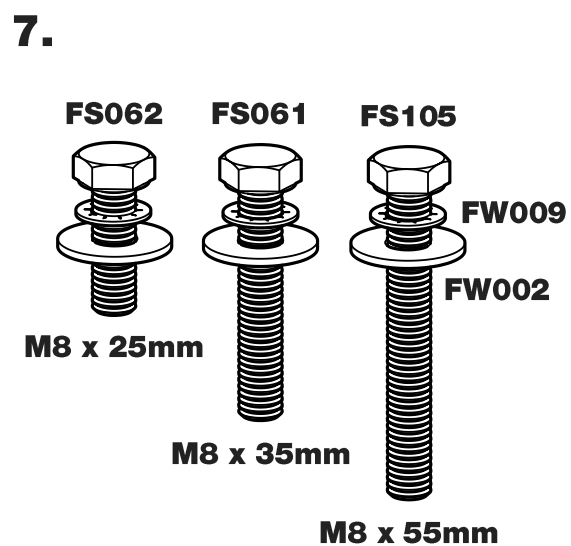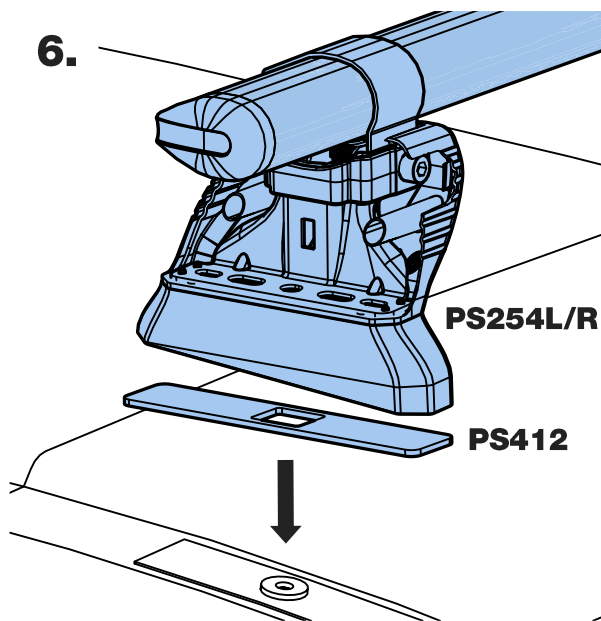


12.

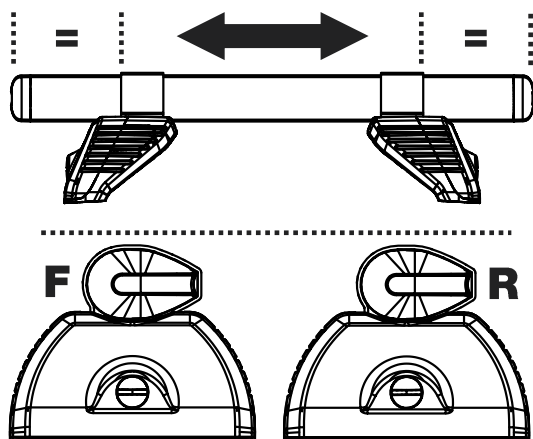

13.

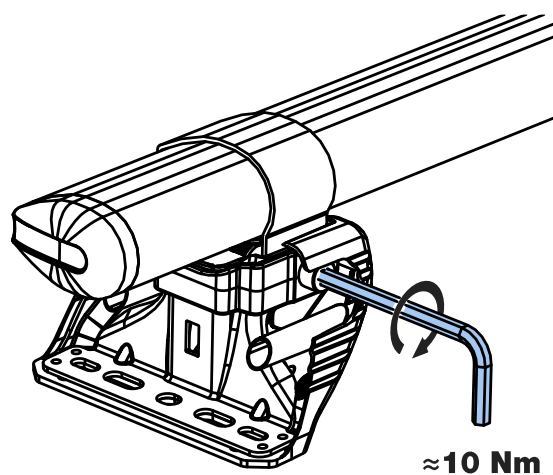

14.

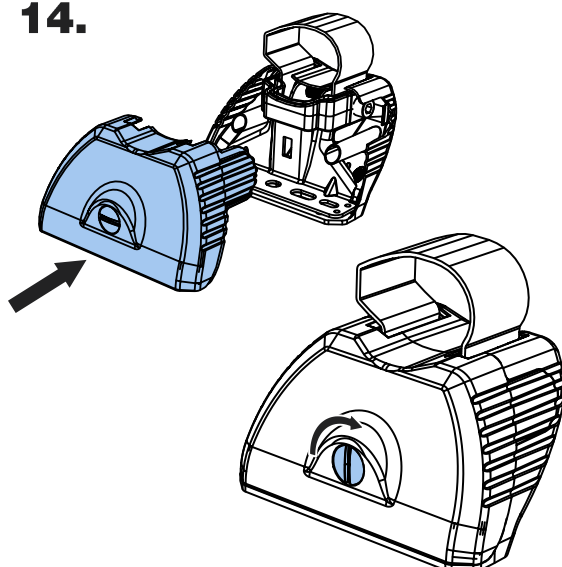

15.

