

# MOUNTING INSTRUCTIONS

# MONTAGEHANDLEIDING

# INSTRUCTION DE MONTAGE

# MONTAGEANLEITUNG

# ISTRUZIONI DI MONTAGGIO

# MANUAL DE MONTAJE

---

Iveco Daily

H1/H2 R

---








---

Iveco Daily

H1/H2 R

---

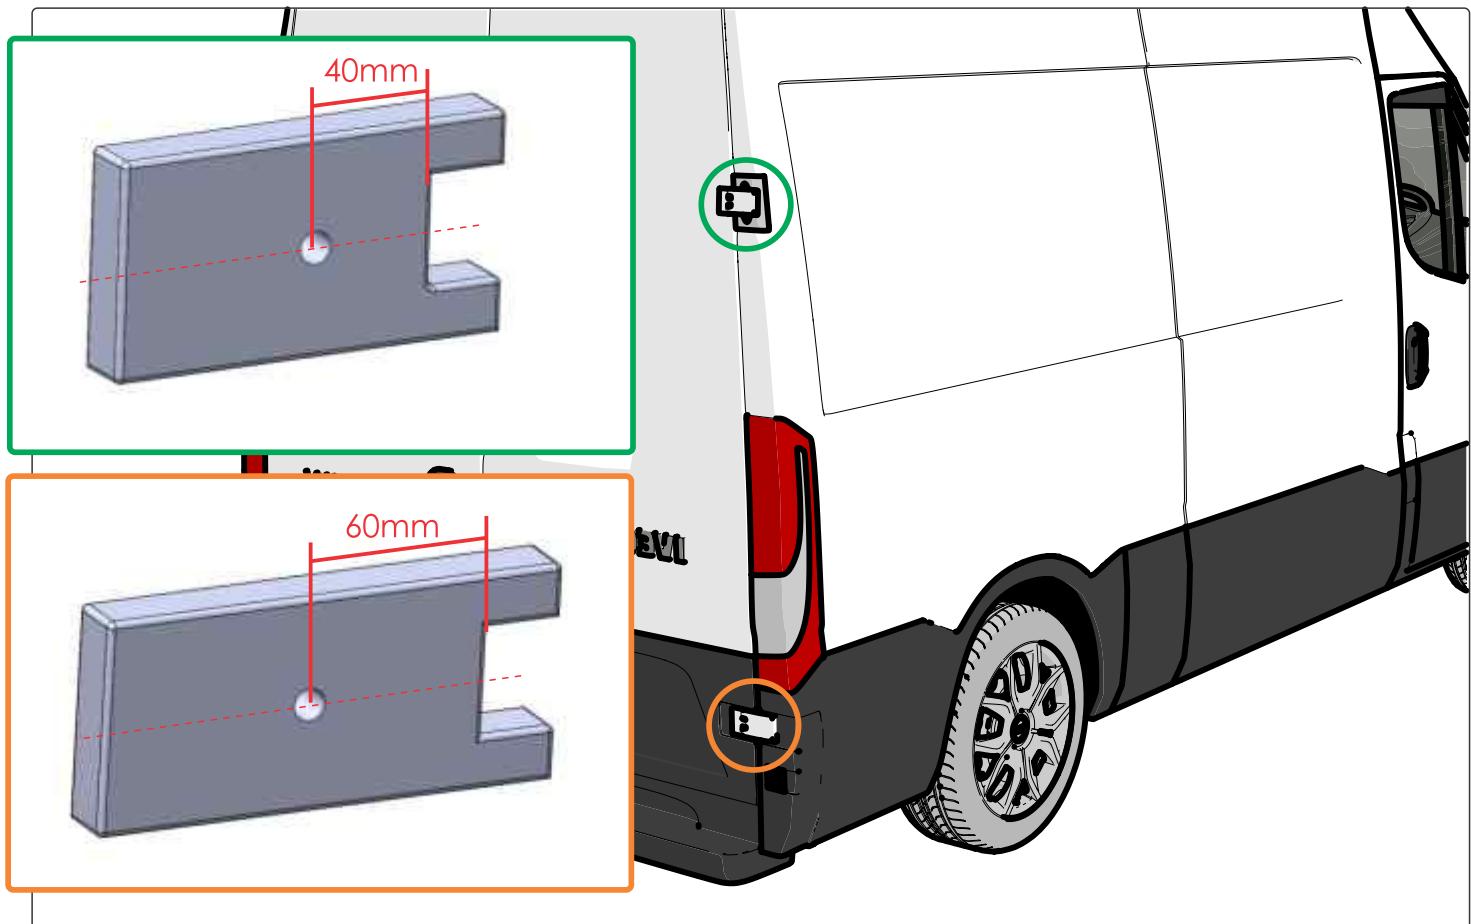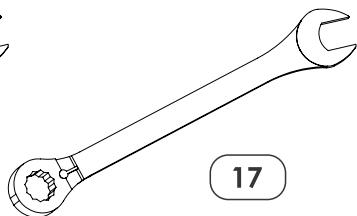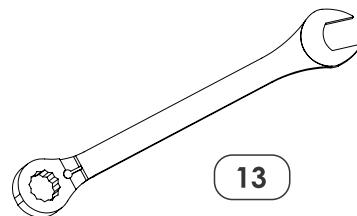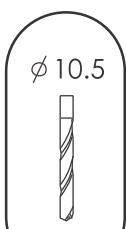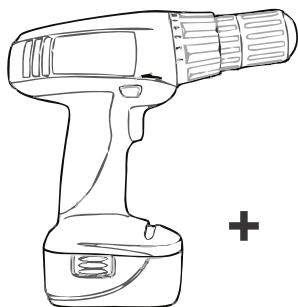


---

Iveco Daily

H1/H2 R

---

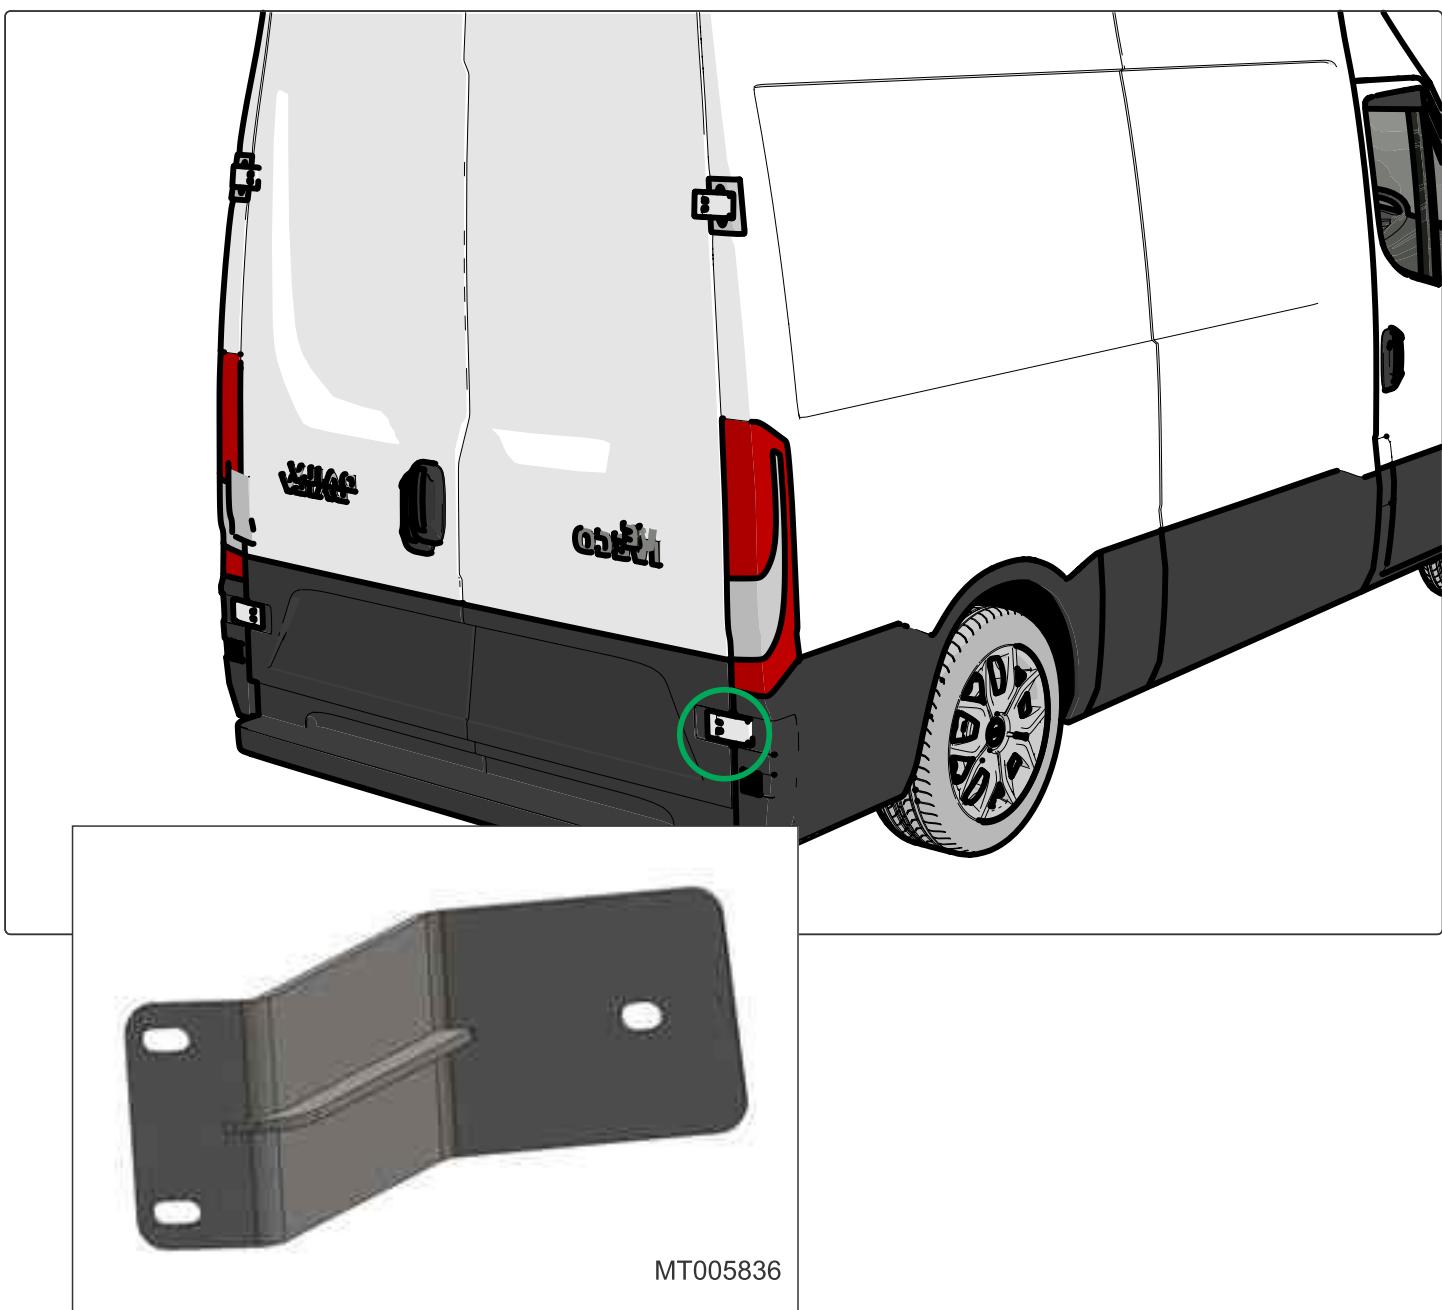

Place bracket parallel to hinge and slide to the right as far as possible

Plaats beugel evenwijdig met scharnier en schuif zo ver mogelijk naar rechts

Placer le support parallèlement à la charnière et le faire glisser vers la droite autant que possible

Platzieren Sie die Halterung parallel zum Scharnier und schieben Sie sie so weit wie möglich nach rechts

Posizionare la staffa parallelamente alla cerniera e far scorrere il più a destra possibile

Coloque el soporte paralelo a la bisagra y deslícelo hacia la derecha tanto como sea posible

---

Iveco Daily

H1/H2 R

---



Place bracket parallel to hinge and slide to the left as far as possible


Plaats beugel evenwijdig met scharnier en schuif zo ver mogelijk naar links

Placer le support parallèlement à la charnière et le faire glisser vers la gauche autant que possible


Platzieren Sie die Halterung parallel zum Scharnier und schieben Sie sie so weit wie möglich nach links

Posizionare la staffa parallelamente alla cerniera e far scorrere il più a sinistra possibile

Coloque el soporte paralelo a la bisagra y deslícelo hacia la izquierda tanto como sea posible




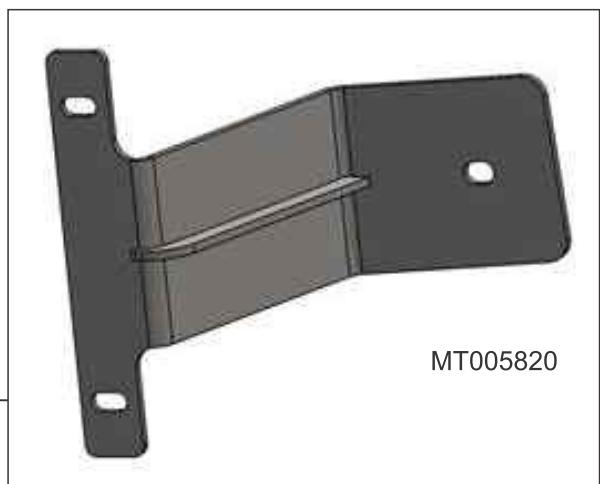


MT005820

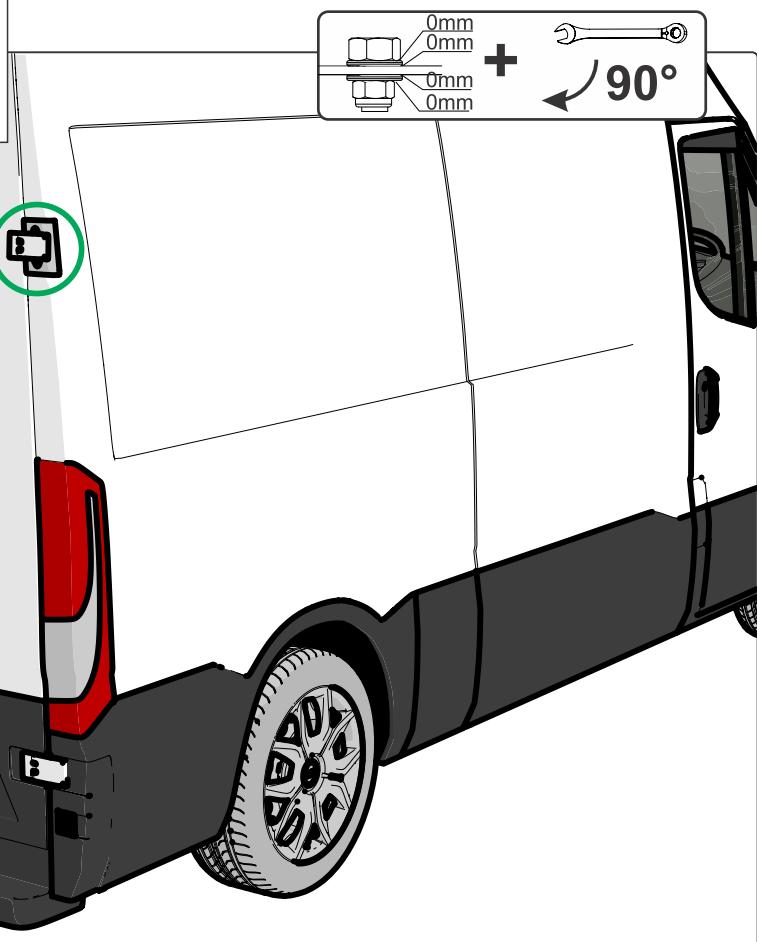


## Iveco Daily

H1/H2 R

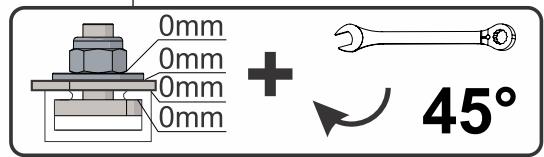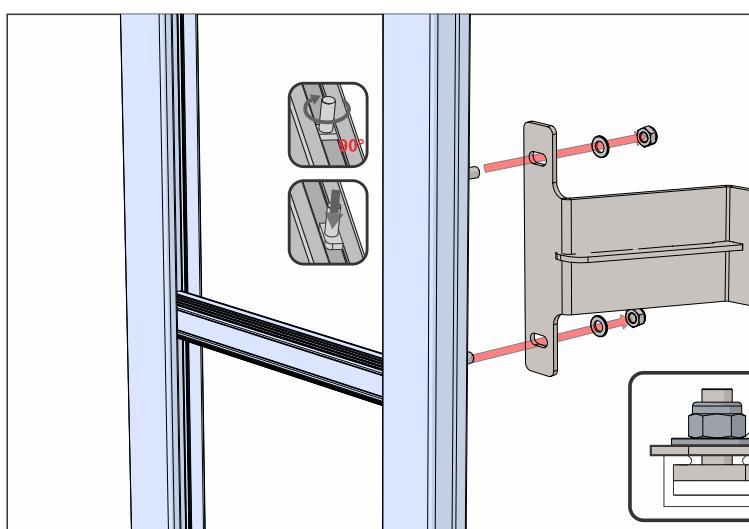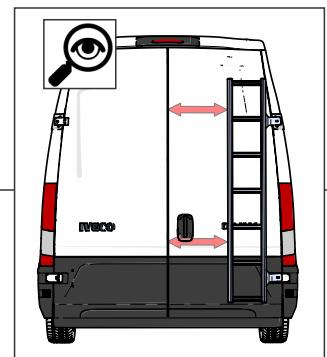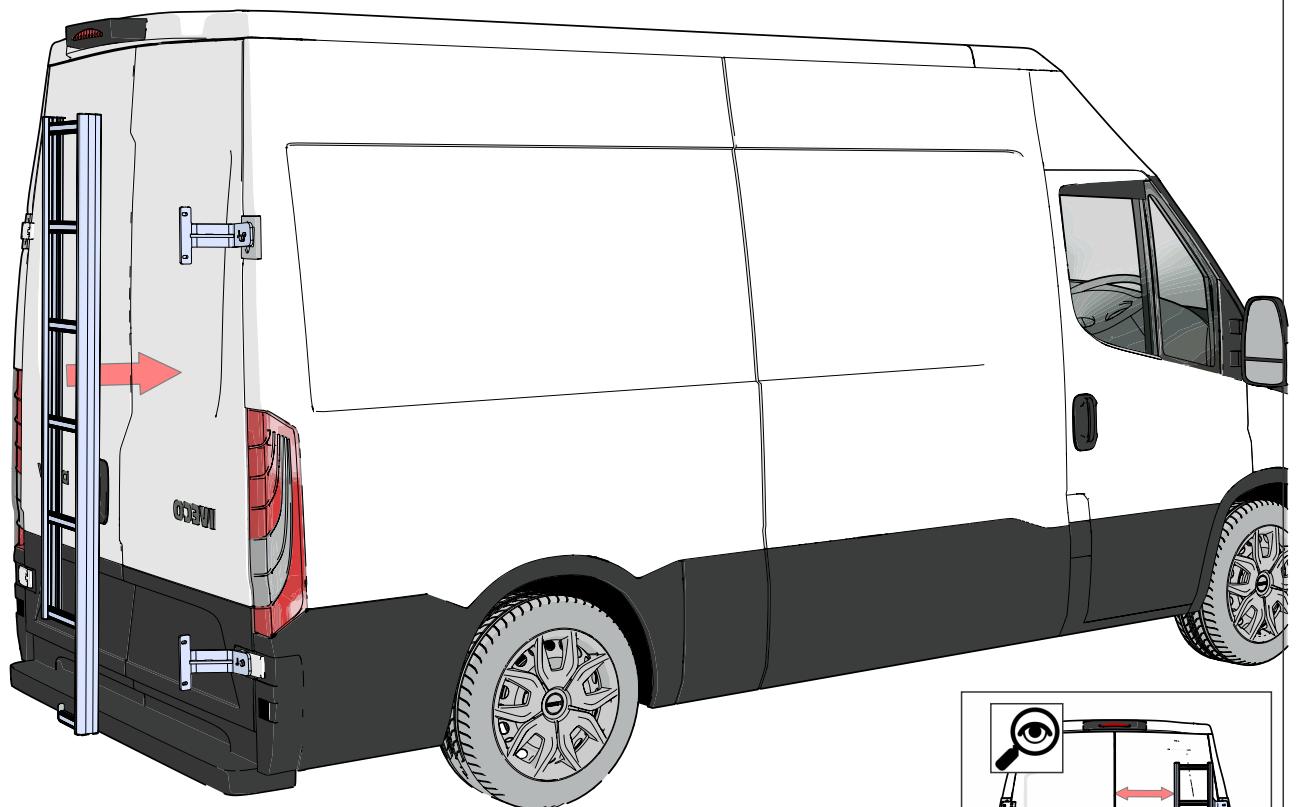

# Iveco Daily

H1/H2 R

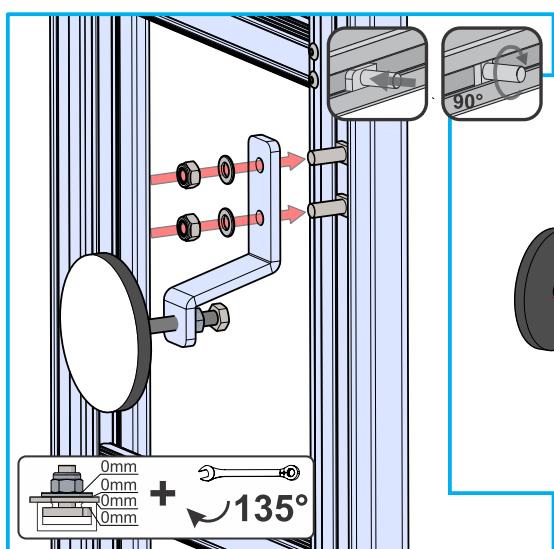

Place additional supplied sticker on car between magnet and bodywork

Plaats extra meegeleverde sticker op wagen tussen magneet en carrosserie

Placez l'autocollant supplémentaire sur la voiture entre l'aimant et la carrosserie

Bringen Sie den mitgelieferten Aufkleber zwischen Magnet und Karosserie am Fahrzeug an.

Posizionare l'adesivo aggiuntivo in dotazione sull'auto tra il magnete e la carrozzeria.

Coloque el adhesivo adicional suministrado en el coche entre el imán y la carrocería.

